


Trainings ▾

Remove

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

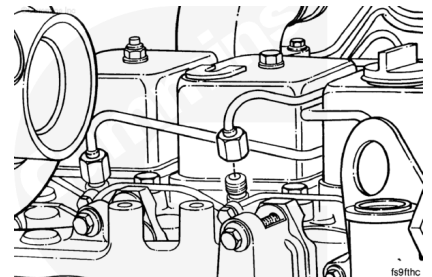


Distributor-Type Pumps

Note : Thoroughly clean the area around the fuel lines before removal.


Disconnect the high-pressure fuel lines from the injectors, and complete the following steps:

Remove the fuel line clamp capscrews from the intake cover.

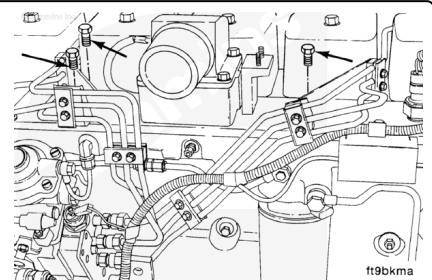


Remove the fuel lines from the fuel injection pump.

Note : Use two wrenches to prevent the delivery valve holder from turning.

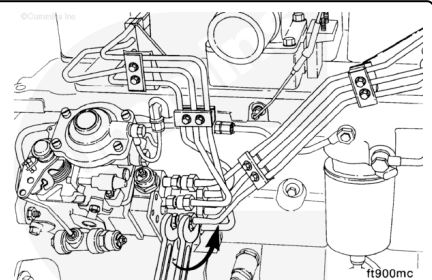


In-Line Pump

Disconnect the fuel line(s) from the injectors.

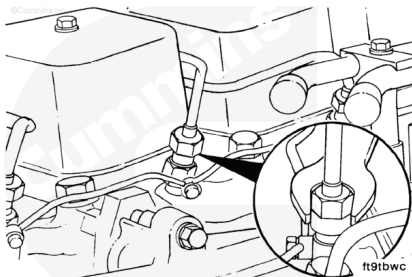

Remove the fuel line clamp cap screws from the intake cover.

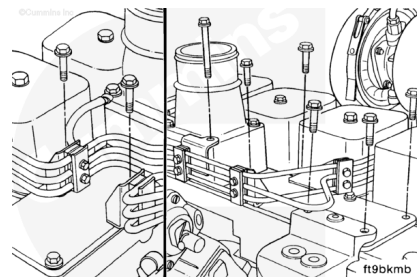

Disconnect the fuel line(s) from the fuel injection pump.

