

Trainings ▾

General Information

Due to the number of dipstick tube options, the following procedure has been generalized to cover common dipstick tube procedures. The illustrations may **not** match the engine being serviced.

©Cummins Inc.

Install

Apply a thin bead of thread sealant around the bottom of the knurled end of the tube.


Place knurled end of tube into the dipstick tube bore in the cylinder block.

Use the dipstick tube installer tool, Part Number 3823875, to install the dipstick tube into the cylinder block.

Lightly drive the dipstick tube until it seats against the block casting.


If equipped, install the flexible portion of the dipstick tube and secure with clamps.

Note : If a flexible tube is to be used, soak the end of the nylon tube in hot water to help ease the installation.

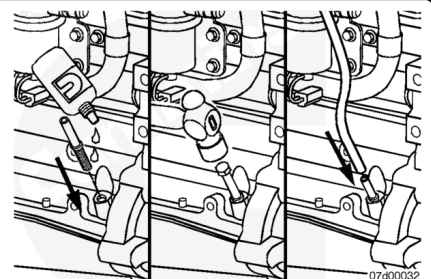

If equipped, install any dipstick tube supports and clamps.

Install dipstick into the dipstick tube.

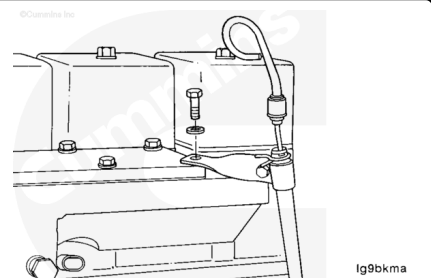

If equipped with a locking dipstick, insert the dipstick into the dipstick tube and line up the locking pins on the tube with the dipstick handle.

While pushing down on the handle, turn the dipstick handle clockwise.

If required, calibrate the dipstick. Refer to Procedure 007-009 (</qs3/pubsys2/xml/en/procedures/40/40-007-009.html>).

