

Trainings ▾

General Information


Due to the number of dipstick tube options, the following procedure has been generalized to cover common dipstick tube procedures. The illustrations may **not** match the engine being serviced.

©Cummins Inc.

Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

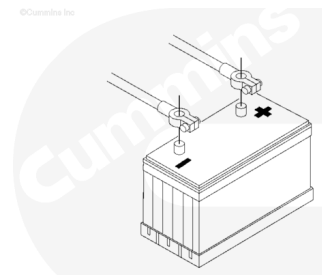

13900050

- Disconnect the batteries.


- Clean the area around the dipstick tube before removing to prevent debris from entering the oil system.

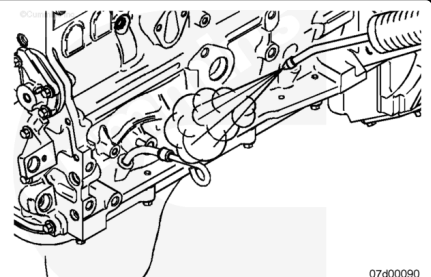

07400090

Remove


If equipped with a locking dipstick, twist the handle counter-clockwise to unlock. Pull up to remove.

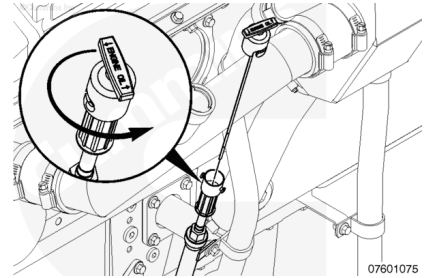

Remove dipstick from the dipstick tube.


If equipped, remove any dipstick tube supports and clamps.

If equipped, remove the flexible portion of the dipstick tube.

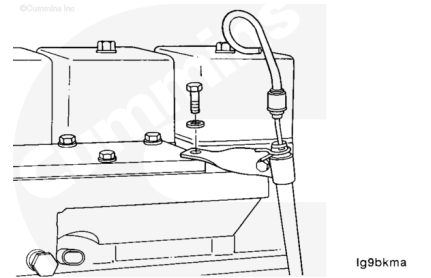

If required, remove the dipstick tube block insert:

1. Use a dent puller and a M8 x 1.25 x 21-mm self-tapping capscrew. Thread the capscrew into the dipstick tube block insert, and remove the tube
2. With the oil pan removed, drive the dipstick tube block insert out with a suitable punch.

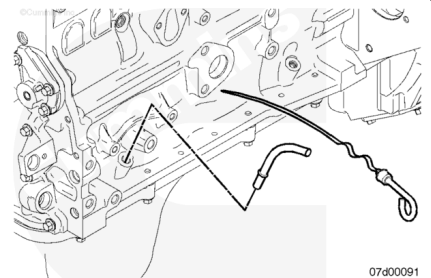

Install


Apply a thin bead of thread sealant around the bottom of the knurled end of the tube.

Place knurled end of tube into the dipstick tube bore in the cylinder block.

Use the dipstick tube installer tool, Part Number 3823875, to install the dipstick tube into the cylinder block.

Lightly drive the dipstick tube until it seats against the block casting.


If equipped, install the flexible portion of the dipstick tube and secure with clamps.

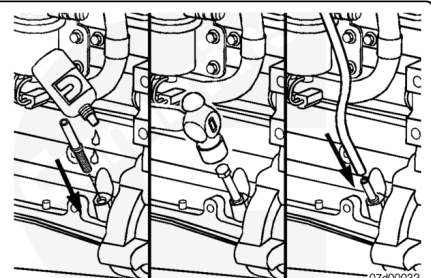

Note : If a flexible tube is to be used, soak the end of the nylon tube in hot water to help ease the installation.

If equipped, install any dipstick tube supports and clamps.


Install dipstick into the dipstick tube.

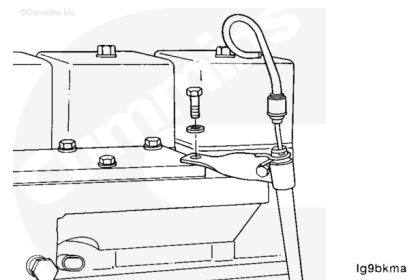

If equipped with a locking dipstick, insert the dipstick into the dipstick tube and line up the locking pins on the tube with the dipstick handle.

While pushing down on the handle, turn the dipstick handle clockwise.


If required, calibrate the dipstick. Refer to Procedure 007-009 ([/qs3/pubsys2/xml/en/procedures/40/40-007-009.html](http://qs3/pubsys2/xml/en/procedures/40/40-007-009.html)).

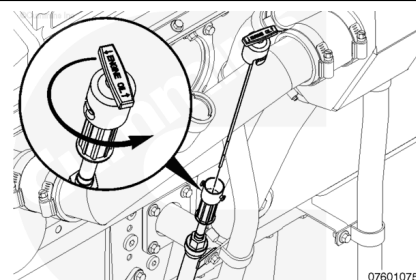

Finishing Steps


⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

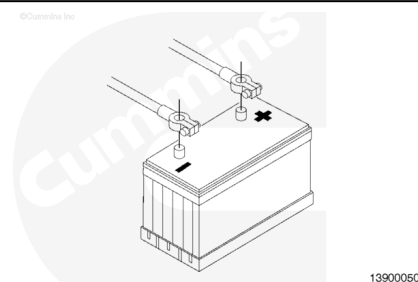

- Connect the batteries.

- Operate the engine and check for leaks.

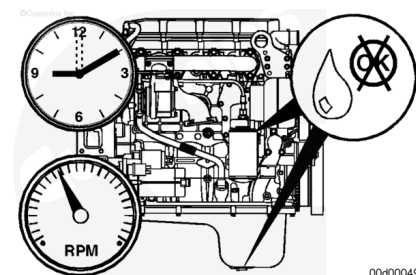

Last Modified: 05-Apr-2006
