


Trainings ▾


Preparatory Steps

Thoroughly clean the area around the pressure regulator plug to prevent debris from falling into the plunger bore when the plug is removed.

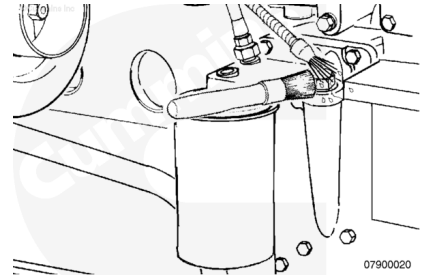


Remove

Remove the threaded plug, spring, and plunger.

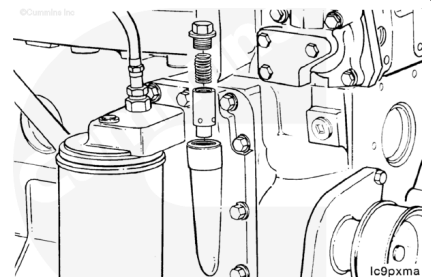


Clean and Inspect for Reuse

Clean and inspect the regulator valve.

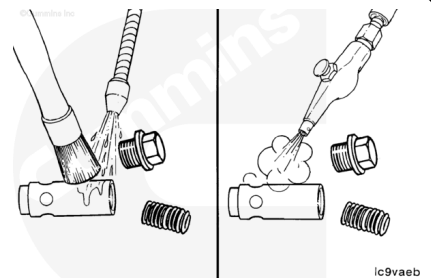

Clean and inspect the regulator valve bore.

In order to regulate the oil pressure, the valve **must** move freely in the bore.

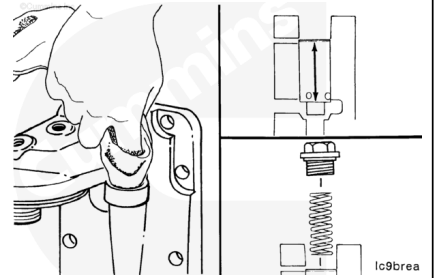

Install

Install a new sealing o-ring on the threaded plug and lubricate with clean lubricating engine oil. Install the pressure regulator assembly.

Torque Value: 80 n•m [59 ft-lb]

