


Trainings ▾

Remove


Clean debris from oil thermostat area.

Remove the lubricating oil thermostat.

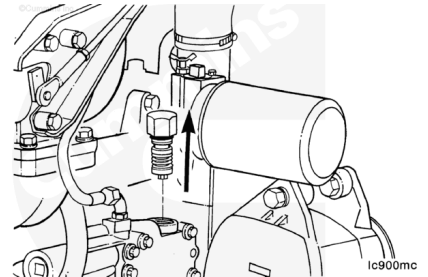

Clean


Clean and inspect the lubricating oil thermostat bore before assembly.

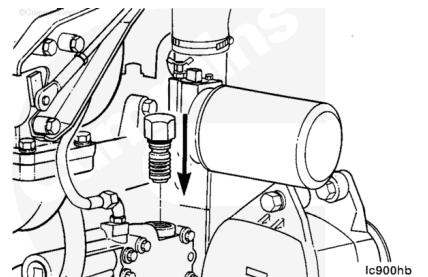

Install

Install and tighten the oil cooler bypass valve.

Torque Value: 50 n•m [37 ft-lb]

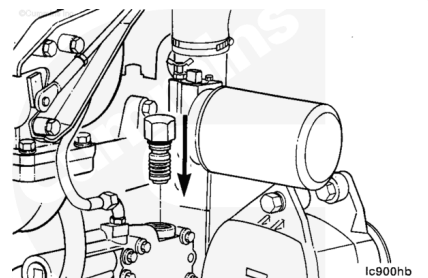

Last Modified: 15-Nov-2005
