


Trainings ▾


Install

Front Gear Train


For bolted coolant heaters, lubricate the new heater o-ring with clean lubricating engine oil.

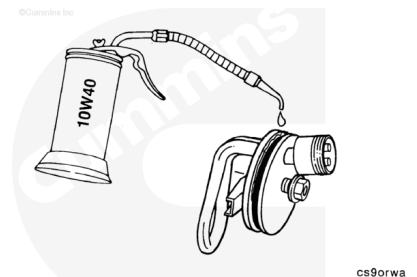


The locking channel (T-bar) should be threaded out to the end of the bolt. If so equipped, do **not** remove the retaining wire used to position the channel (T-bar).

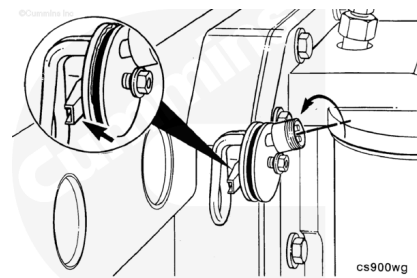


Hook the element and one leg of the channel (T-bar) into the hole as illustrated.

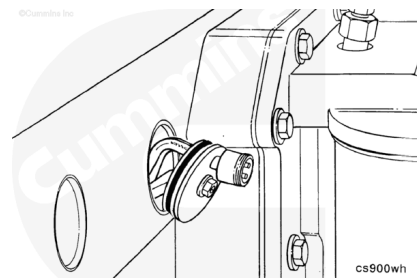

Hook the other leg of the channel in the hole, and push the heater into the hole as far as possible by hand.

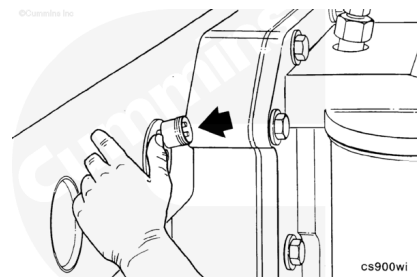


If necessary, use a plastic hammer to tap the heater in until the shoulder contacts the block.

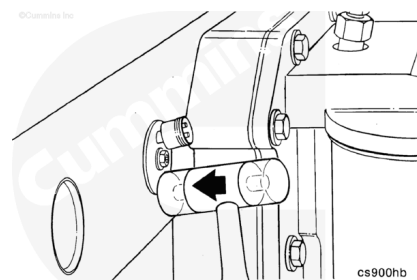

Minimum:	1.3 n.m	[12 in-lb]
Maximum:	2.8 n.m	[25 in-lb]


Note : Do not overtighten.

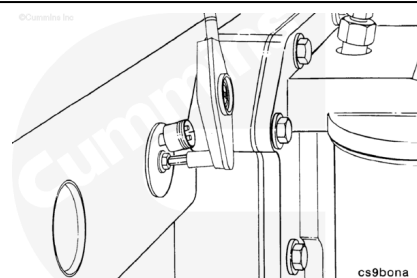

For threaded coolant heaters, apply pipe sealant, Part Number 3375066, to threads of the coolant heater.


Install the coolant heater into the cylinder block and tighten.

Torque Value: 55 n•m [41 ft-lb]

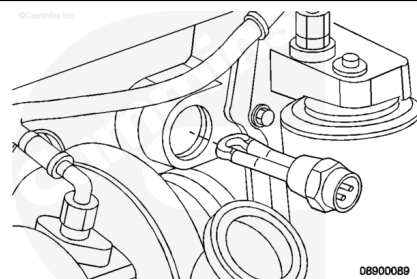

Rear Gear Train


For flange mounted coolant heaters, lubricate the new heater o-ring with clean 15W-40 engine oil.

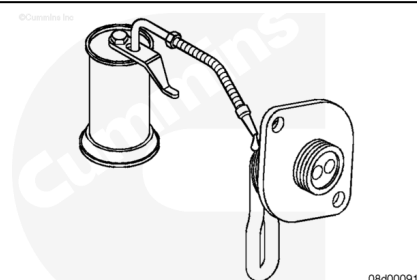

Install the coolant heater and retaining capscrews.

Tighten the two retaining capscrews.


Torque Value: 24 n•m [212 in-lb]

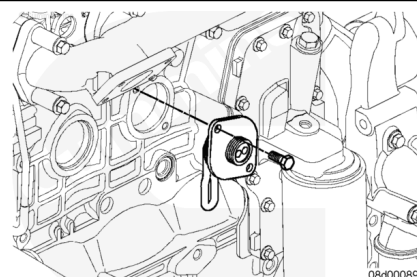

For threaded coolant heaters, apply pipe sealant, Part Number 3375066, to threads of the coolant heater.

Install the coolant heater into the cylinder block and tighten.

Torque Value: 55 n•m [41 ft-lb]

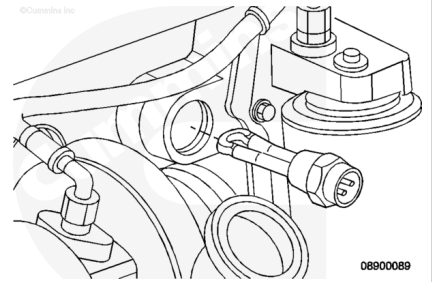

Last Modified: 24-Apr-2006
