

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. Refer to Procedure 013-007 (Batteries) in Section 13.
(/qs3/pubsys2/xml/en/procedures/40/40-013-007.html)

Note : If equipped with Cummins® Electric Fan Clutch option, refer to Procedure 008-026 (Fan Clutch, Electric) in Section 8.
(/qs3/pubsys2/xml/en/procedures/40/40-008-026-tr.html)

Note : Prior to removing the drive belt, loosen the fan pulley and cooling fan (if equipped) mounting capscrews.


- Remove the drive belt. Refer to Procedure 008-002 (Drive Belt, Cooling Fan) in Section 8.
(/qs3/pubsys2/xml/en/procedures/40/40-008-002-tr.html)



Remove


Note : Some applications do not have a cooling fan or the cooling fan is located elsewhere on the application.

If equipped, remove the cooling fan. Refer to the OEM service manual for instructions.

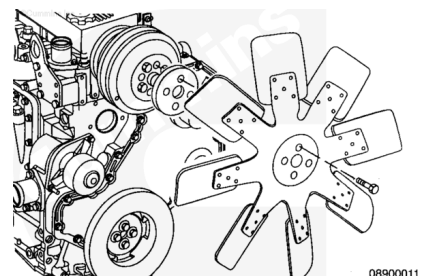

For engines equipped with an engine driven cooling fan, the fan holds the fan pulley and spacer in place. Remove the fan pulley and spacer.


If the engine is **not** equipped with an engine driven cooling fan, remove the fan pulley mounting capscrews and fan pulley.

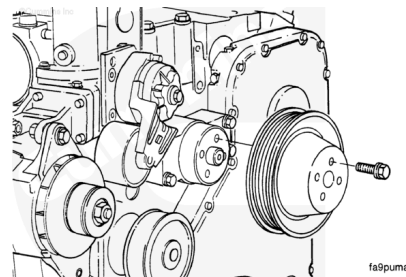

Clean and Inspect for Reus

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

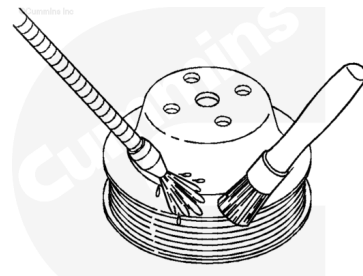

08d00108

⚠ WARNING ⚠


When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

Clean the fan pulley and spacer with solvent and dry with compressed air.

Inspect the fan pulley for cracks near bolt holes and for damage at the drive belt contact surface.

If damage is found on the fan pulley, the fan hub **must** also be inspected. Refer to Procedure 008-036 (Fan Hub, Belt Driven) in Section 8. (</qs3/pubsys2/xml/en/procedures/40/40-008-036-tr.html>)

Replace the pulley if any damage is found.

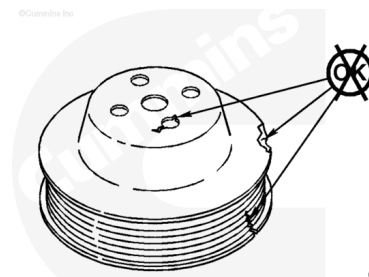


08d00079

Install

If the engine is **not** equipped with an engine driven cooling fan, install the fan pulley mounting capscrews and fan pulley.

Note : Use the tension of the drive belt to hold the cooling fan in place when tightening the mounting capscrews. Do **not** hold the fan blades to keep the cooling fan from rotating.

Do **not** tighten the mounting capscrews at this time. Tighten the mounting capscrews after the drive belt is installed.

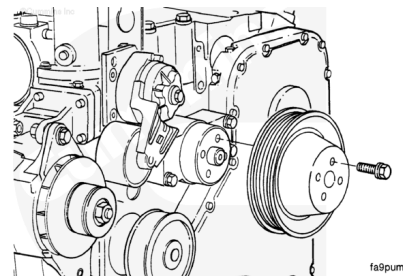

M6	10 n.m	[89 in-lb]
M10	43 n.m	[32 ft-lb]
M12	77 n.m	[57 ft-lb]


Note : Some applications do **not** have a cooling fan or the cooling fan is located elsewhere on the application.

For engines equipped with an engine driven cooling fan, the fan holds the fan pulley and spacer in place. Install the fan pulley and spacer.

If removed, install the cooling fan. Refer to the OEM service manual for instructions.

Note : Use the tension of the drive belt to hold the cooling fan in place when tightening the mounting capscrews. Do **not** hold the fan blades to keep the cooling fan from rotating.

Do **not** tighten the mounting capscrews at this time. Tighten the mounting capscrews after the drive belt is installed.

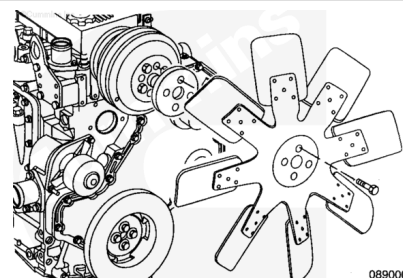


M6	10 n.m	[89 in-lb]
M10	43 n.m	[32 ft-lb]
M12	77 n.m	[57 ft-lb]

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

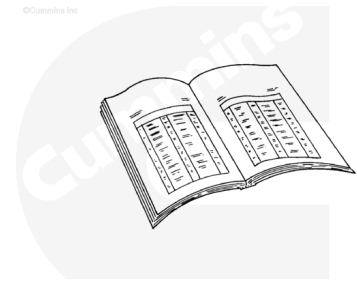

ck800wa

- Install the drive belt. Refer to Procedure 008-002 (Drive Belt, Cooling Fan) in Section 8.
(/qs3/pubsys2/xml/en/procedures/40/40-008-002-tr.html)

Note : Tighten the fan pulley and cooling fan (if equipped) mounting capscrews.

- Connect the batteries. Refer to Procedure 013-007 (Batteries) in Section 13.
(/qs3/pubsys2/xml/en/procedures/40/40-013-007.html)
- Operate the engine and check for proper operation.