

Trainings ▾

General Information


©Cummins Inc.

Note : Due to the number of water inlet connection options, the following procedure has been commonized. The illustrations may **not** match the engine being serviced, but the procedures are the same.

Install

Install the capscrews, water inlet connection, gasket, and rectangular sealing ring.

Align the roll pins against the front face of the cylinder block and tighten the capscrews.

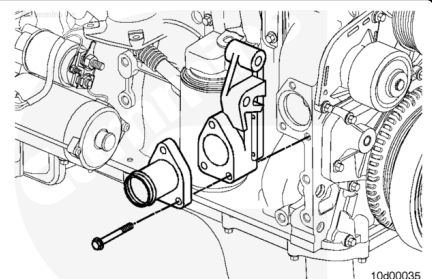

M10	43 n.m	[32 ft-lb]
M12	80 n.m	[59 ft-lb]