


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries.

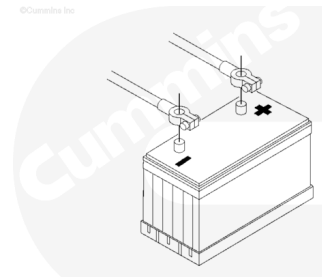

13900050

Remove

Remove the accessory drive cover, mounting capscrews and gasket.

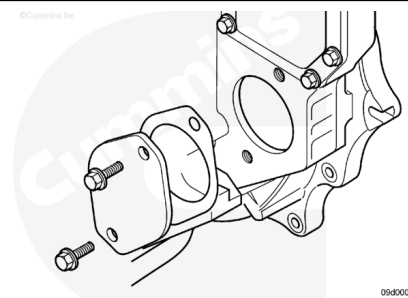


09d00031

Clean

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

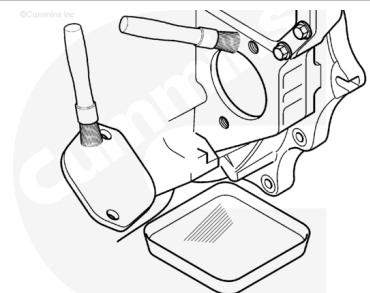

09d00032

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean the accessory drive cover and rear gear housing mounting surface with solvent.


Dry with compressed air.

Install

Prior to installing the accessory drive cover, identify which style of gasket is going to be installed so that, if necessary, the gasket can be properly oriented.

There are two types of accessory drive cover gaskets:

1. Three round oil supply passages and one elongated oil supply passage
2. Four round oil supply passages.

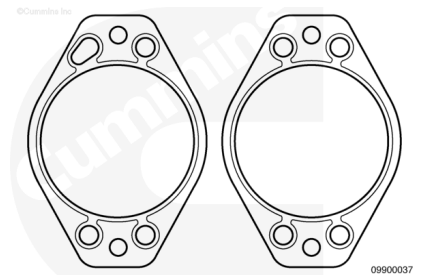


It is preferred that, when installing the accessory drive, the gasket with the four round oil supply passages be used. The gasket can be installed in any orientation.

If only the gasket with the one elongated oil supply passage is available, install the gasket so that the elongated oil supply passage is **not** over the oil supply hole in the gear housing.

Install the accessory drive cover, gasket and mounting capscrews. Tighten the mounting capscrews.

Torque Value: 50 n•m [40 ft-lb]

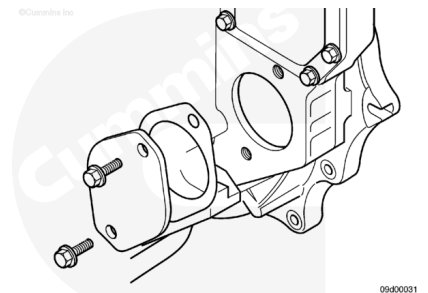


Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries
- Operate the engine and check for leaks.

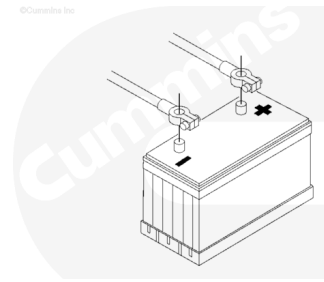

13900050