


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries.

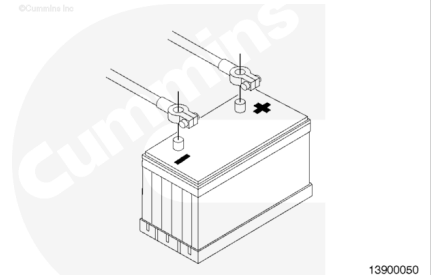


Remove

Loosen the hose clamps, and position the hose so the crossover tube can be removed.

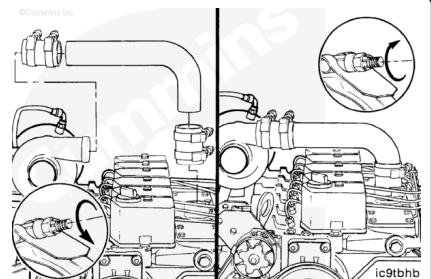

Inspect for Reuse

Check the crossover tube for cracks, holes, and worn sections. Replace with a new hose and clamps, if necessary.

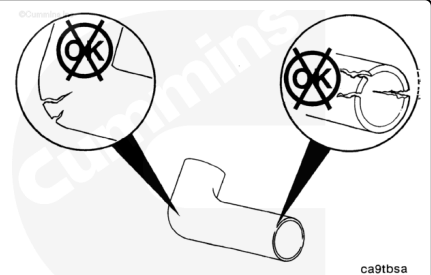


Install

Install the crossover tube and clamps in the reverse order of removal.

Tighten the clamps.

Torque Value: 8 n•m [71 in-lb]

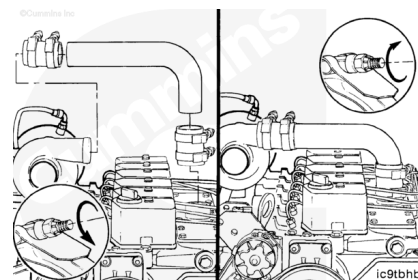

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries
- Operate the engine and check for leaks.

