


Trainings ▾

Initial Check

Inspect the line for oil leaks or damage.

Repair or replace as necessary.

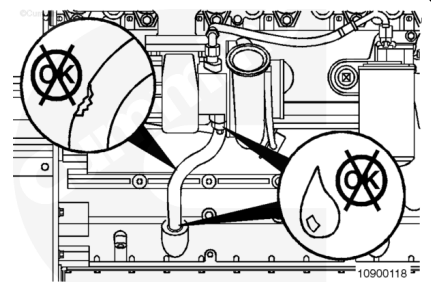


Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries.

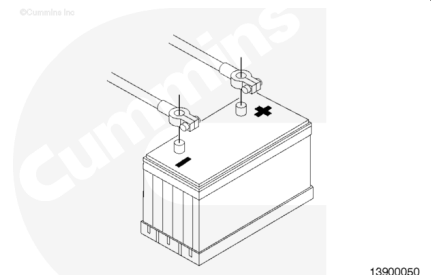

Remove

Remove the capscrews from the turbocharger oil drain tube.


Pull the drain line out of the drain line boss.

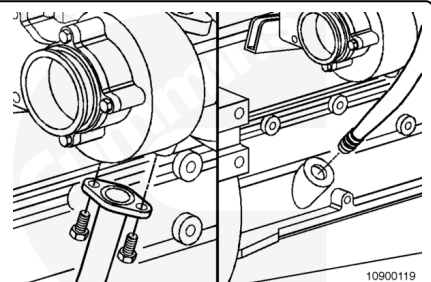

Clean and Inspect for Reuse

Clean the gasket sealing surfaces (first frame).


Clean the o-ring seating bore, and make sure it is free of dirt and debris.

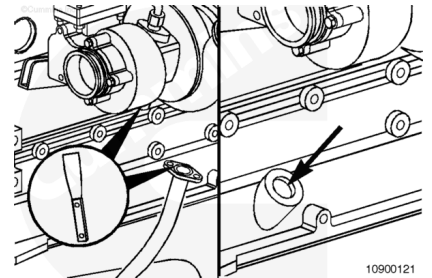

Inspect line for cracks, wear, and damage.

Inspect the o-ring for fretting and cracking, and replace as necessary.

Check the rubber section of the drain line for deterioration.

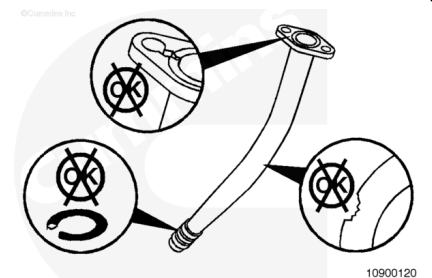


Install

Apply a thin film of oil to the drain line o-rings.

Push the drain line into the drain line boss. Be sure both o-rings are completely seated in the bore.

Install the drain line capscrews with a new gasket.

Torque Value: 24 n•m [18 ft-lb]

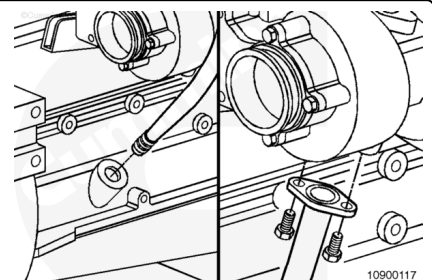


Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing,

remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries
- Operate the engine, and check for leaks.

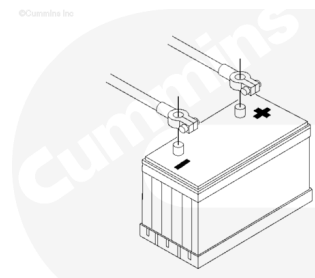

13900050

Last Modified: 31-Mar-2006
