


Trainings ▾

Inspect for Reuse

Inspect the lever pin.

Replace the turbine housing assembly if worn excessively.


Refer to the Turbocharger Master Repair Manual, Bulletin 3580555.

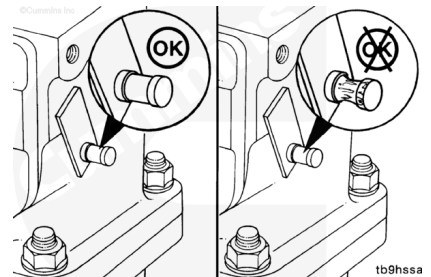

Inspect the valve and valve seat for cracks or erosion.

Replace the turbine housing assembly if worn excessively.

Refer to the Turbocharger Master Repair Manual, Bulletin 3580555.

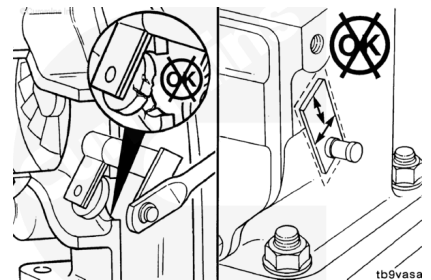

Actuate the lever by hand to be sure that the shaft rotates freely and is **not** seized.

Check for excessive movement between the shaft and bushing.

Replace the turbine housing if the shaft and bushing are damaged or seized.

Refer to the Turbocharger Master Repair Manual, Bulletin 3580555.

