


Trainings ▾

Remove

For 6 cylinder engines, remove the exhaust manifold mounting capscrews and spacers.

Remove the exhaust manifold and gaskets.

Discard the exhaust manifold gaskets.

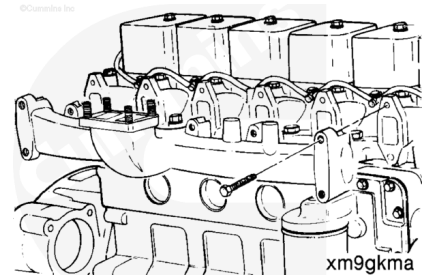

For 4 cylinder engines, remove the exhaust manifold mounting capscrews and spacers.

Remove the exhaust manifold and gaskets.

Discard the exhaust manifold gaskets.

