


Trainings ▾

Leak Test

Shut off the engine.


Open the drain cock on the wet tank to release air from the system. Close the draincock after the pressure is released.

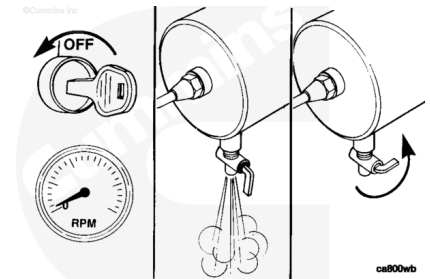

Operate the engine to activate the air compressor.

With the air compressor pumping between 550 to 690 kPa [80 to 100 psi], use a solution of soapy water to check for air leaks in the following areas:

- Unloader cover gasket
- Unloader pin o-ring
- Air compressor head gasket.

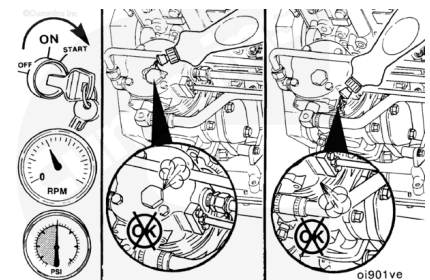

If air leaks are found, refer to the Master Repair Manual, Holset® Air Compressors, Bulletin 3666121

([/qs3/portal/manualviewer.html?](/qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/3666121.html)

[path=/qs3/pubsys2/xml/en/outlines/3666121.html](/qs3/pubsys2/xml/en/outlines/3666121.html)) for repair of these components.