

Trainings ▾

Install

Spool Mount

Install the alternator and the bottom alternator mounting capscrew and nut.

Install the upper alternator link mounting capscrew at the top of the alternator.

Tighten the capscrews.

Torque Value:


Lower Mounting Capscrew

1. 40 n•m [30 ft-lb]

Torque Value:

Upper Link Mounting Capscrew

1. 24 n•m [212 in-lb]

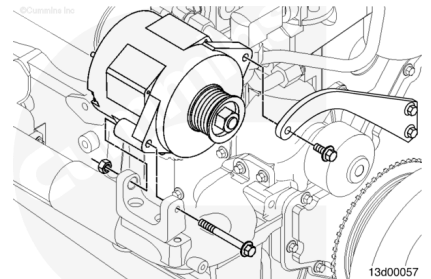


Hinge Mount

Install the alternator.

Install and tighten the alternator mounting capscrew.

Torque Value: 40 n•m [30 ft-lb]

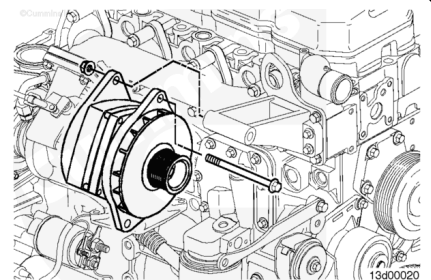

Install the alternator link capscrew.

Torque Value: 24 n•m [212 in-lb]

