


Trainings ▾

Initial Check

Check that the alternator pulley is in line with the other belt driven pulleys. Verify all pulleys are aligned correctly using one of the following pulley alignment fixture tools or equivalent:

- Part Number 3163524
- Part Number 93874 (Dayco)


If alternator pulley is out of alignment, verify that the correct alternator brackets have been used and/or have been installed correctly.

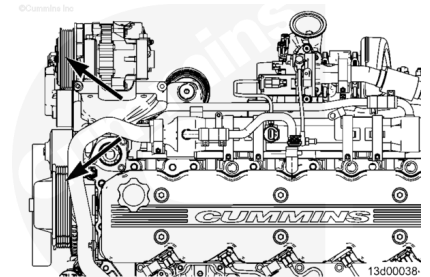

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

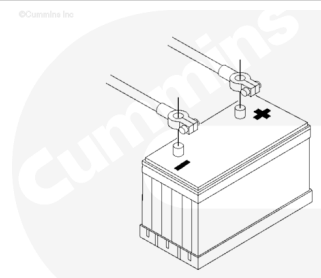

13900050

- Disconnect the batteries.

- Remove the drive belt. Refer to Refer to Procedure Procedure 008-002 (/qs3/pubsys2/xml/en/procedures/40/40-008-002-tr.html)
- Remove the alternator. Refer to Refer to Procedure Procedure 013-001 (/qs3/pubsys2/xml/en/procedures/40/40-013-001-tr.html).




ck800wa

Remove

Spool Mount:

Remove the upper alternator bracket mounting capscrews.


Remove the alternator bracket.

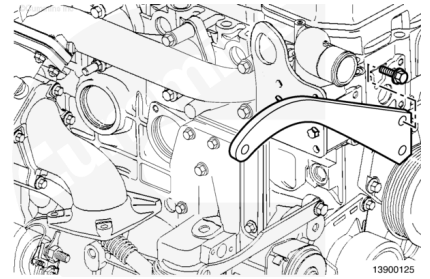

Note : On some applications, the alternator bracket and water inlet are combined in the same bracket. Refer to [Procedure 008-082 \(/qs3/pubsys2/xml/en/procedures/40/40-008-082-tr.html\)](/qs3/pubsys2/xml/en/procedures/40/40-008-082-tr.html), where applicable.

Remove the lower alternator bracket mounting capscrews.

Remove the alternator bracket.

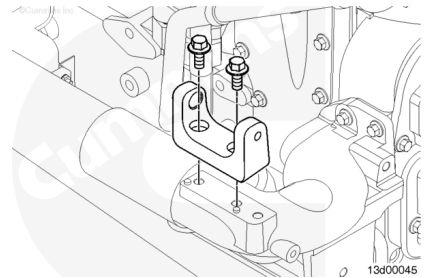


Hinge Mount:

Remove the upper alternator bracket mounting capscrews.

Remove the lower alternator bracket mounting capscrews.


Remove the alternator brackets.

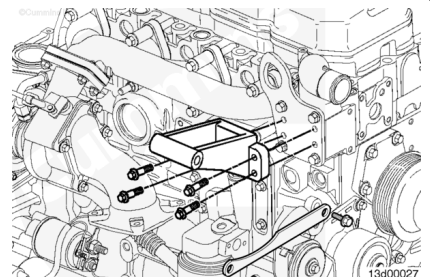

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

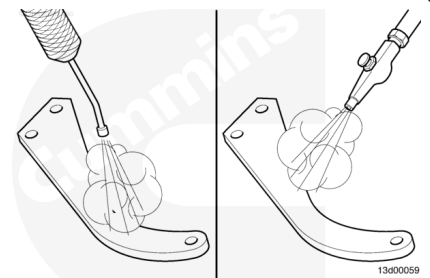

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.


⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use steam or solvent to clean the alternator brackets. Dry with compressed air.

Inspect the alternator brackets for cracks or damage.

If any cracks are found on the alternator brackets, they **must** be replaced.

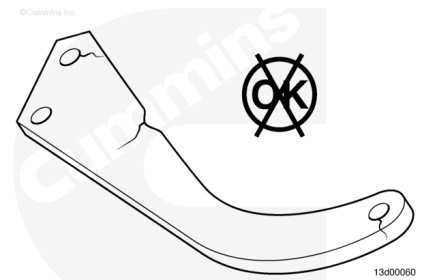

Install

Spool Mount:

Install the upper alternator bracket and mounting capscrews.

Tighten the upper and lower alternator bracket mounting capscrew.

Torque Value:


M8

1. 24 n•m [18 ft-lb]

Torque Value:

M10

1. 43 n•m [32 ft-lb]

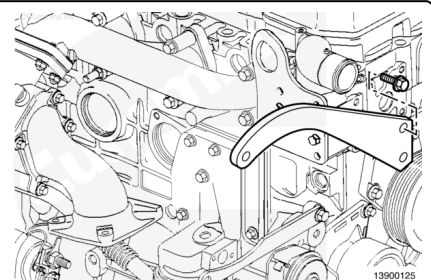


Note : On some applications, the alternator bracket and water inlet are combined in the same bracket. Refer to Refer to Procedure Procedure 008-082

(/qs3/pubsys2/xml/en/procedures/40/40-008-082-tr.html), where applicable.

Install the lower alternator mounting bracket over the two dowel pins.

Install the two alternator bracket mounting capscrews and tighten.

Torque Value: 54 n•m [40 ft-lb]

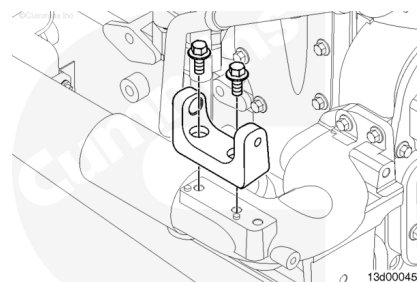

Hinge Mount:

Install the upper alternator bracket and mounting capscrews.

Install the lower alternator bracket and mounting capscrew.

Note : Depending on the alternator configuration, it may be necessary to wait until the alternator is installed before tightening the lower alternator bracket. This will allow adjustment of the bracket.

Tighten the upper and lower alternator bracket mounting capscrew.

Torque Value:


M8

1. 24 n•m [18 ft-lb]

Torque Value:


M10

1. 43 n•m [32 ft-lb]

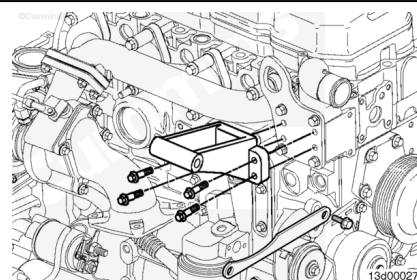


Finishing Steps

- Install the alternator. Refer to Refer to Procedure Procedure 013-001 (/qs3/pubsys2/xml/en/procedures/40/40-013-001-tr.html).
- Install the drive belt. Refer to Refer to Procedure Procedure 008-002 (/qs3/pubsys2/xml/en/procedures/40/40-008-002-tr.html).

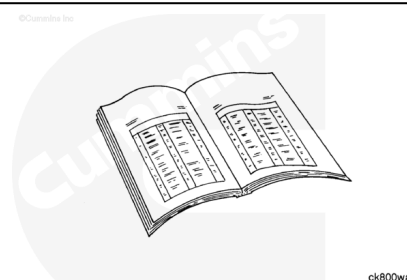

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

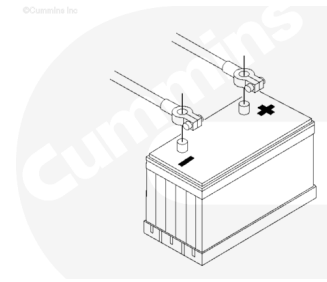

- Connect the batteries.