


Trainings ▾

Preparatory Steps

Remove the drive belt.

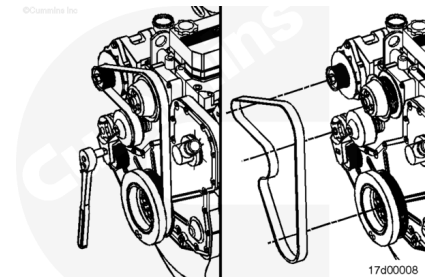


Remove


⚠ CAUTION ⚠

The belt tensioner is spring loaded and must be pivoted away from the drive belt. Pivoting in the wrong direction can damage the belt tensioner.

Lift the belt tensioner to relieve tension in the belt, and remove the belt.

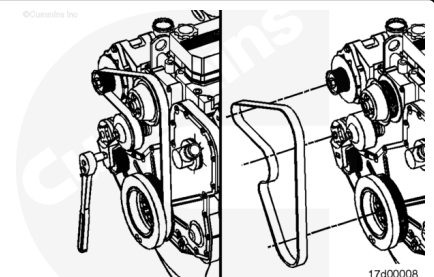


Remove the capscrew and belt tensioner from the bracket.

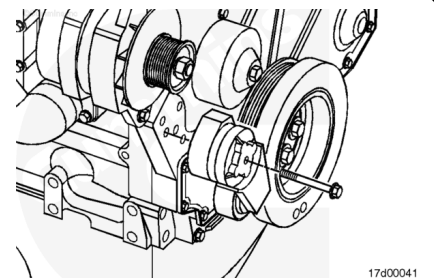

Install

Install the belt tensioner and capscrews.

Torque Value: 43 n•m [32 ft-lb]

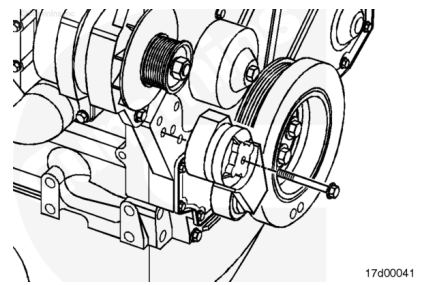

Note : Position the belt over the grooved pulleys first; then, while holding the tensioner up, slide the belt over the water pump pulley.

Lift and hold the tensioner. Install the drive belt, and release the tensioner.

