


Trainings ▾


Remove

Remove the pipe plug.

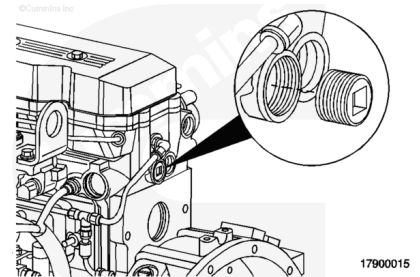

Clean


Use spray cleaner, Part Number 3375433, or equivalent, to clean the threads of the pipe plugs and threaded bores.

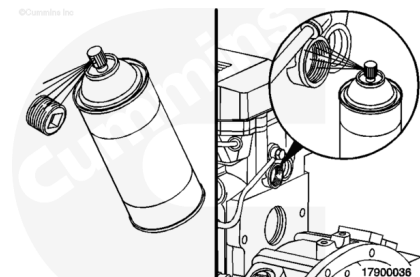

Inspect for Reuse

Inspect the threads of the pipe plugs for mutilation or damage.


Inspect the threaded bores for damage.

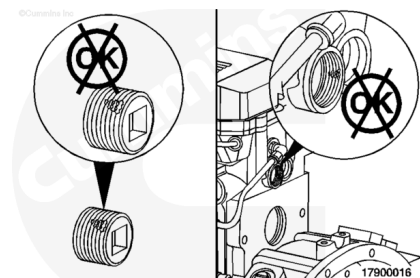

Install

Apply a film of pipe plug sealant, Part Number 3375066, or equivalent, to the threads.

Install the pipe plugs.

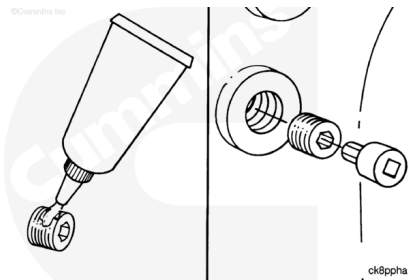

Tighten the pipe plugs. Refer to the adjoining chart for the appropriate torque values.

©Cummins Inc.

Pipe Plug Torque Values						
Thread	Size		Torque		Torque	
	Actual Thread O.D.		In Aluminum Components		In Cast Iron or Steel Components	
	mm	[in]	N•m	[ft-lbs]	N•m	[ft-lbs]
in.						
1/16	8.1	[0.32]	5	[45 in-lb]	15	[10]
1/8	10.4	[0.41]	15	[10]	20	[15]
1/4	13.7	[0.54]	20	[15]	25	[20]
3/8	17.3	[0.68]	25	[20]	35	[25]
1/2	21.6	[0.85]	35	[25]	55	[40]
3/4	26.7	[1.05]	45	[35]	75	[55]
1	33.5	[1.32]	60	[45]	95	[70]
1 1/4	42.2	[1.66]	75	[55]	115	[85]
1 1/2	48.3	[1.90]	85	[65]	135	[100]

ck8ppha