


Trainings ▾

Remove

⚠ CAUTION ⚠

Do not allow metal shavings to fall in the engine when drilling a hole in the expansion plug. Damage to engine components can occur.

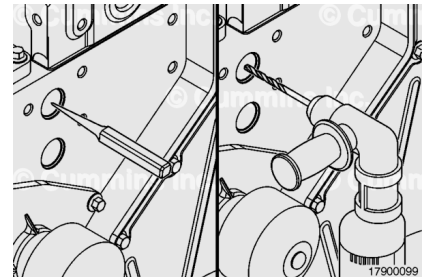


Use a center punch to mark the expansion plug for drilling.

Drill an 1/8-inch hole into the expansion plug.


Use a dent puller to remove the plug.

Discard all used expansion plugs and expansion plug o-rings. Do **not** use them again.

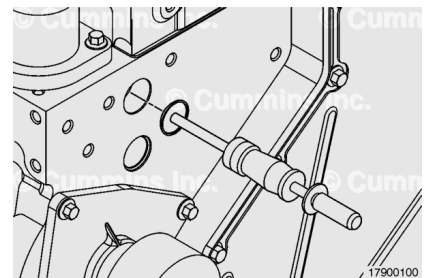


Clean and Inspect for Reuse

Thoroughly clean the expansion plug hole using Scotch-Brite™, or equivalent. Use Cummins® spray cleaner, Part Number 3375433, or equivalent, to perform a final cleaning of the bore.

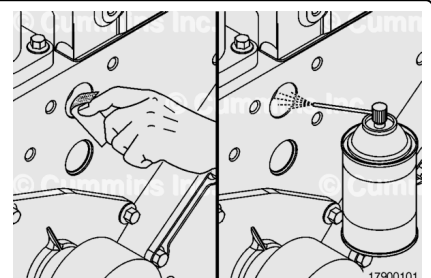


Inspect the expansion plug bores for damage.

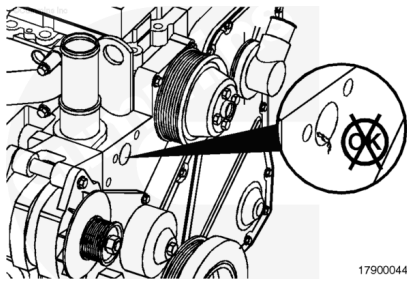


Install

Install the expansion plug o-ring into the bore.

Install the expansion plug with the convex side facing out.

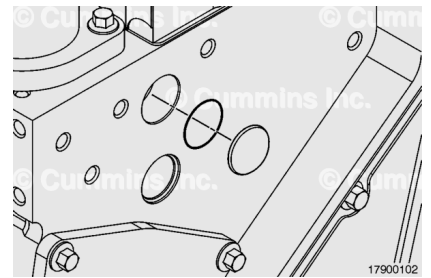

Use a hammer and a flat driver to strike the expansion plug twice to flatten the plug against the o-ring.

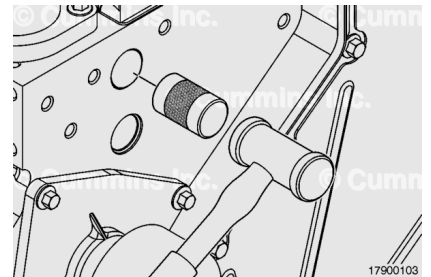

Check the plug for proper installation.

- The installed plug **must not** protrude above the edge of the bore.
- The installed plug **must not** be more than 1.0 to 3.5 mm [0.04 to 0.14 in] below the edge of the bore.

