


Trainings ▾

Tool Number

3375066

Pipe Sealant

Used on capscrew threads and pipe plugs.

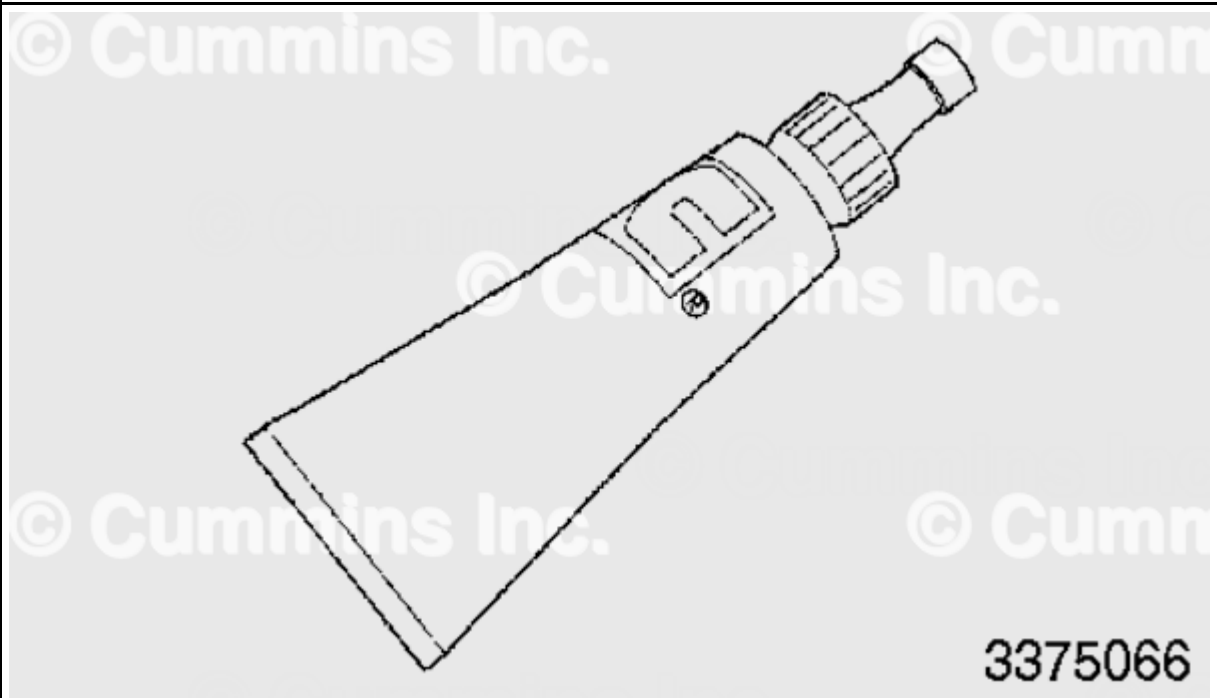

Tool Number

3375068

Cup Plug Sealant

Used when installing cup plugs.




Tool Number

3375432

Crack Detection Kit

Used to detect cracks in engine components.

©Cummins Inc

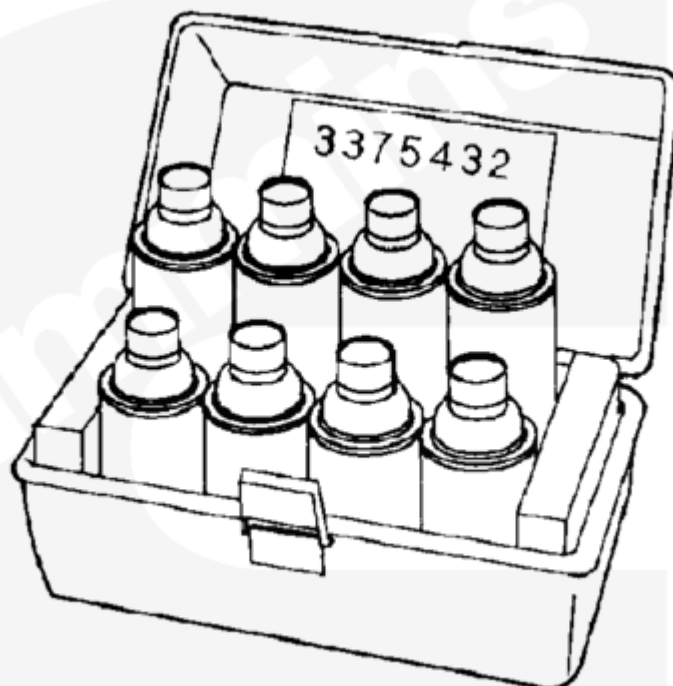**3375432**


Tool Number

3376050

Dial Indicator Gauge

Used for checking flywheel housing runout and/or checking end play on various components.

©Cummins Inc

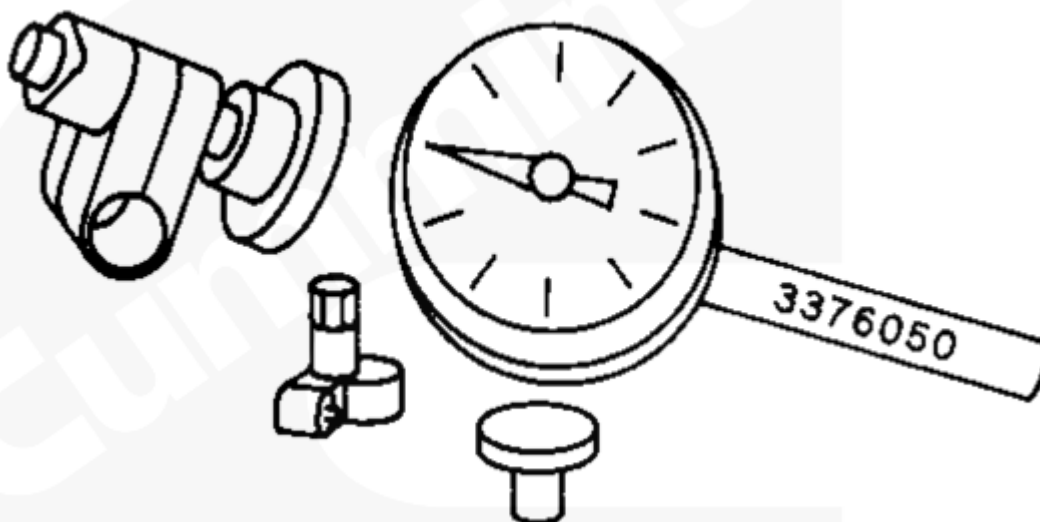
**Tool Number**

3376812

Cup Plug Driver

Used to install cup plug in flywheel housing.

©Cummins Inc

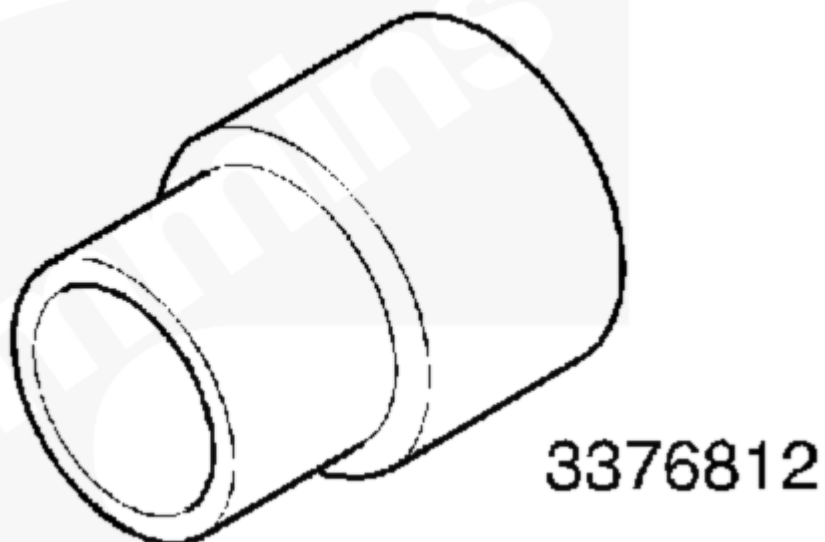


Tool Number

3822512

Engine Lifting Fixture

Used to remove and install the engine.

©Cummins Inc

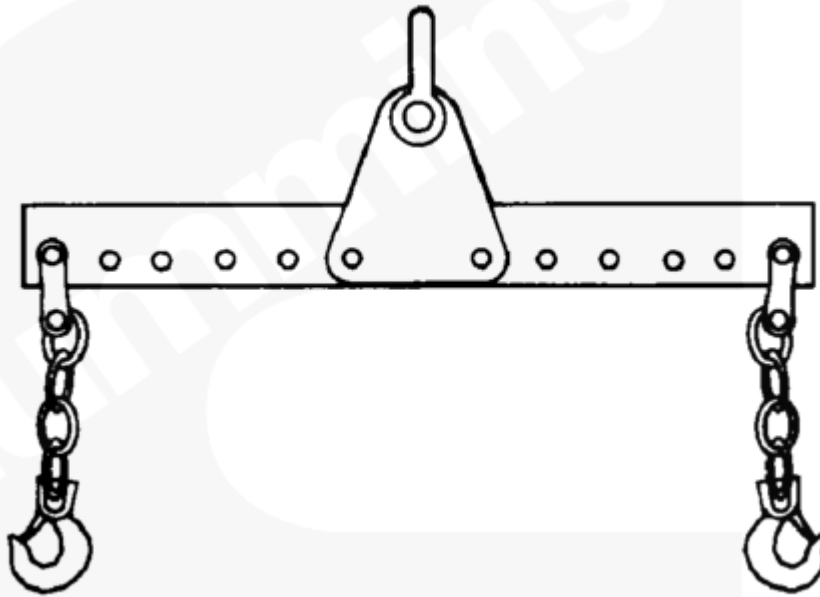

3822512


Tool Number

3823709

Idler Shaft Puller and Capscrew

Used to remove idler shaft from idler gear and flywheel housing.

©Cummins Inc

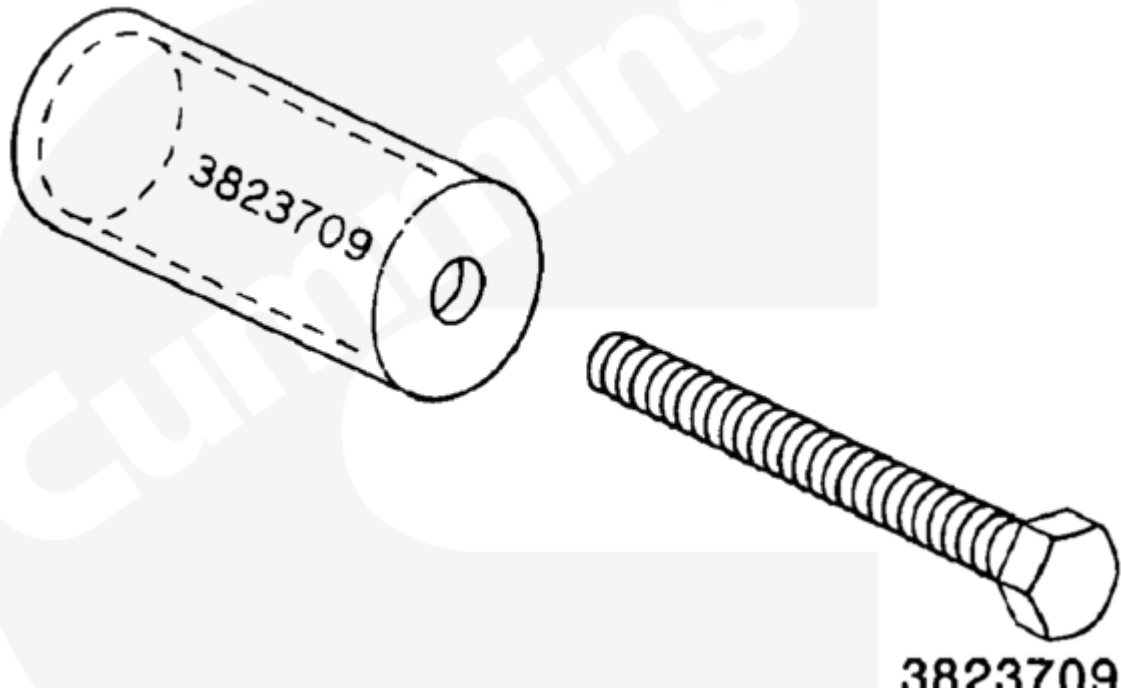


Tool Number

3823891

Gear Locking Tool

Used to prevent rotation of the power take-off output shaft while tightening the output flange capscrew.

©Cummins Inc

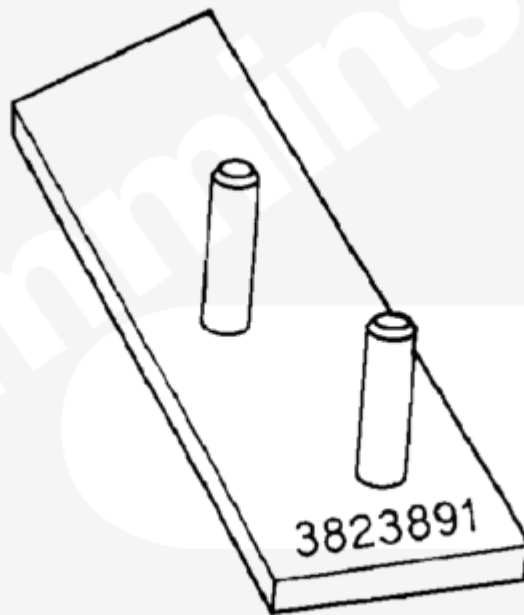**3823891**

Tool Number

3823892

Offset Wrench

Used to tighten the hidden capscrews in the REPTO flywheel housing.

©Cummins Inc



3823892


Tool Number

3823893

Bearing Race Driver

Used to install output shaft bearing races.

©Cummins Inc

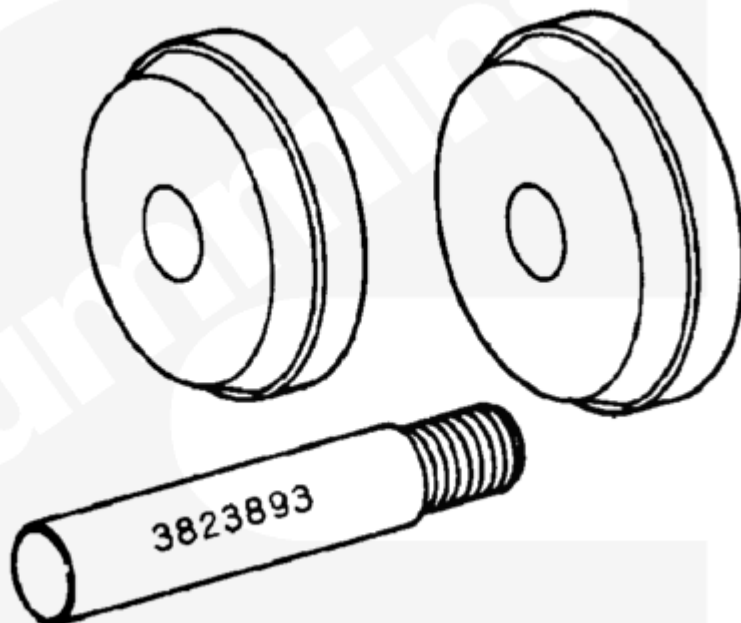

3823893


Tool Number

3824591

Barring Tool

Used to engage the flywheel ring gear to rotate the crankshaft.

©Cummins Inc

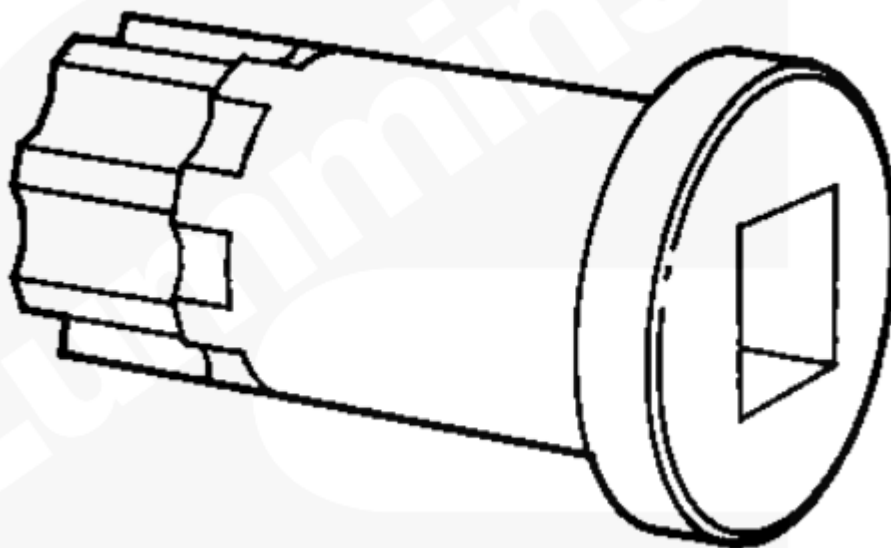

3824591


Tool Number

ST-1325

Dial Gauge Attachment

Used to mount on the crankshaft flange when checking flywheel housing runout.

©Cummins Inc

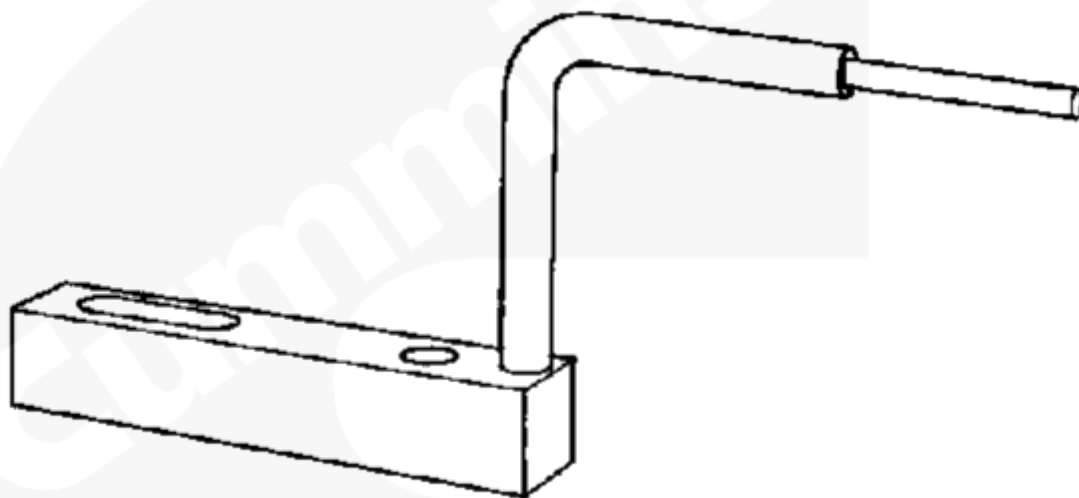

st-1325


Tool Number

3165175

Barring Plug Remover

Removes flywheel housing plug. Removal of this plug is required prior to using barring tool, Part Number 3824591.

©Cummins Inc

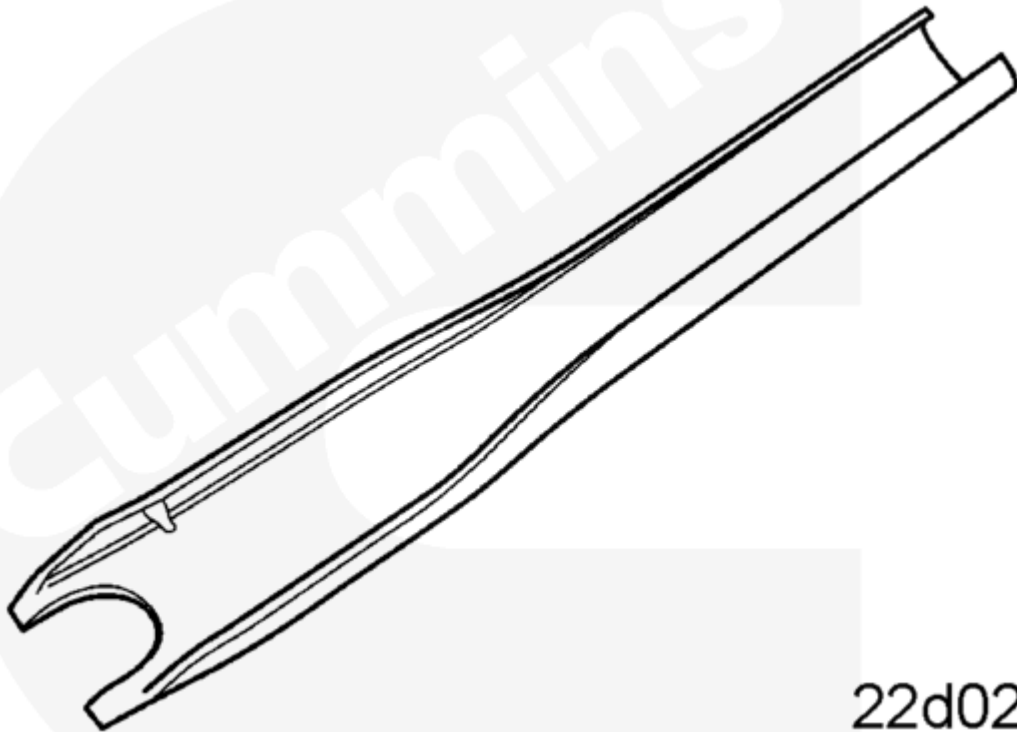

22d0223


Tool Number

3164070

RTV Sealant

Used to seal flywheel housing to gear housing joint.

©Cummins Inc

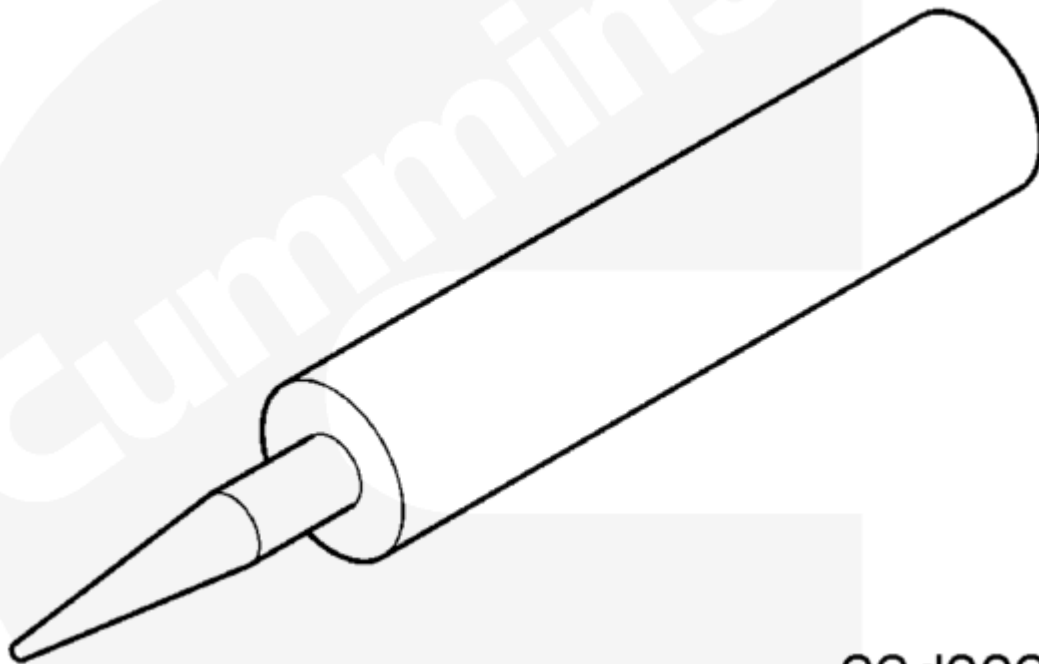

22d00220

Last Modified: 10-Apr-2006
