


Trainings ▾

Engine Views

The following illustrations show the locations of the major external engine components, filters, and other service and maintenance points. Some external components will be at different locations for different engine models.

Note : The illustrations are **only** a reference to show a typical engine.


©Cummins Inc

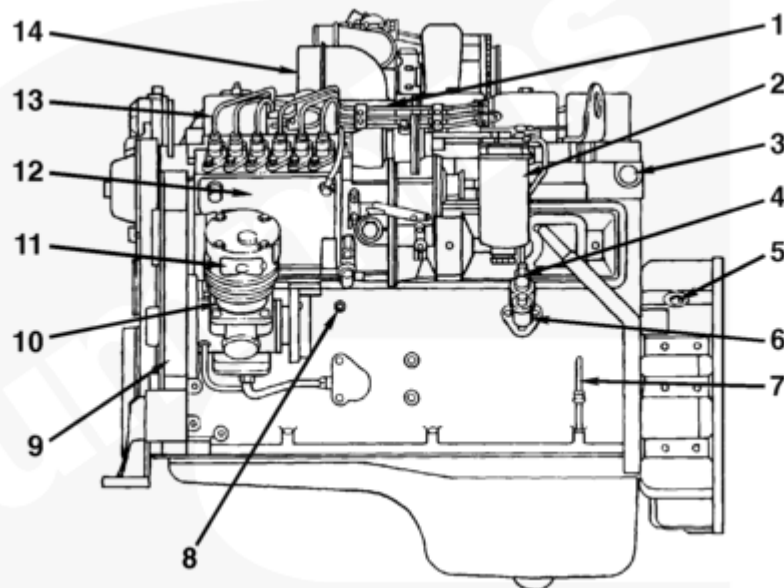

00900280

Automotive - Fuel Pump Side View


1. Intake air preheater (optional)
2. Fuel filter/water separator
3. Water heater supply (3/4-inch NPTF)
4. Fuel inlet connection (1/4-inch NPTF)
5. Magnetic pickup location (3/4-16 UNF)
6. Fuel lift pump
7. Dipstick
8. Oil pressure (1/8-inch NPTF)
9. Engine dataplate
10. Air compressor
11. Air compressor intake
12. In-line fuel injection pump
13. High pressure fuel lines
14. Engine air inlet.

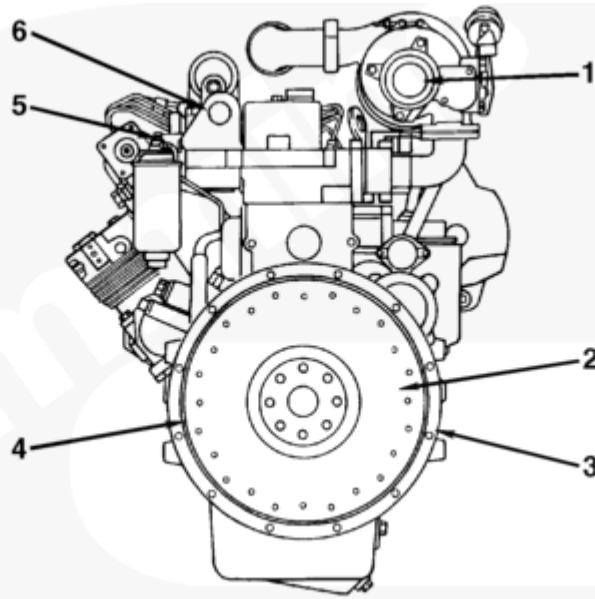

00900279

Automotive - Rear View

1. Turbocharger exhaust outlet
2. Clutch mounting plate
3. Flywheel housing
4. Flywheel flexplate
5. Fuel return connection
6. Rear engine lifting bracket.

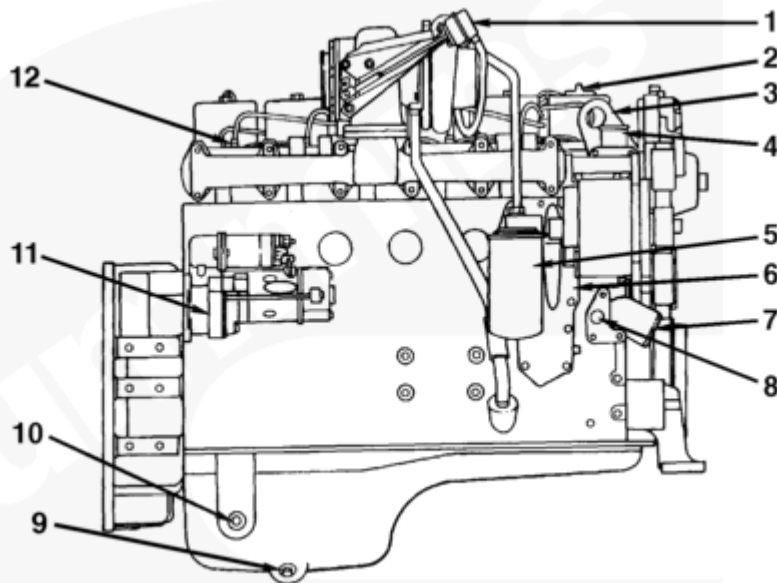


00900278

Automotive - Turbocharger Side View

1. Turbocharger wastegate actuator
2. Oil fill
3. Front engine lifting bracket
4. Water outlet
5. Lubricating oil filter

6. Lubricating oil cooler
7. Water inlet
8. Water heater return (1/2-inch NPTF)
9. Oil drain
10. Provision for oil immersion heater
11. Starter motor solenoid
12. Fuel injection nozzles.

©Cummins Inc

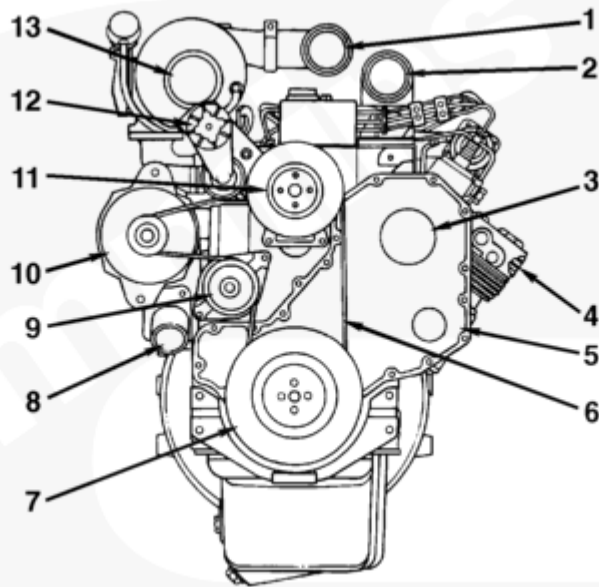

00900277

Automotive - Front View

1. Turbocharger air outlet
2. Engine air inlet
3. Fuel pump drive cover
4. Air compressor air outlet
5. Front gear cover
6. Fan drive belt
7. Vibration damper
8. Water inlet
9. Water pump
10. Alternator
11. Fan pulley
12. Automatic belt tensioner
13. Turbocharger air inlet.

