


Trainings ▾

Engine Views

The following illustrations show the locations of the major external engine components, filters, and other service and maintenance points. Some external components will be at different locations for different engine models.

Note : The illustrations are **only** a reference to show a typical engine.


©Cummins Inc

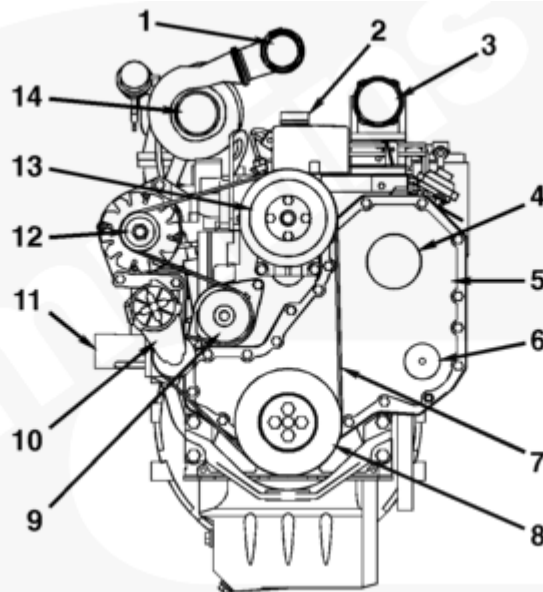

00900346

Front View - B3.9 Industrial


1. Turbocharger air outlet
2. Lubricating oil fill
3. Engine air inlet
4. Fuel pump drive cover
5. Front gear cover
6. Accessory drive cover (optional)
7. Fan drive belt
8. Front Pulley
9. Water pump
10. Automatic belt tensioner
11. Water inlet
12. Alternator
13. Fan pulley
14. Turbocharger air inlet.

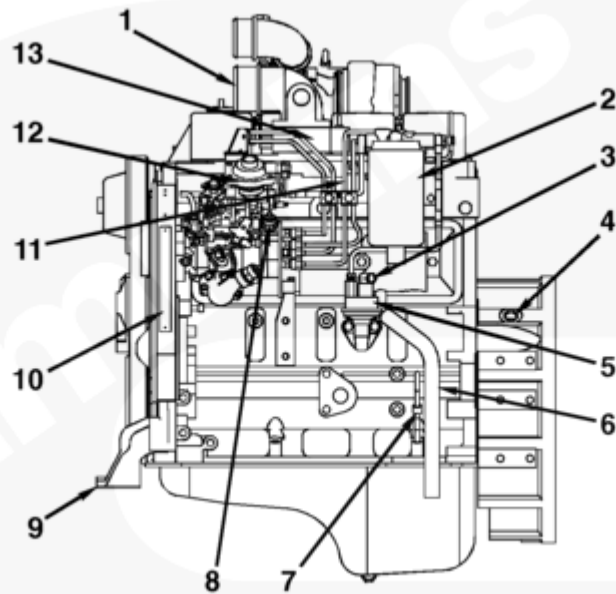

00900343

Left Side View - B3.9 Industrial


1. Engine air inlet
2. Fuel filter/water separator
3. Fuel inlet connection
4. Magnetic pickup location (3/4-16 UNF)
5. Fuel lift pump
6. Crankcase breather tube
7. Lubricating oil dipstick
8. Fuel drain connection
9. Front engine mounting bracket
10. Engine dataplate
11. High pressure fuel lines
12. Fuel injection pump
13. Intake air preheater (optional).

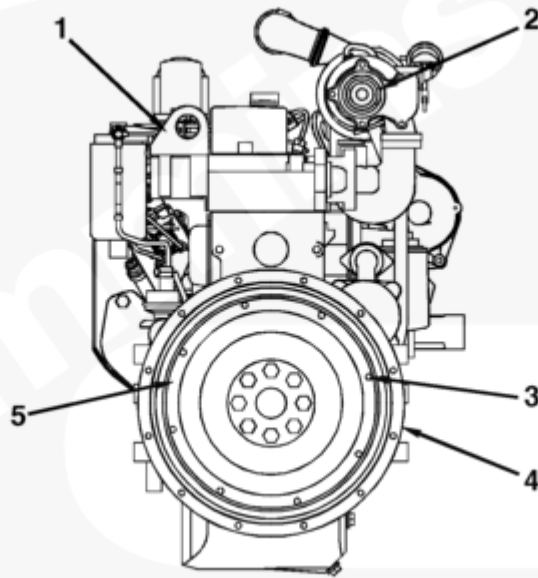

00900344

Rear View - B3.9 Industrial

1. Rear engine lifting bracket
2. Turbocharger exhaust outlet
3. Flexplate mounting holes
4. Flywheel housing
5. Flywheel/flexplate.

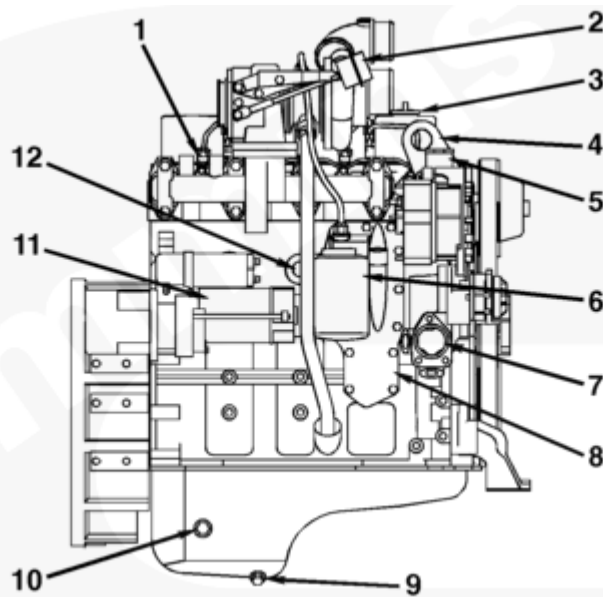


00900345

Right Side View - B3.9 Industrial

1. Fuel injection nozzles
2. Turbocharger wastegate actuator
3. Lubricating oil fill
4. Front engine lifting bracket
5. Water outlet
6. Lubricating oil filter

7. Water inlet
8. Lubricating oil cooler
9. Lubricating oil drain
10. Provision for lubricating oil immersion heater
11. Starter motor and solenoid
12. Provision for coolant heater.

©Cummins Inc

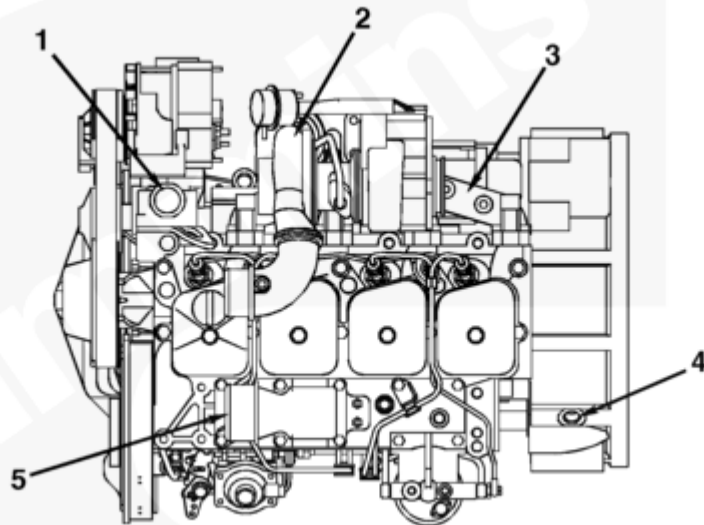


00900347

Top View - B3.9 Industrial

1. Water outlet
2. Turbocharger
3. Exhaust manifold
4. Magnetic pickup location (3/4-16 UNF)
5. Engine air inlet.

©Cummins Inc

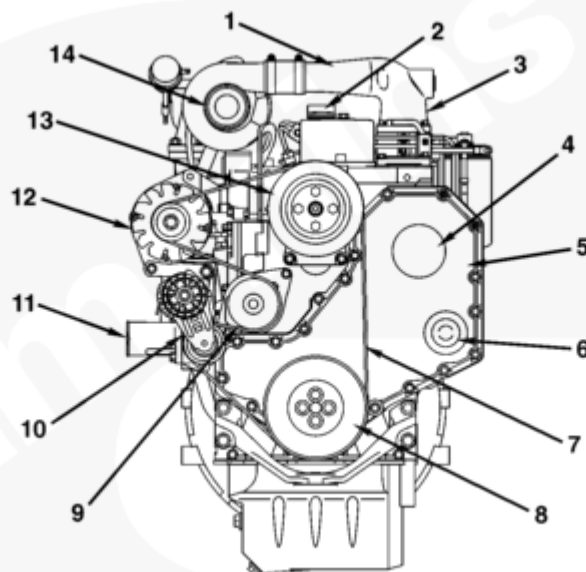


00900383

Front View - B4.5 Industrial

1. Turbocharger air outlet
2. Lubricating oil fill
3. Engine air inlet
4. Fuel pump drive cover
5. Front gear cover
6. Accessory drive cover (optional)
7. Fan drive belt
8. Front Pulley
9. Water pump
10. Automatic belt tensioner
11. Water inlet
12. Alternator
13. Fan pulley
14. Turbocharger air inlet.


©Cummins Inc

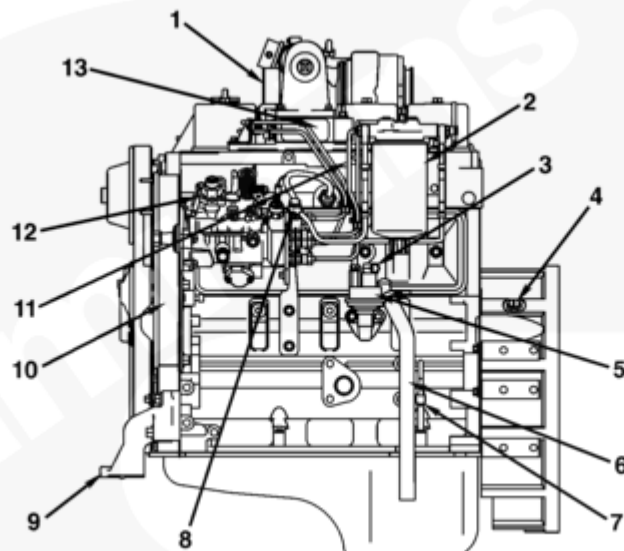

00900380

Left Side View - B4.5 Industrial


1. Engine air inlet
2. Fuel filter/water separator
3. Fuel inlet connection
4. Magnetic pickup location (3/4-16 UNF)
5. Fuel lift pump
6. Crankcase breather tube
7. Lubricating oil dipstick
8. Fuel drain connection
9. Front engine mounting bracket
10. Engine dataplate
11. High pressure fuel lines
12. Fuel injection pump
13. Intake air preheater (optional).

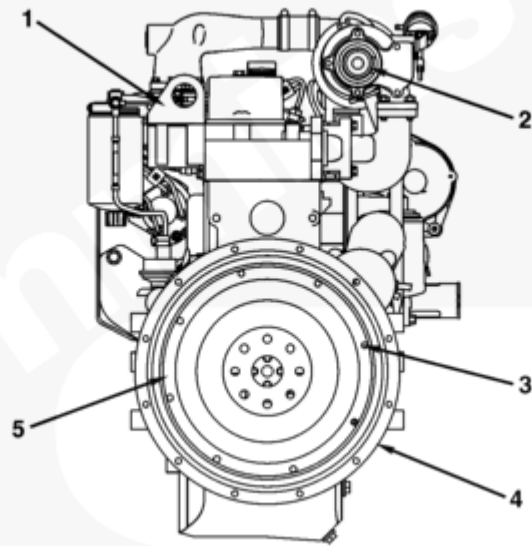

00900381

Rear View - B4.5 Industrial

1. Rear engine lifting bracket
2. Turbocharger exhaust outlet
3. Flexplate mounting holes
4. Flywheel housing
5. Flywheel/flexplate.

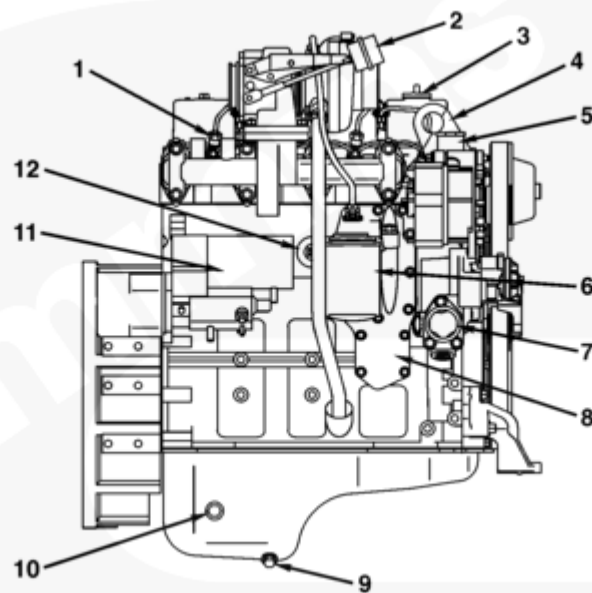


00900382

Right Side View - B4.5 Industrial

1. Fuel injection nozzles
2. Turbocharger wastegate actuator
3. Lubricating oil fill
4. Front engine lifting bracket
5. Water outlet
6. Lubricating oil filter

7. Water inlet
8. Lubricating oil cooler
9. Lubricating oil drain
10. Provision for lubricating oil immersion heater
11. Starter motor and solenoid
12. Provision for coolant heater.


©Cummins Inc

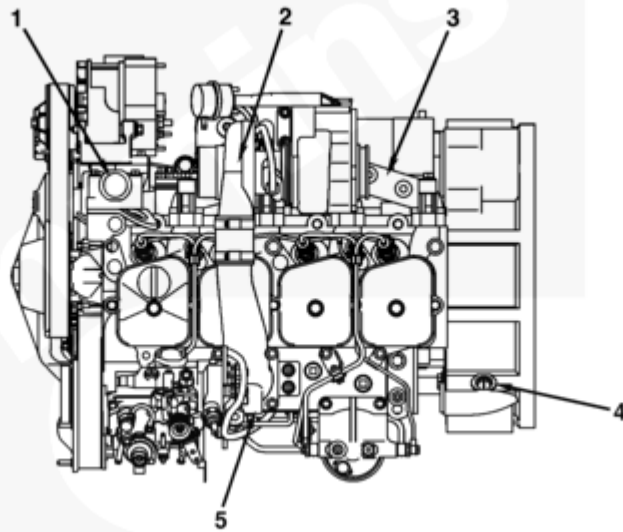

00900384

Top View - B4.5 Industrial


1. Water outlet
2. Turbocharger
3. Exhaust manifold
4. Magnetic pickup location (3/4-16 UNF)
5. Engine air inlet.

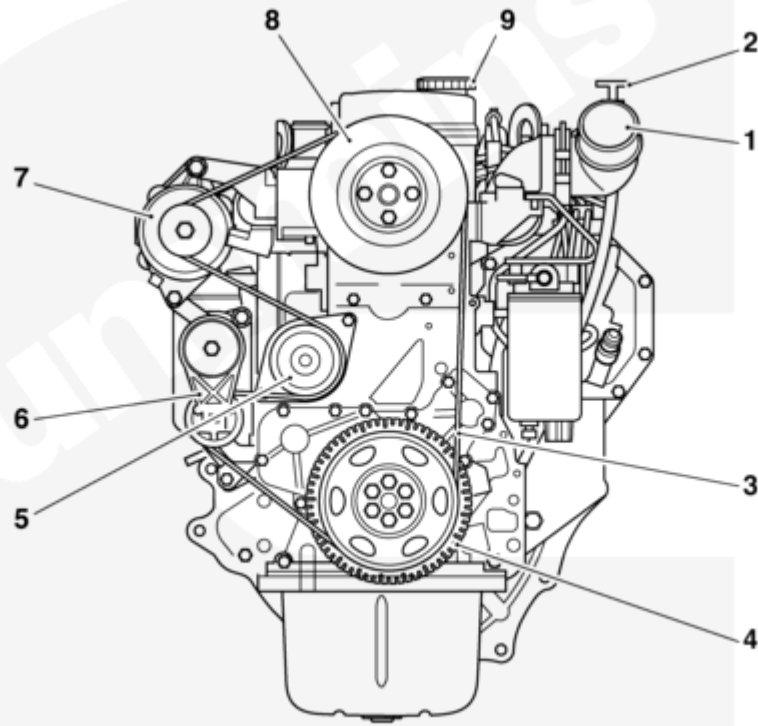

00d00242


Front View - B4.5 RGT

1. Engine air inlet
2. Lubricating oil dipstick
3. Fan drive belt
4. Front pulley
5. Water pump
6. Automatic belt tensioner
7. Alternator
8. Fan pulley
9. Lubricating oil fill.

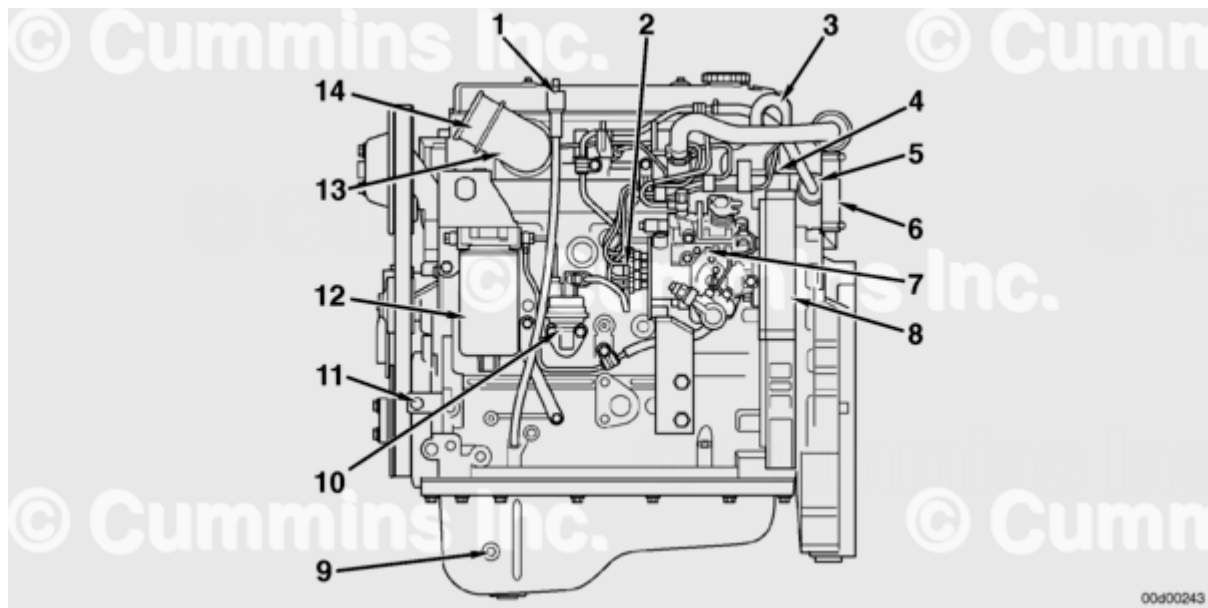


Left Side View - B4.5 RGT

1. Lubricating oil dipstick
2. High pressure fuel lines
3. Rear engine mounting bracket
4. Fuel return line and fuel drain connection
5. Inlet fuel filter
6. Crankcase breather tube
7. Fuel injection pump
8. Engine dataplate
9. Provision for lubricating oil immersion heater
10. Fuel lift pump
11. Magnetic pickup location (3/4-16 UNF)
12. Fuel filter/water separator
13. Intake air preheater (optional)
14. Engine air inlet.

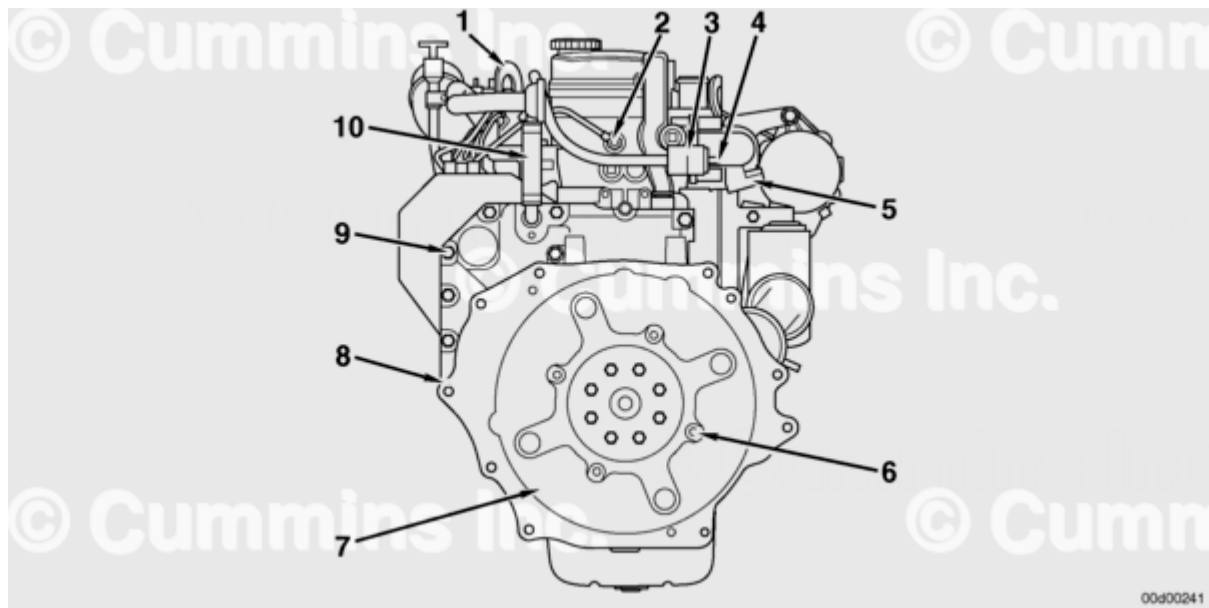

Rear View - B4.5 RGT


1. Rear engine lifting bracket
2. Fuel return and fuel drain connection
3. Inline fuel filter
4. Fuel Inlet connection
5. Exhaust outlet
6. Flexplate mounting holes
7. Flywheel/flexplate
8. Flywheel housing
9. Rear gear train housing
10. Crankcase breather tube.

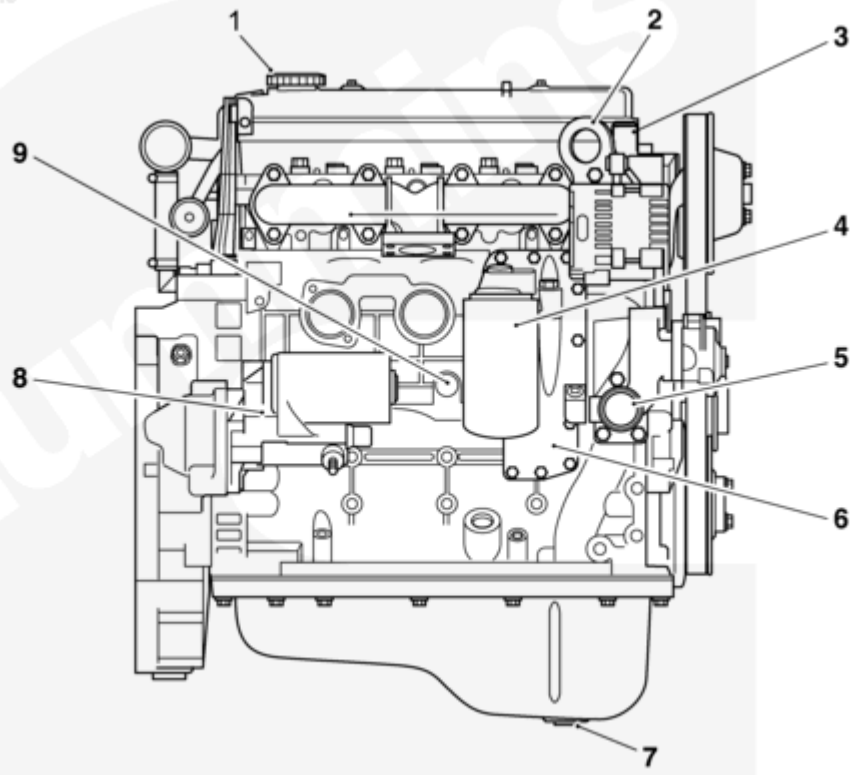

00d00244


Right Side View - B4.5 RGT

1. Lubricating oil fill
2. Front engine lifting bracket
3. Water outlet
4. Lubricating oil filter
5. Water inlet
6. Lubricating oil cooler
7. Lubricating oil drain
8. Starter motor and solenoid
9. Provision for coolant heater.

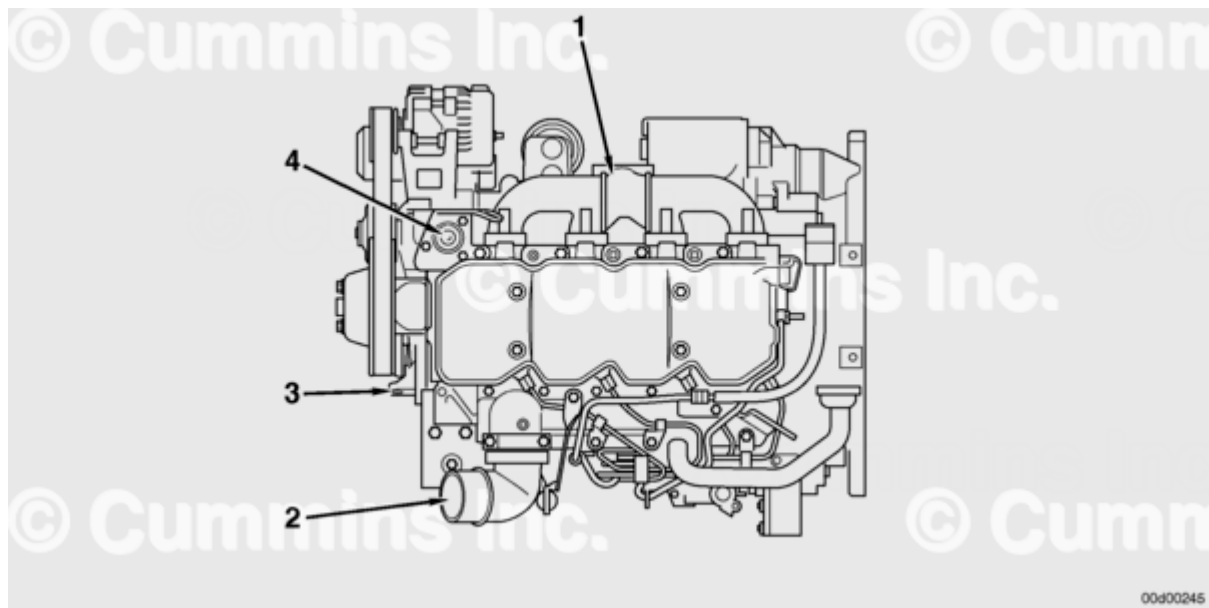

Top View - B4.5 RGT

1. Exhaust manifold
2. Engine air inlet
3. Magnetic pickup location (3/4-16 UNF).
4. Water outlet

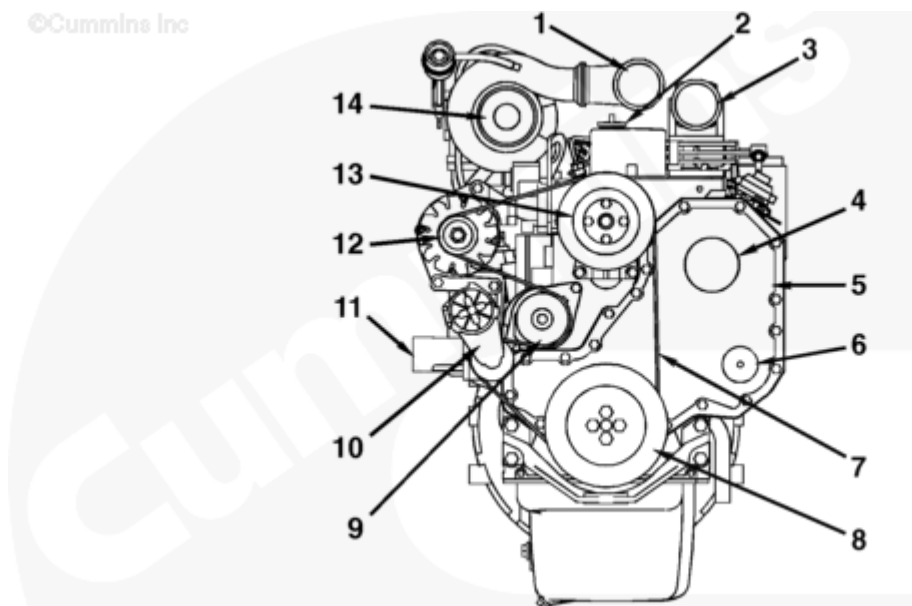


Front View - B5.9 Industrial

1. Turbocharger air outlet
2. Lubricating oil fill
3. Engine air inlet
4. Fuel pump drive cover
5. Front gear cover
6. Accessory drive cover (optional)
7. Fan drive belt

- 8. Vibration damper
- 9. Water pump
- 10. Automatic belt tensioner
- 11. Water inlet
- 12. Alternator
- 13. Fan pulley
- 14. Turbocharger air inlet.


©Cummins Inc

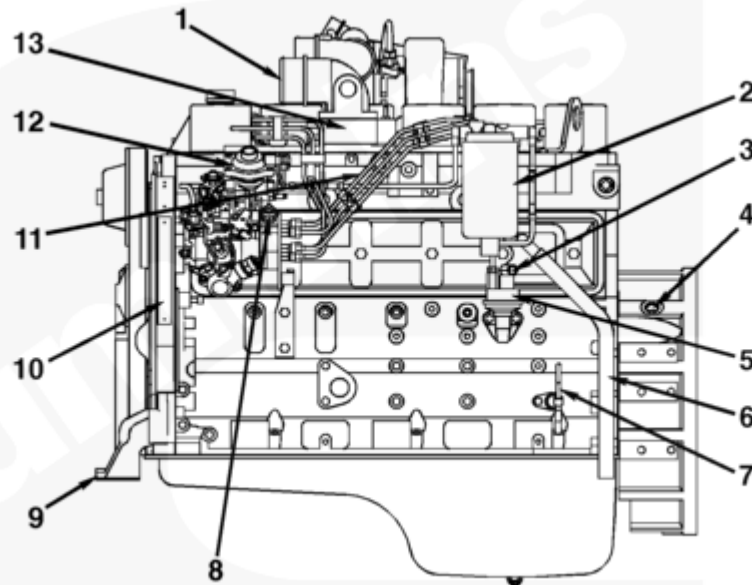

00900348

Left Side View - B5.9 Industrial


- 1. Engine air inlet
- 2. Fuel filter/water separator
- 3. Fuel inlet connection
- 4. Magnetic pickup location (3/4-16 UNF)
- 5. Fuel lift pump
- 6. Crankcase breather tube
- 7. Lubricating oil dipstick
- 8. Fuel drain connection
- 9. Front engine mounting bracket
- 10. Engine dataplate
- 11. High pressure fuel lines
- 12. Fuel injection pump
- 13. Intake air preheater (optional).

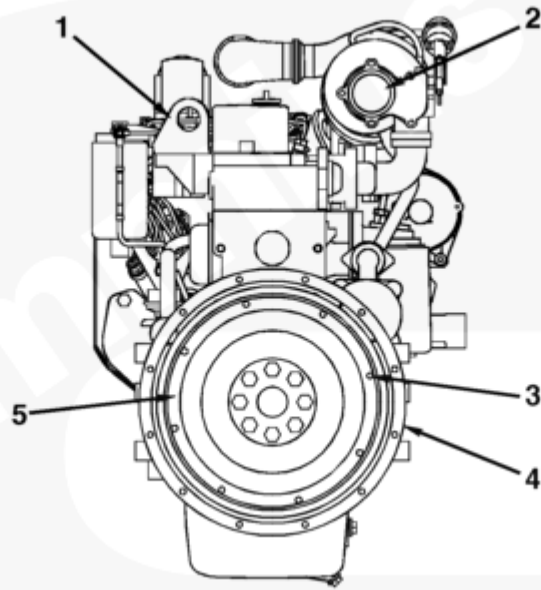

00900349

Rear View - B5.9 Industrial

1. Rear engine lifting bracket
2. Turbocharger exhaust outlet
3. Flexplate mounting holes
4. Flywheel housing
5. Flywheel/flexplate.

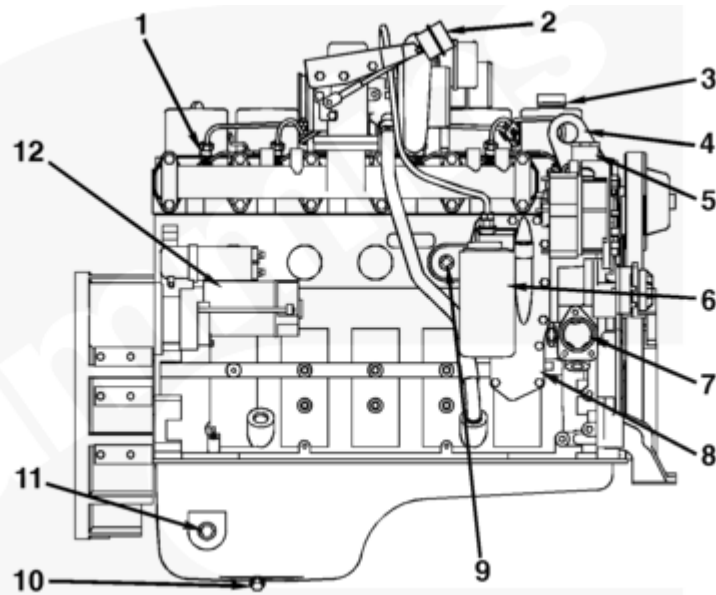


00900350

Right Side View - B5.9 Industrial

1. Fuel injection nozzles
2. Turbocharger wastegate actuator
3. Lubricating oil fill
4. Front engine lifting bracket
5. Water outlet
6. Lubricating oil filter

- 7. Water inlet
- 8. Lubricating oil cooler
- 9. Provision for coolant heater
- 10. Lubricating oil drain
- 11. Provision for lubricating oil immersion heater
- 12. Starter motor and solenoid.

©Cummins Inc

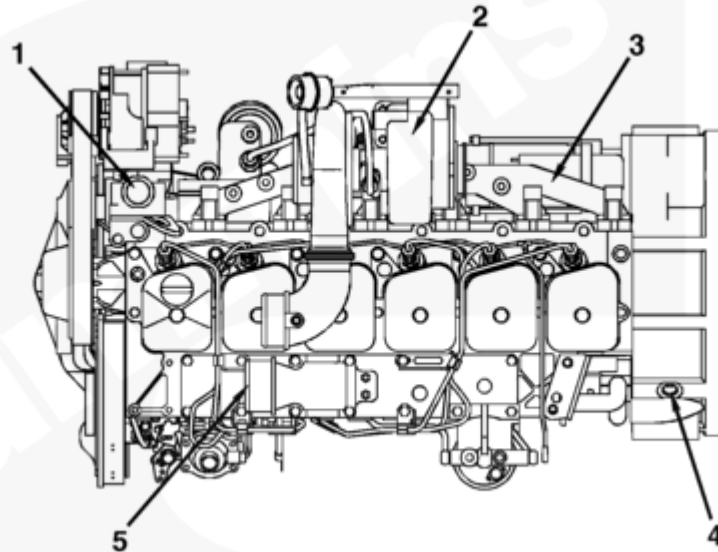

00900362

Top View - B5.9 Industrial

- 1. Water outlet
- 2. Turbocharger
- 3. Exhaust manifold
- 4. Magnetic pickup location (3/4-16 UNF)
- 5. Engine air inlet.