

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Electrical test lead, Part Number 3823993
- Electrical test lead, Part Number 3823994
- Electrical test lead, Part Number 4919043
- Electrical test lead, Part Number 5299368
- Electrical test lead, Part Number 5394609
- Electrical test lead, Part Number 5394610.

Additional Service Items

- No additional service items required.


General Information

The transmission gear oil pressure and temperature sensor adapter wiring harness connects the drive application wiring harness or original equipment manufacturer (OEM) sensor wiring harness to the transmission gear oil pressure and temperature sensors.

The primary purpose of this harness is to provide the length necessary to connect the components and provide the connection between the sensors and customer interface box (CIB).

Use the wiring diagram for details.

Note : Not all vessels require the use of the harness. The harness may be supplied by the OEM, therefore the Cummins® service tools listed in this procedure may not fit. See equipment manufacturer service information.

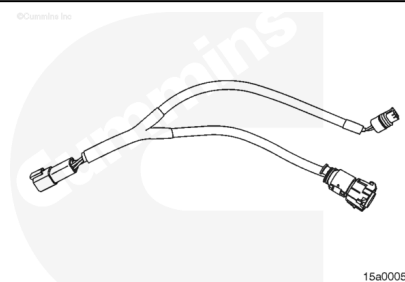

Test

Use the following procedure for detailed component diagrams.

Refer to Procedure 208-002 in Section E.

(/qs3/pubsys2/xml/en/procedures/513/513-208-002.html)

Use the wiring diagram, if necessary.

Check the harness for connectivity and damage. Use the following procedure for general resistance measurement techniques. Refer to Procedure 019-360 in Section 19.


(/qs3/pubsys2/xml/en/procedures/99/99-019-360.html)

Use the above Select Service Tools Section for test lead information.

Use the following procedure for general inspection techniques.

Refer to Procedure 019-361 in Section 19.

(/qs3/pubsys2/xml/en/procedures/99/99-019-361.html)

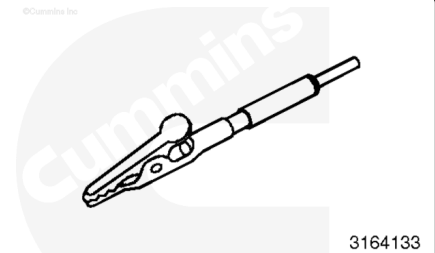

3164133

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.


- Disconnect the batteries. See equipment manufacturer service information.

Remove

Disconnect the transmission gear oil cooler pressure temperature sensor adapter wiring harness from the sensors and drive application wiring harness or OEM sensor wiring harness.

If necessary for repair, remove the harness.

Note the harness routing and location of harness mounting points for installation.

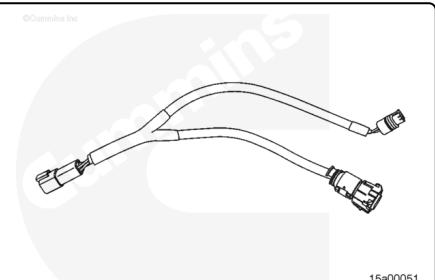


15a00051

Install

Connect the transmission gear oil cooler pressure temperature sensor adapter wiring harness to the sensors and drive application wiring harness or OEM sensor wiring harness.

Route and secure the harness to mounting points noted during removal.

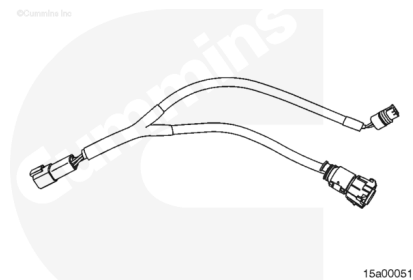

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. See equipment manufacturer service information.
- Perform system test to verify proper function. Refer to Procedure 015-047 in Section 15. (</qs3/pubsys2/xml/en/procedures/513/513-015-047.html>)