

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Electrical test lead, Part Number 3823993
- Electrical test lead, Part Number 3823994.

Additional Service Items

- No additional service items required.

General Information

The exhaust temperature switch is used to indicate an over temperature condition of the exhaust and is located on the exhaust plumbing.

Note : The content of this procedure is for the Cummins®-supplied part. Some applications may use an exhaust temperature sensor instead of a switch. Refer to the engine service manual if a sensor is used.

Initial Check

Use the following procedure for information on using the ED-4 to troubleshoot sensor issues. Refer to Procedure 015-035 in Section 15 (</qs3/pubsys2/xml/en/procedures/513/513-015-035.html>).

Preparatory Steps


⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.
- Clean the area around the switch.

Remove

Disconnect the switch connector from the harness.
Remove the switch from the exhaust plumbing.

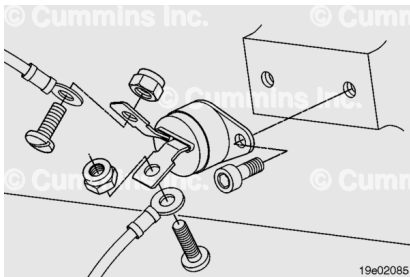


Clean and Inspect for Reuse

Inspect the harness connector and switch for the following:


- Cracked or broken connector shell, if equipped
- Missing or damaged connector seals, if equipped
- Dirt, debris, or moisture, in or on the connector pins
- Corroded, bent, broken, pushed back, or expanded pins
- Chipped, cracked, extruded or damaged switch.

Repair or replace parts as necessary.

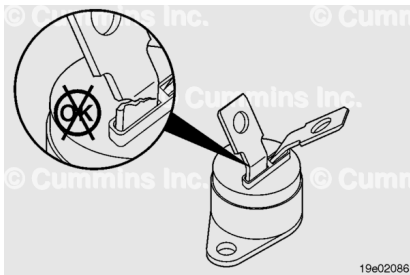

Measure across the switch terminals and compare with the table shown below.

Temperature +/- 12°C	Temperature +/- 10°F	State	Resistance Ohms
Below 99°C	Below 210°F	Open	10 or Less
Above 121°C	Above 250°F	Closed	100k or More

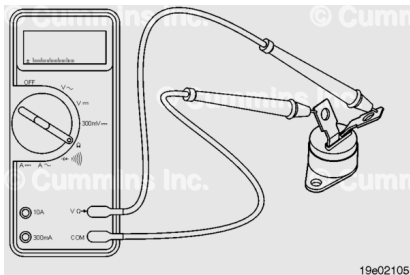


Install

Install the switch into the exhaust plumbing.

Tighten the mounting screws hand-tight.

Connect the harness to the switch.

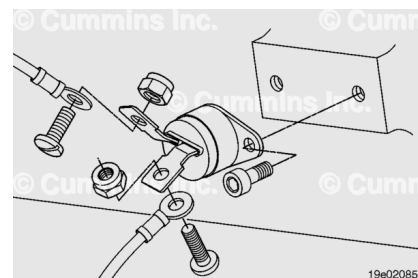

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. See equipment manufacturer service information.
- Operate the engine. Check for leaks.
- Perform system test to verify proper function. Refer to Procedure 015-047 in Section 15. (</qs3/pubsys2/xml/en/procedures/513/513-015-047.html>)