

Trainings ▾


Preparatory Steps

- Remove the alternator drive pulley. Refer to Procedure 009-010 in Section 9.
(</qs3/pubsys2/xml/en/procedures/56/56-009-010-tr.html>)




Remove

Remove the three hex head capscrews.

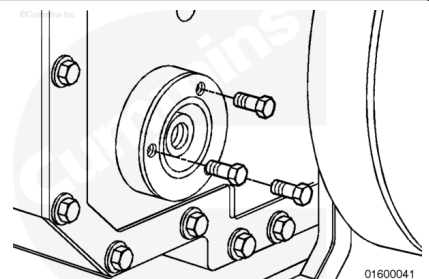


Remove the seal assembly from the gear cover and shaft.

Note : If a washer is fitted behind the seal (applicable to engines built between January and June 2001), discard this washer, along with the old accessory drive seal.

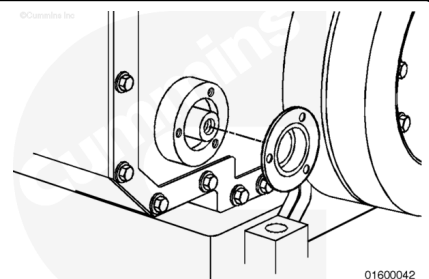

Machine


If reusing the old pulley, machine 2.1 mm [0.08 in] from the length of the pulley and update the part number accordingly.

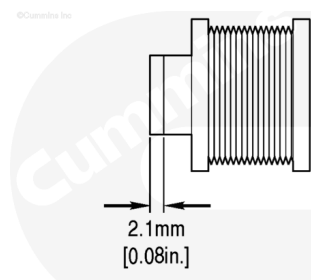

01600217

The illustration displays the pulley assembly:


1. Shaft
2. Washer
3. Seal
4. Machined-off area of pulley (old pulley **only**)
5. Pulley

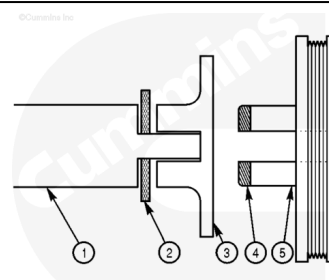


01600224

Install

The right-bank drive pulley does **not** require the mounting spacer provided in the drive seal service kit. Discard the spacer for the right-bank repair procedure.

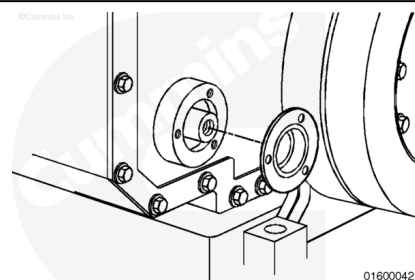

Install the washer onto the shaft.

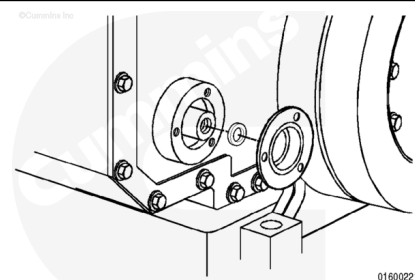


Note : Care must be taken **not** to allow the wear sleeve to separate from the seal during handling.

Install the alternator drive seal.

Align the mounting holes, and insert the three capscrews.

Make sure to tighten the mounting capscrews evenly.

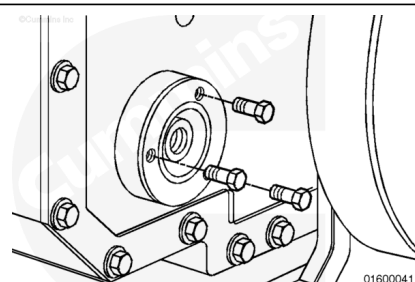


Torque Value: 10 n•m [89 in-lb]

Finishing Steps

- Install the alternator drive pulley. Refer to Procedure 009-010 in Section 9.
(/qs3/pubsys2/xml/en/procedures/56/56-009-010-tr.html)

©Cummins Inc.

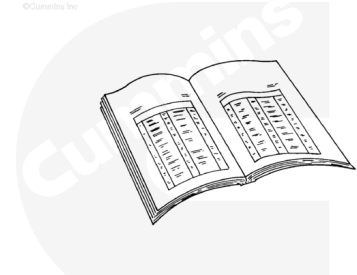

ck800wa