


Trainings ▾

Install

Separate the rotational and stationary part of the seal.

Locate the stationary part of the seal on the end of the seal installation tool, Part Number 5573257.

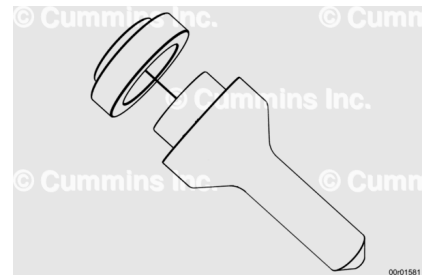

Put the spacer on the shaft.

Slide the tool on to the end of the shaft.

Tap the end of the installation tool with a mallet to push the stationary part of the seal into the gear housing.

The spacer **must** be installed, or the seal will **not** locate correctly.



Place the rotational part of the seal on top of the pulley shaft.

Use seal installation tool, Part Number 5573258 to install the seal on to the pulley with the aid of a mallet.

Note : If you are moving from an older style seal that utilizes three bolts for installation to the new seal a new design pulley must also be purchased.

