


Trainings ▾

Install


The upper bearings contain an oil hole. The lower bearings do **not** have an oil hole.

Both bearings are marked on the back side indicating location (UPPER or LOWER) and the size (STANDARD [STD] or OVERSIZE [OS]). If the bearing is oversize, the amount of oversize is indicated in U.S. customary inches.


If the crankshaft was **not** ground, use the same size bearing that was removed [STD, 0.010, 0.020, or 0.030].

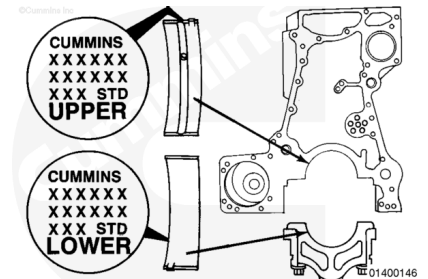

The crankshaft will be stamped on the end of the number 1 counterweight to indicate if it has been ground under size. Thrust bearing size is stamped on a crankshaft counterweight adjacent to the thrust location.

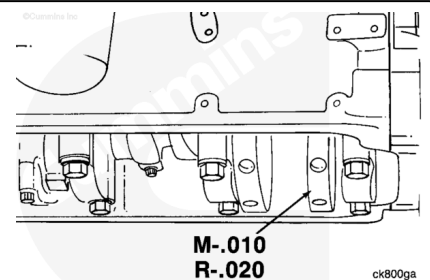

The location of the main bearing caps, beginning from the front of the engine block, are number 1 through number 7 for the QSK45, and number 1 through number 9 for the QSK60.

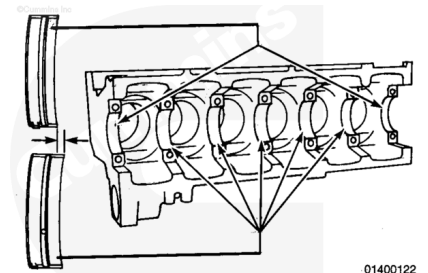


⚠ CAUTION ⚠

Prevent dirt from mixing with the lubricant. Dirty lubricant can cause low hour failures.

Use a lint-free cloth to clean the main bearings and main bearing mounting surfaces.

Do **not** lubricate the backs of the main bearings.

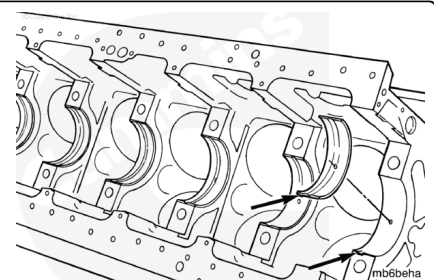


Align the tang in the main bearing with the slot in the engine block. Install the bearings. The end of the bearing **must** be even with the mounting surface for the main bearing cap.

Lubricate the bearings with Lubriplate™ 105, or equivalent.

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

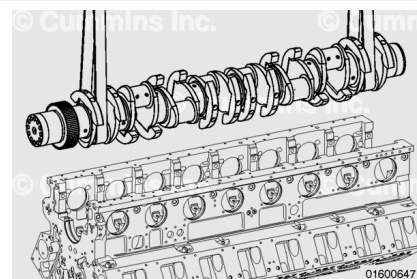

Use a lint-free cloth to clean the crankshaft bearing journals.

Install the crankshaft with the gear at the front of the engine block.

Note : The QSK45 tungsten counterweighted crankshaft **must only** be installed in engines intended for use in certain applications. Make sure the intended engine application is appropriate for use with this crankshaft.