


Trainings ▾

Remove

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

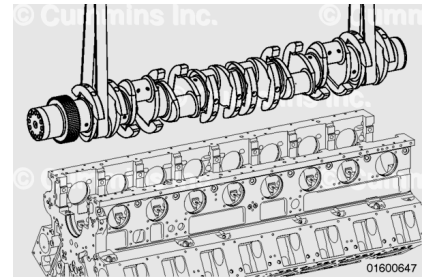

Use a nylon sling and a hoist to remove the crankshaft.

Remove and mark the upper main bearings. Mark the location of the bearing on the tang.

