

Trainings ▾

Install

Note : Do not separate the crankshaft seal from the carrier during installation. This could cause damage to the seal faces and scrolls resulting in premature failure of the seal and oil leakage.


Note : The use of a guide pin will make seal alignment more accurate.

Note : Do not remove the seal from its packaging unless you are able to start and finish the installation in one action. Leaving the seal exposed out of its packaging can result in dirt ingress into the seal and result in premature failure of the seal and oil leakage.

Apply a light coating of clean engine oil to lubricate the rear rubber diameter of the seal.


Install the crankshaft seal carrier onto the crankshaft dry. Do **not** lubricate it.

Use hand pressure to push the rear crankshaft seal onto the crankshaft as far as possible.

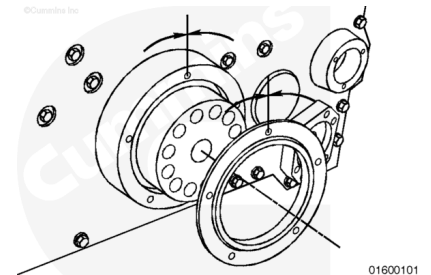

⚠ CAUTION ⚠

Do not use a hammer on the tool. Damage to the threads will result. The tool can bind to the crankshaft because of the narrow tolerances.

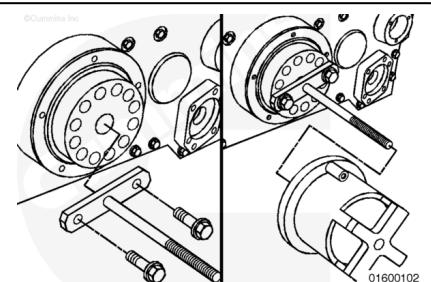


Use the Front and Rear Crankshaft Seal Installation and Removal Tool Kit, Part Number 3163349, to install the front crankshaft seal.

Install the five front crankshaft seal mounting capscrews.

Tighten the capscrews alternately and evenly.

Torque Value: 10 n•m [89 in-lb]

©Cummins Inc.

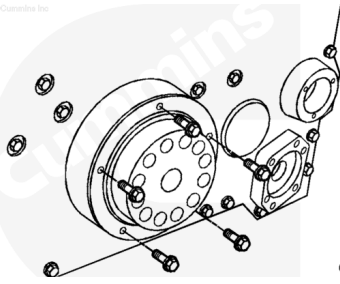

01600098

Last Modified: 23-Feb-2016
