


Trainings ▾

Install

⚠ CAUTION ⚠

All the holes on the outside diameter of the shaft must be in the correct position or failure from lack of lubrication will result.

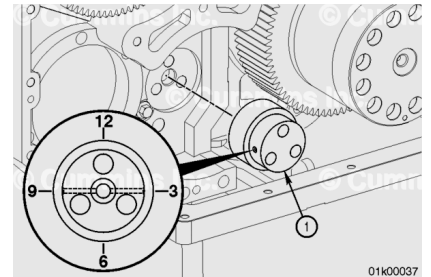

For assembly purposes, the recommendation is to have the water pump idler gear part number facing away from the cylinder block.

The water pump idler shaft (1) **must** be installed so the holes on the outside diameter of the shaft are located at the 3 o'clock and 9 o'clock positions.


The grooves in the thrust washer must be turned toward the gear.

Use Lubriplate™ 105, or equivalent. Lubricate the gear bushing, idler shaft, and thrust washer.

Rotate the idler shaft as necessary to align the mounting capscrew holes.

Lubricate the three capscrews with clean engine oil.

Assemble the parts as shown.

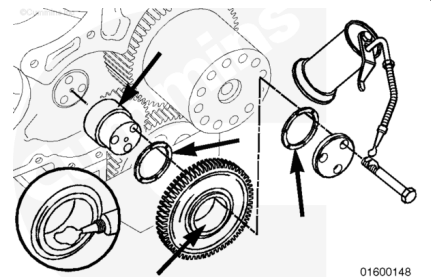


Use the three capscrews to pull the shaft into the bore.

Tighten the capscrews in the sequence shown in the illustration.

Tighten all three capscrews evenly to each torque value step.

Torque Value:


1. 80 n•m [59 ft-lb]
2. 165 n•m [122 ft-lb]
3. 280 n•m [207 ft-lb]

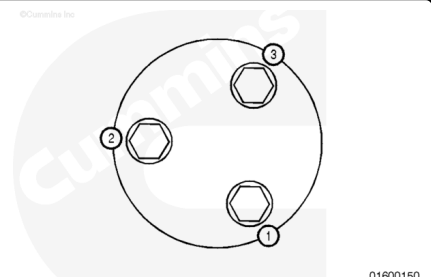

Use a dial indicator to measure the idler gear end clearance.

Water Pump Idler Gear - End Clearance

mm		in
0.15	MIN	0.006
0.33	MAX	0.013

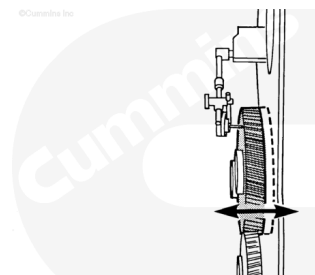

if4001a

If the clearance is **not** within specifications, check for foreign material between the parts, or check for proper location of the thrust washer. Oversize thrust washers are available.

Last Modified: 30-Aug-2023