


Trainings ▾

Install


⚠ CAUTION ⚠

Do not attempt to install the piston cooling nozzle when the piston is at bottom dead center. The nozzle will be damaged and can result in piston failure.

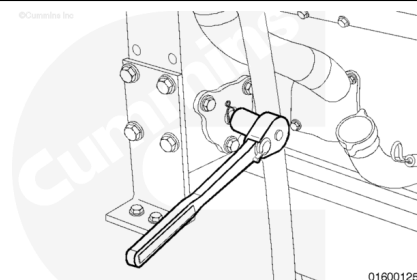

Rotate the engine barring device to position the pistons for best access to the piston cooling nozzle mounting pad.

Gently install both sections of the dual-piston cooling nozzle, making sure the locating pin in the short section is properly placed into the cylinder block, and the longer section locating tab slides over the locating pin and is properly routed toward the adjacent cylinder.

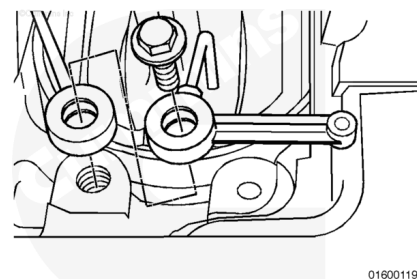

Align the banjo connection of both piston cooling nozzle sections, and install the capscrew through both sections.

Install the capscrew that mounts the long nozzle clip to the cylinder block.

Tighten the capscrews.

Torque Value:


M14 Banjo Capscrew

1. 70 n•m [52 ft-lb]

Torque Value:

M10 Capscrew

1. 45 n•m [33 ft-lb]

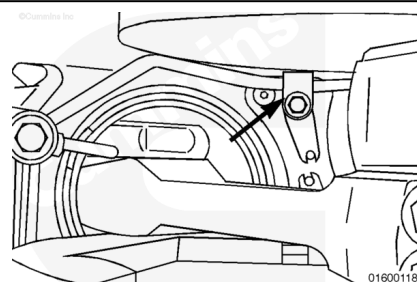

The torque values for the thin and thick based nozzles are the same. When installing the thin based nozzles, the center capscrew containing Loctite™ **must** be run down and torqued at the same time. This prevents the Loctite® from setting before the final torque is applied.

Last Modified: 04-May-2015
