


Trainings ▾

Remove


⚠ CAUTION ⚠

Do not attempt to remove the piston cooling nozzle when the piston is at bottom dead center. The nozzle will be damaged and can result in piston failure.

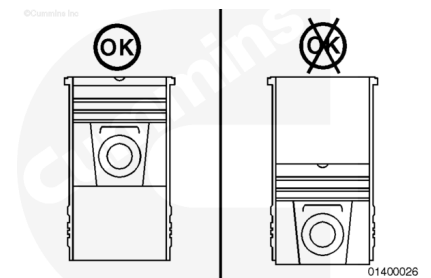

Rotate the engine, using the barring device, to position the pistons for best access to the piston cooling nozzles.


The left-bank crankshaft journal for the cylinder being worked on **must** be approximately 20 degrees before top dead center; the right-bank **must** be approximately 20 degrees after top dead center.

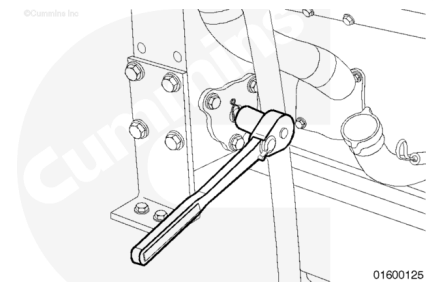

⚠ CAUTION ⚠


Handle the nozzles with care. Damage to the nozzles can result in piston failure.

The piston cooling nozzle is a dual-nozzle configuration that mounts on a pad between the cylinders and at an outboard location.

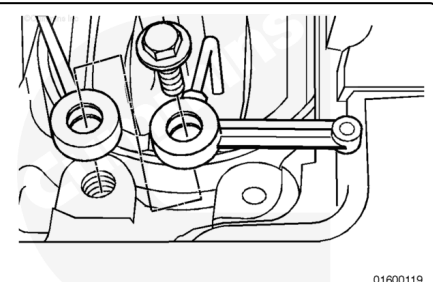

Remove the capscrew that mounts the long nozzle clip to the block at the center of the Vee.

Use a 13-mm [0.51-in] socket, 12-inch extension, and a long handled ratchet.

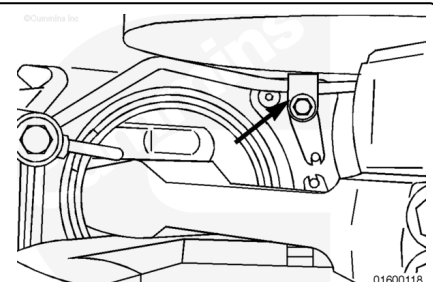

Remove the banjo capscrew that connects both nozzles on the outboard side of the cylinder block.

Remove both sections of the dual-piston cooling nozzle.

The cross bank nozzle is supported by a cap on the locating dowel. Do **not** pry down. Remove with caution.

Piston cooling nozzles can easily be damaged and **must** be treated with care. Do **not** reuse piston cooling nozzles that have been bent or mutilated. Use of damaged piston cooling nozzles can result in severe engine damage.

