

Trainings ▾

General Information

Note : Two different piston and liner combinations are available for this engine platform. The ferrous cast ductile (FCD) piston **must** be used in combination with a nitrided cylinder liner. The steel piston **must** be used in combination with a high boron liner. Each of these pistons has a corresponding piston ring set that **must** be used. The piston ring sets are **not** transferable between the different piston types.


Install

Do **not** install the piston rings until the pistons are installed on the rods.

The piston rings are marked with the part number. The shipping package is marked with the location. The part number on the ring **must** be positioned toward the top of the piston.

Use a ring expander, Part Number ST-1269, or equivalent, to install the piston rings.

Note : Verify that the ring part numbers are facing toward the top of the piston on engines with steel pistons.

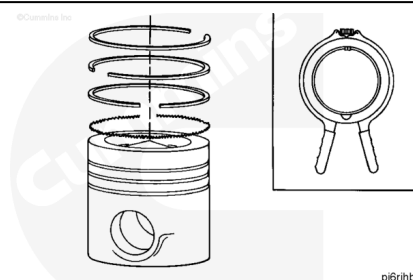

Rotate the rings until the gaps are positioned as illustrated.

Do **not** align the gap of a ring with the piston pin bore.

The gap in the oil ring expander **must** be turned 180 degrees opposite the gap on the oil ring.

