


Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

This assembly weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

Remove the cylinder head. Refer to Procedure 002-004 (</qs3/pubsys2/xml/en/procedures/56/56-002-004-shopds.html>).

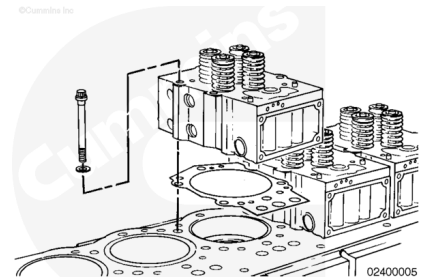


Measure

⚠ CAUTION ⚠


Do not use an impact wrench to tighten the liner pusher plate screw. Excessive torque will cause damage to the liner installation tool.

Install the cylinder liner using the liner installation tool (1), Part Number 3164870, or equivalent. Refer to Procedure 001-028 (</qs3/pubsys2/xml/en/procedures/56/56-001-028-tr.html>) to install the cylinder liner.

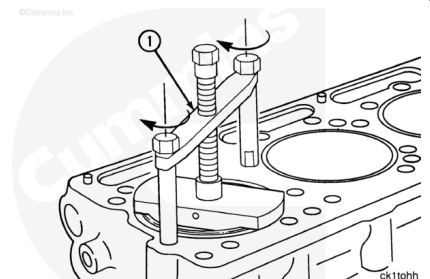


Use a depth gauge block, Part Number 3164438, or equivalent. Position the depth gauge block so the indicator needle will contact the liner flange on the outside of the sealing bead as shown.

Gently push the indicator needle down until it touches the liner. Turn the gauge until the "0" is aligned with the head of the dial. Repeat this step several times to make sure the gauge is set to "0."

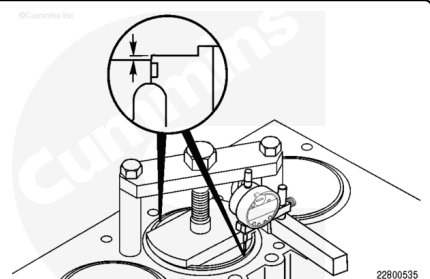

Raise the indicator, and move the gauge block until the indicator will touch the block surface.

Gently push the indicator down until it touches the block. Read the indicator.

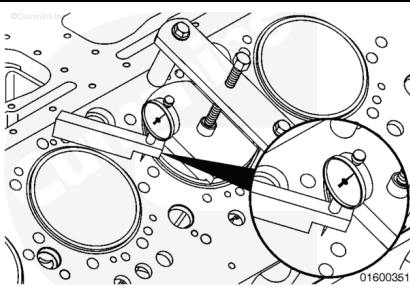

Cylinder Liner Protrusion (New rebuild engine- 0 Hours)

mm		in
0.15	MIN	0.006
0.22	MAX	0.009


Cylinder Liner Protrusion (1+ Hours)

mm		in
0.1	MIN	0.004
0.22	MAX	0.009

Read the cylinder liner protrusion in four places spaced 90 degrees apart on the liner outer diameter.

Note : If the cylinder liner has been removed the protrusion need to be returned to "New Rebuild Engine limits." Refer to Procedure 001-028 (/qs3/pubsys2/xml/en/procedures/56/56-001-028-tr.html) in Section 1.


Use seal rings to increase the protrusion. Machine the counterbore ledge to decrease the protrusion. If necessary, contact a Cummins Authorized Repair Facility.

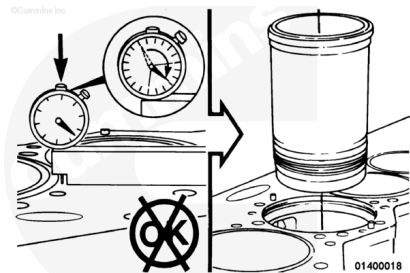

Finishing Steps

⚠ WARNING ⚠

The assembly weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift this assembly.

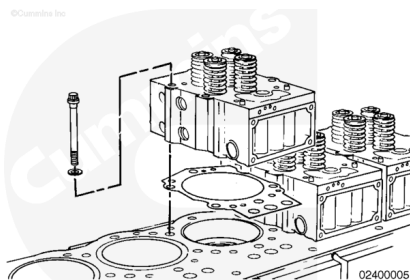

Install the cylinder head. Refer to Procedure 002-004 (/qs3/pubsys2/xml/en/procedures/56/56-002-004-shopas.html).

Last Modified: 21-Sep-2025
