

Trainings ▾


Preparatory Steps

- Remove the rocker lever cover. Refer to Procedure 003-011 (Rocker Lever Cover) in Section 3.
(/qs3/pubsys2/xml/en/procedures/56/56-003-011-tr.html)
- Remove the rocker lever assembly. Refer to Procedure 003-009 (Rocker Lever Assembly) in Section 3.
(/qs3/pubsys2/xml/en/procedures/56/56-003-009-tr.html)



Remove


Remove the crossheads.

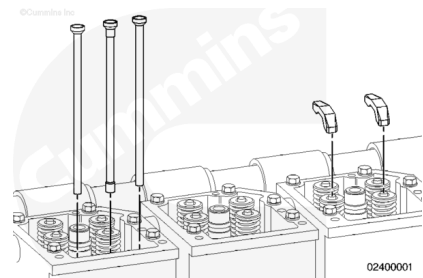

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

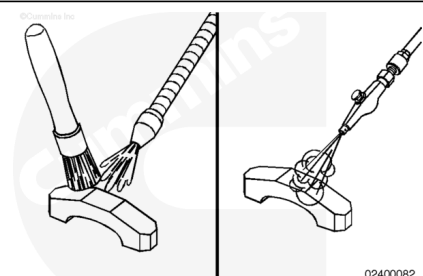


⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying dirt and debris can cause personal injury.


Clean crosshead with solvent and dry with compressed air.

Check the crosshead for cracks.


Check the valve stem contact area for damage.

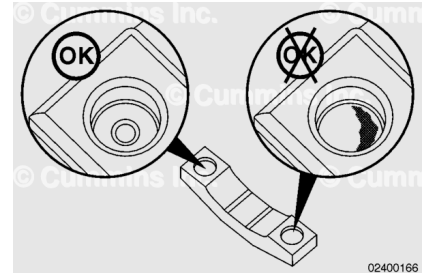

Use a sharpened pencil or scribe to check the valve stem pocket for wear. Check for ridges 360 degrees around the bore pocket. The pocket **must** be smooth. If the pocket does **not** have a smooth radius, do **not** reuse the crosshead.

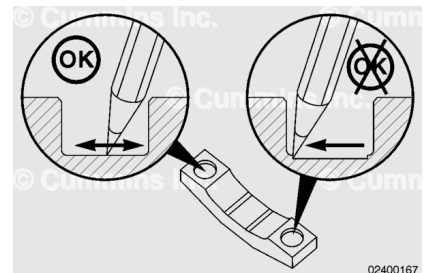


Check the pad of the crosshead for damage. Use a fingernail to check for smoothness. If any wear can be felt, do **not** reuse the crosshead. A shiny appearance with some brownish staining is normal on the crosshead pad surface.

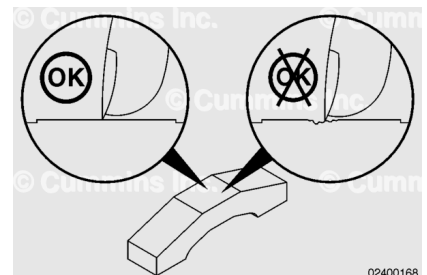

Install

Install the crossheads.

Inspect the valve tips prior to Crosshead installation. Refer to Procedure 002-004 (Cylinder Head) in Section 2.
(/qs3/pubsys2/xml/en/procedures/-002-004-tr.html)

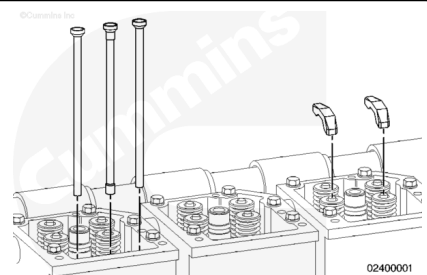

Finishing Steps

- Install the rocker lever assembly. Refer to Procedure 003-009 (Rocker Lever Assembly) in Section 3.
(/qs3/pubsys2/xml/en/procedures/56/56-003-009-tr.html)
- Adjust the overhead components. Refer to Procedure 003-006 (Overhead Set OBC) in Section 3.
(/qs3/pubsys2/xml/en/procedures/56/56-003-006-tr.html)
- Install the rocker lever cover. Refer to Procedure 003-011 (Rocker Lever Cover) in Section 3.
(/qs3/pubsys2/xml/en/procedures/56/56-003-011-tr.html)

©Corning Inc.



ck800wa