

Trainings ▾


Install

Box Type

Install the bracket onto the cam follower cover.

Tighten the capscrews.


Torque Value: 45 n•m [35 ft-lb]

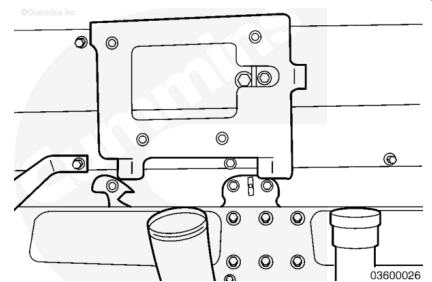

Install the crankcase breather box onto the bracket.

Tighten the capscrews.


Torque Value: 45 n•m [35 ft-lb]

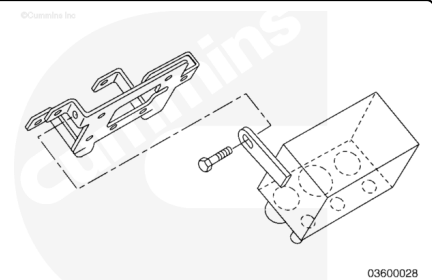

Install the crankcase breather outlet hose.

Tighten the hose clamps.


Torque Value: 6 n•m [53 in-lb]

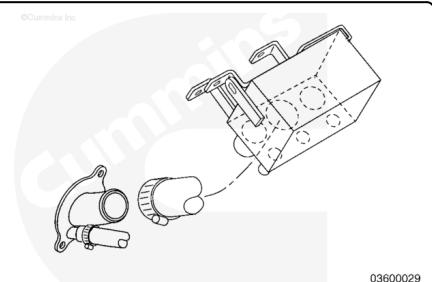

Install the hose (7) between the front left-hand crankcase breather box and the hand hole cover in the left bank number five location.

Tighten the hose clamps.


Torque Value: 6 n•m [53 in-lb]

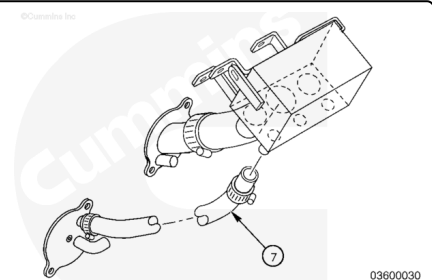

Install the hose (11) between the front center crankcase breather box outlet and the hand hole cover in the left bank number five location.

Tighten the hose clamps.

Torque Value: 6 n•m [53 in-lb]

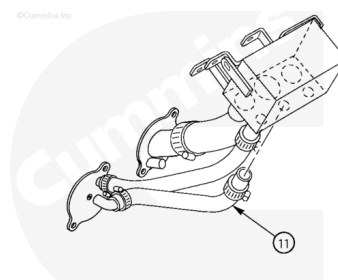


03600032

Install the hose (10) between the front right-hand crankcase breather box outlet and the hand hole cover in the left bank number six location.

Tighten the hose clamps.

Torque Value: 6 n•m [53 in-lb]

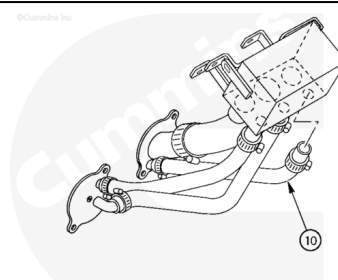


03600034

Install the hose (12) onto the right-hand crankcase breather box outlet.

Tighten the hose clamps.

Torque Value: 6 n•m [53 in-lb]

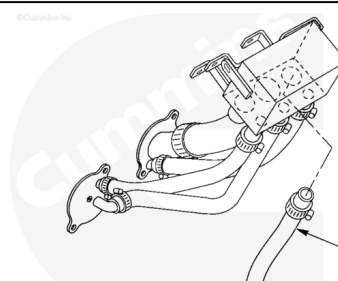

03600036


Install the reducer hose (16).

Make sure the arrow on the blowby sensor is pointing in the same direction as gas flow.

Install the blowby sensor (15).

Tighten the hose clamps.

Torque Value: 6 n•m [53 in-lb]

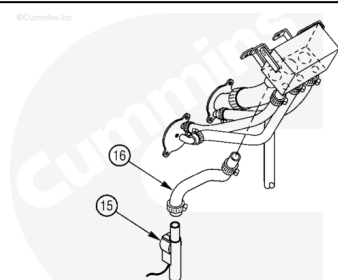


03600038

Install the hose (14) onto the blowby sensor outlet.

Tighten the hose clamps.

Torque Value: 6 n•m [53 in-lb]

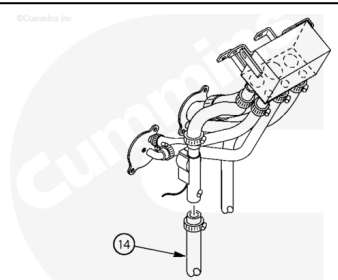


03600040

Install a reducer hose onto the outlet.

Install the blowby sensor feed and hose assembly.

Tighten the hose clamps.


Torque Value: 6 n•m [53 in-lb]

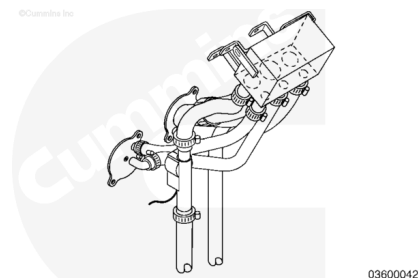

Install the hose brace.

Tighten the capscrew.


Torque Value: 45 n•m [35 ft-lb]

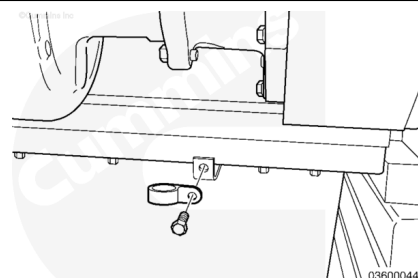

Install the outlet hose into the brace using a P-clip, capscrew, and flange head nut.

Tighten the capscrew.

Torque Value: 45 n•m [35 ft-lb]

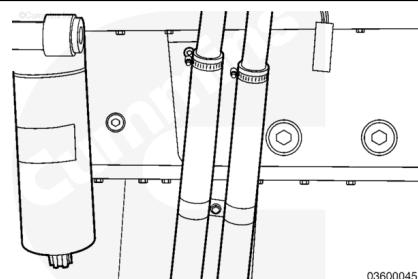


Purse Type

Install the breather box onto the cam follower cover.

Tighten the capscrews.

Torque Value: 45 n•m [35 ft-lb]

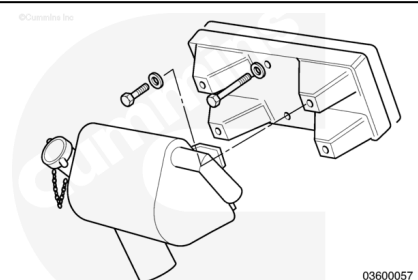

Remove the M42 plug from the orifice, if necessary.

Install the elbow onto the oil pan.


Torque Value: 74 n•m [55 ft-lb]

Install the larger diameter hose onto the elbow.

Torque Value: 183 n•m [135 ft-lb]

Install the small diameter hose onto the elbow.

Torque Value: 130 n•m [96 ft-lb]

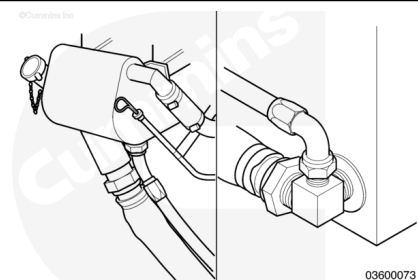

Note : If the hose body rotates during tightening of the upper connections, slacken off, and repeat process. If hose continues to twist, restrain with a suitable strap wrench holding the hose immediately below the upper hexagon.

Install the large diameter hose onto the crankcase breather box.

Torque Value: 130 n•m [96 ft-lb]

Install the small diameter hose onto the crankcase breather box.


Torque Value: 100 n•m [74 ft-lb]

Install the two-piece clamp onto both hoses.

Make sure the clamp does **not** pinch the fire sleeve of the larger diameter hose.

Tighten the capscrew.

Torque Value: 80 n•m [59 ft-lb]

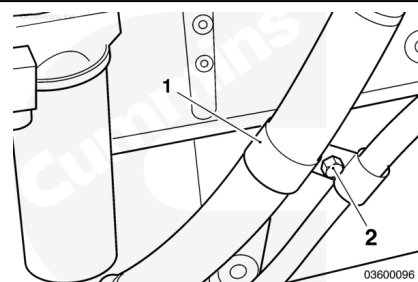


Install the carryover hose to the outlet tube on the crankcase breather box.

Do **not** tighten the hose clamp yet.

Install the blowby "Y" tube onto the carryover hose.

Do **not** tighten the hose clamps yet.

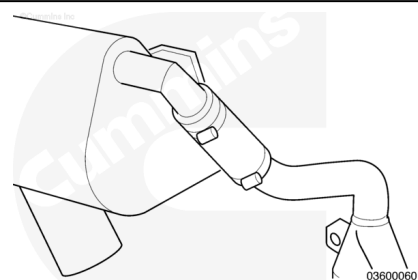


Install the support brace which secures the blowby "Y" tube.

Tighten the capscrew.

Torque Value: 45 n•m [35 ft-lb]

Use a P-clip and capscrew. Fix the blowby "Y" tube to the support brace.

Torque Value: 45 n•m [35 ft-lb]

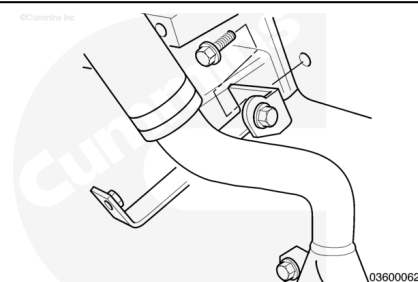

Install the long outlet tube.


Install the blowby sensor.

Install the long tube onto the bottom of the blowby sensor.



Tighten all crankcase outlet hose clamps.

Torque Value: 6 n•m [53 in-lb]

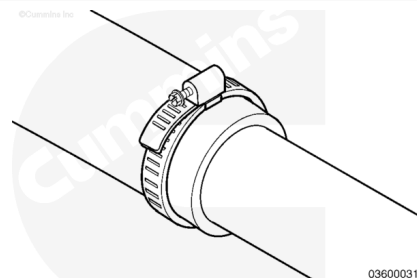

Install the blowby hose brace.


Tighten the capscrew.

Torque Value: 45 n•m [35 ft-lb]

Fit the hoses to the P-clips and fix to the support brace.

Tighten the capscrew.

Torque Value: 45 n•m [35 ft-lb]

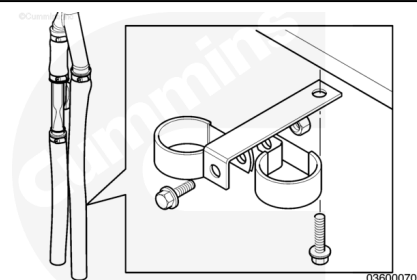


with Electronically Actuated Injector

Install the crankcase breather and four capscrews.

Torque Value:

Crankcase Capscrews

1. 45 n•m [35 ft-lb]

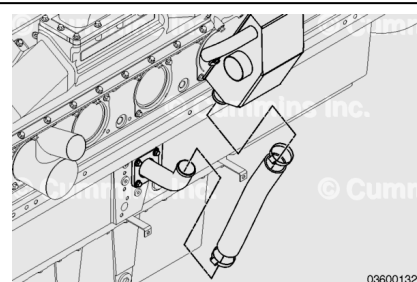


Install the oil drain pipe, gasket, and four capscrews.

Torque Value:

Oil Drain Pipe Capscrews

1. 45 n•m [35 ft-lb]

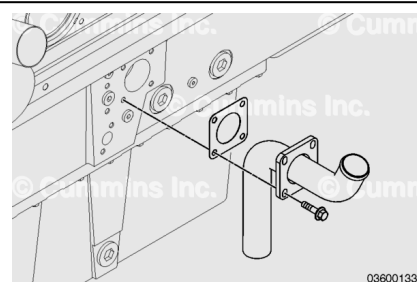


Install a new drain hose and hose clamps.

Torque Value:

Drain Hose Clamps

1. 8 n•m [70 in-lb]

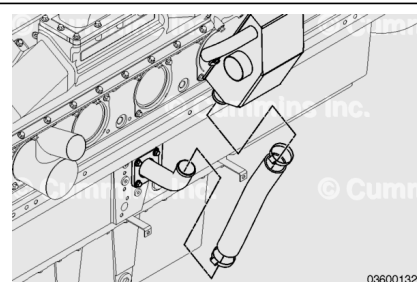


Install the molded hose and two hose clamps.

Torque Value:

Molded Hose Clamps

1.8 n•m [70 in-lb]

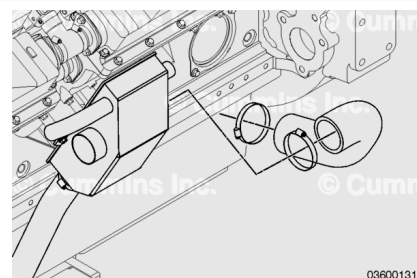


Install the breather tube (with oil fill), hoses and hose clamps.

Torque Value:

Breather Hose Clamps

1.8 n•m [70 in-lb]

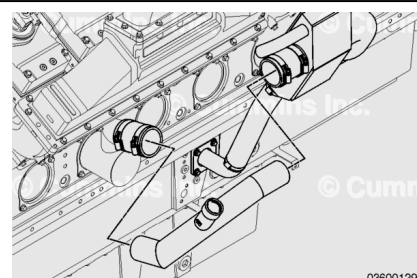


Install the two flexible hoses.

Torque Value:

Flexible Hose Clamps

1.8 n•m [70 in-lb]

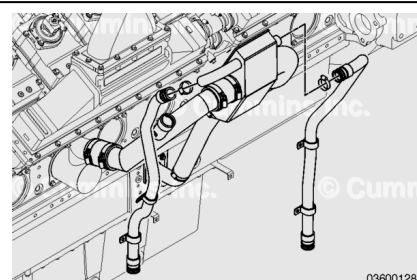

Install the hose P-clips.

Torque Value:

Flexible Hose P-clip Capscrews

1.45 n•m [35 ft-lb]

Operate the engine and check for leaks.

