

Trainings ▾

Preparatory Steps

- Remove the rocker lever cover. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/56/56-003-011-tr.html>).
- Remove the rocker levers. Refer to Procedure 003-009 (</qs3/pubsys2/xml/en/procedures/56/56-003-009-tr.html>).



QSK60 Marine Applications

- Remove the aftercooler heat shields. Refer to Procedure 010-129 (</qs3/pubsys2/xml/en/procedures/56/56-010-129-tr.html>).
- Remove the rocker lever cover. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/56/56-003-011-tr.html>).
- Remove the rocker levers. Refer to Procedure 003-009 (</qs3/pubsys2/xml/en/procedures/56/56-003-009-tr.html>).




Remove

with Mechanically Actuated Injector

It is a recommended service practice to mark the push rods so they can be installed in their original position.


Remove the push rods.

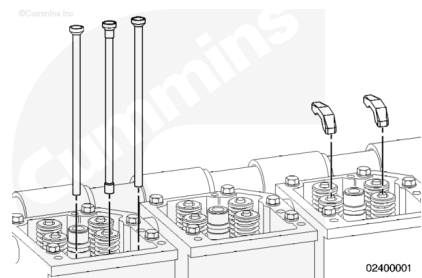

with Electronically Actuated Injector

It is a recommended service practice to mark the push rods so they can be installed in their original position.


Remove the push rods.

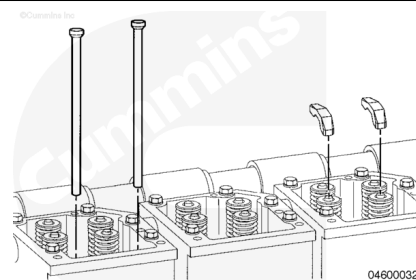

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

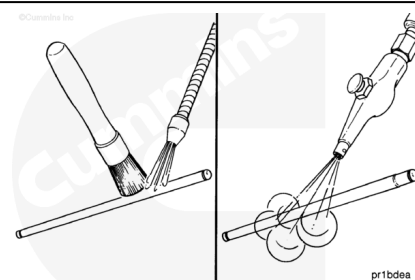

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause bodily injury.

Use solvent to clean the push rods.

Dry the push rods with compressed air.


Inspect the straightness of the pushrod by rolling it on a level surface. Replace the pushrod if it is bent.

Do **not** use or try to straighten a bent pushrod.

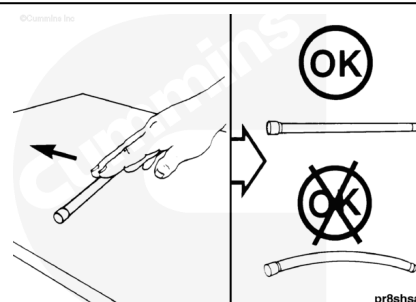

Inspect both ends of the push rods for wear or damage.


The cam follower lever assembly **must** be replaced if a pushrod is worn or damaged in the area where it contacts the socket. Replace both the rocker lever adjusting screw and the push rod if the socket surface in the rod or on the adjusting screw is damaged.

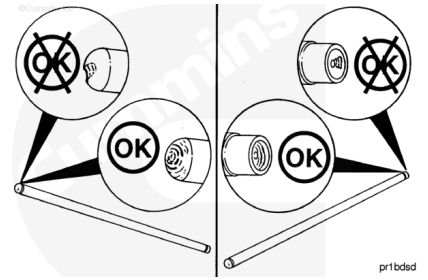

Inspect the socket end of the pushrod for uneven wear or scratches.

If a worn socket is found, the mating adjusting screw in the rocker lever **must** also be replaced.

When parallel scratches are found in the contact area, the pushrod **must** be replaced.

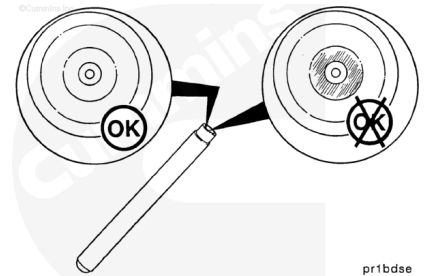


Inspect the ball end of the pushrod.

The contact area **must** show a smooth seating pattern.

If the ball end of the pushrod has parallel grooves and scratches with a raised center, the pushrod **must** be replaced.

If a worn pushrod is found, the mating cam follower lever assembly **must** be replaced.

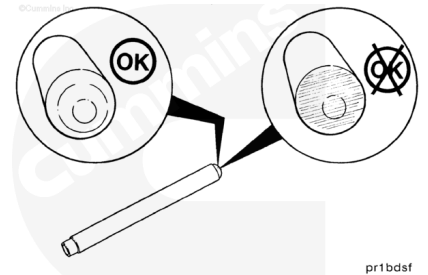

Install


with Mechanically Actuated Injector

Use engine oil to lubricate the sockets in the cam followers.

The injector push rods are wider in diameter and are located in the center of the three push rods. The exhaust and intake push rods are both the same thickness.

Install the push rods.

The push rods **must** be seated correctly in the cam followers.

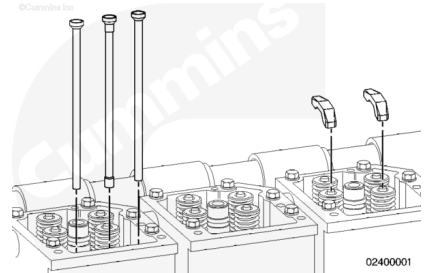


with Electronically Actuated Injector

Use engine oil to lubricate the sockets in the cam followers.

Install the push rods.

The push rods **must** be seated correctly in the cam followers.

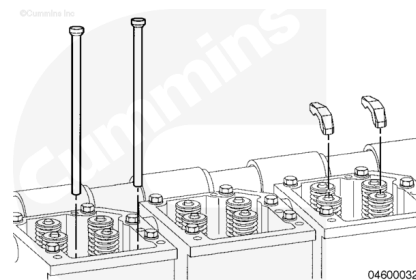

Finishing Steps

Industrial and Power Generation

- Install the rocker levers. Refer to Procedure 003-009 (</qs3/pubsys2/xml/en/procedures/56/56-003-009-tr.html>).
- Adjust the overhead using the outer base circle method. Refer to Procedure 003-006 (</qs3/pubsys2/xml/en/procedures/56/56-003-006-tr.html>).
- Install the rocker lever covers and all related parts. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/56/56-003-011-tr.html>).



QSK60 Marine Applications

- Install the rocker levers. Refer to Procedure 003-009 (</qs3/pubsys2/xml/en/procedures/56/56-003-009-tr.html>).
- Adjust the overhead using the outer base circle method. Refer to Procedure 003-006 (</qs3/pubsys2/xml/en/procedures/56/56-003-006-tr.html>).
- Install the rocker lever covers and all related parts. Refer to Procedure 003-011 (</qs3/pubsys2/xml/en/procedures/56/56-003-011-tr.html>).
- Install the aftercooler heat shields. Refer to Procedure 010-129 (</qs3/pubsys2/xml/en/procedures/56/56-010-129-tr.html>).



