


Trainings ▾


Rotation Check

with Mechanically Actuated Injector

Because the gear pump inlet fitting is located on the side of the gear pump, the fitting can **not** be removed to check the rotation of the gear pump.

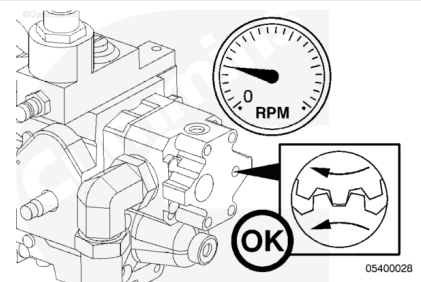


Remove the fuel pump. Refer to Procedure 005-016 (</qs3/pubsys2/xml/en/procedures/56/56-005-016-tr.html>).

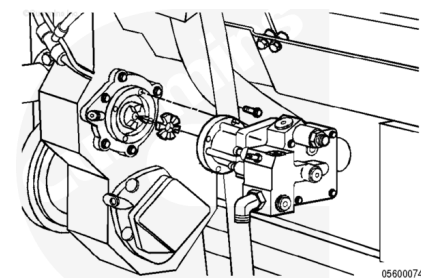

Rotate the fuel pump by hand and check for gear pump rotation.

If the fuel pump gears do **not** rotate, replace or repair the fuel pump. Refer to Procedure 005-016 (</qs3/pubsys2/xml/en/procedures/56/56-005-016-tr.html>).

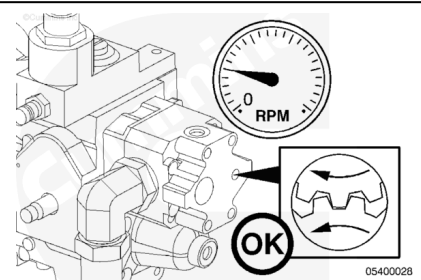

Using a remote starter, Part Number 3376506, crank the engine, and make sure the accessory drive rotates **counterclockwise**.

