


Trainings ▾

Install

⚠ CAUTION ⚠

The tubes, o-rings, and blocks must be free from dirt and damage. Fuel leaks will result with use of damaged material causing internal engine damage and possible crankcase explosion.

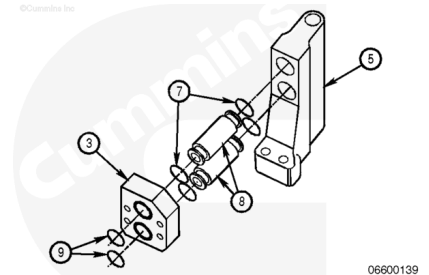

Lubricate the o-ring (7) with clean engine oil prior to assembly.

Install the two fuel transfer tubes (8) with new o-rings (7) into the fuel transfer deck block (5).

Install the fuel transfer manifold block (3) onto the transfer tubes (8).

Lubricate the new o-rings (9) with clean engine oil and install them into the fuel block connection (3).

If the old style fuel transfer block is used, o-rings (9) are **not** required. The old style fuel transfer manifold block has molded-in seals.


The fuel transfer head deck block mounts to the engine between cylinder head number 3 and cylinder head number 4 on the QSK45 engine. The head deck block mounts between cylinder head number 4 and cylinder head number 5 on the QSK60 engine.

Install the fuel transfer head deck block gasket (6) to the correct position on the left or right bank.

Slide the fuel transfer tubes and block assembly (5) into location. Take care that alignment with the gasket (6) is maintained during assembly.

Install the washer (8) onto the banjo bolt (7).

Install the two mounting capscrews (4) and the banjo bolt (7) and washer (8) through the fuel transfer head deck block (5) and gasket (6) into the engine deck.

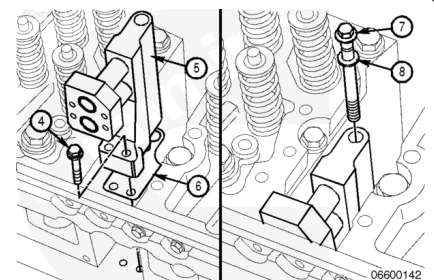


Finger tighten capscrews (4) and banjo bolt (7).

Install the four capscrews (1) through the fuel manifold (2) into the fuel transfer manifold block (3).

Tighten the four capscrews.

Torque Value: 9 n•m [79 in-lb]

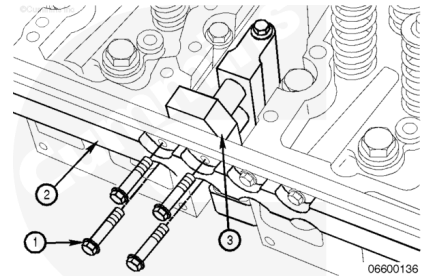

Tighten the two capscrews (4) through the fuel transfer deck block into the engine deck.

Torque Value: 23 n•m [17 ft-lb]

Tighten the banjo bolt (7).

Torque Value: 72 n•m [53 ft-lb]

