


Trainings ▾

Remove

with Mechanically Actuated Injector

⚠ WARNING ⚠

Depending on the circumstance, fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.

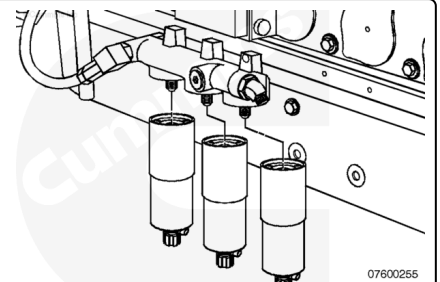

⚠ WARNING ⚠

Do not spill or drain fuel into the bilge area when disconnecting or removing fuel lines, replacing filters, and priming the fuel system. Do not drop or throw filter elements into the bilge area. The fuel and fuel filters must be disposed of in accordance with local environmental regulations.

Remove the fuel filters with fuel filter wrench, Part Number 3400158, or equivalent.

Remove the thread adapter sealing ring(s).

Clean sealing surfaces of the filter head with a clean, lint-free cloth.

