

Trainings ▾

General Information

Note : This procedure applies to engines with mechanically actuated injectors **only**.


Use the following procedures for engines with electronically actuated injectors.

Refer to Procedure 006-075 in Section 6.

(/qs3/pubsys2/xml/en/procedures/56/56-006-075-tr.html)

Refer to Procedure 006-076 in Section 6.

(/qs3/pubsys2/xml/en/procedures/56/56-006-076-tr.html)

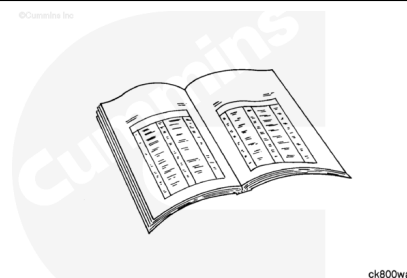


Preparatory Steps

with Mechanically Actuated Injector

⚠ WARNING ⚠

Depending on the circumstance, diesel fuel is flammable. When inspecting or performing service or repairs on the fuel system, to reduce the possibility of fire and resulting severe personal injury, death or property damage, never smoke or allow sparks or flames (such as pilot lights, electrical switches, or welding equipment) in the work area.

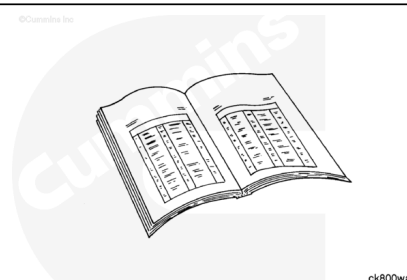

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. Refer to Procedure 013-009 in Section 13. (/qs3/pubsys2/xml/en/procedures/56/56-

013-009.html)


- Close the fuel supply valve before changing the fuel filters, or the overhead tank can drain, causing a fuel leak.

Remove

with Mechanically Actuated Injector

⚠ WARNING ⚠

Depending on the circumstance, fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.

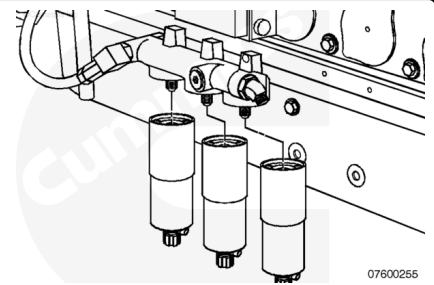


⚠ WARNING ⚠

Do not spill or drain fuel into the bilge area when disconnecting or removing fuel lines, replacing filters, and priming the fuel system. Do not drop or throw filter elements into the bilge area. The fuel and fuel filters must be disposed of in accordance with local environmental regulations.

Remove the fuel filters with fuel filter wrench, Part Number 3400158, or equivalent.

Remove the thread adapter sealing ring(s).

Clean sealing surfaces of the filter head with a clean, lint-free cloth.

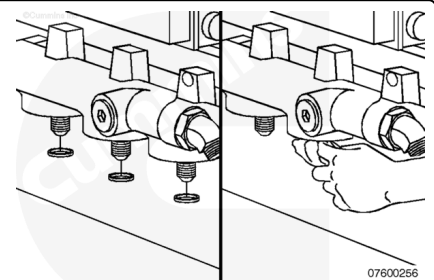


Clean

with Mechanically Actuated Injector

Check that the thread adapter sealing ring (1) has been removed.

Clean the sealing surface of the filter head with a clean, lint-free cloth.

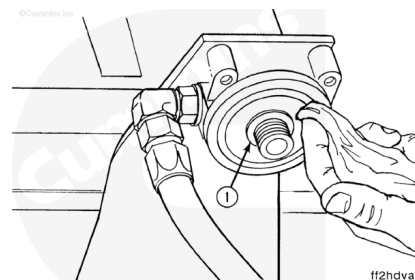

Install


with Mechanically Actuated Injector

Install the new thread adapter sealing ring supplied with the new filter.

A fuel-water separator or fuel filter and water separator combination **must** be installed.


Apply a light coating of clean engine oil to the surface of the filter gasket.

Fill the fuel filter with clean fuel.

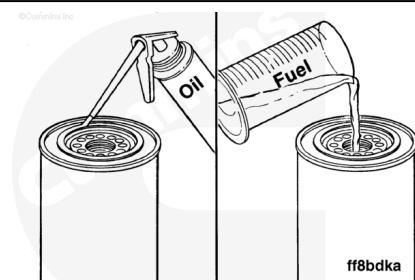

Install the filter on the filter head. Turn the filter until the gasket touches the surface of the filter head.


Tighten the filter an additional $\frac{1}{2}$ to $\frac{3}{4}$ of a turn after the gasket touches the filter head surface.

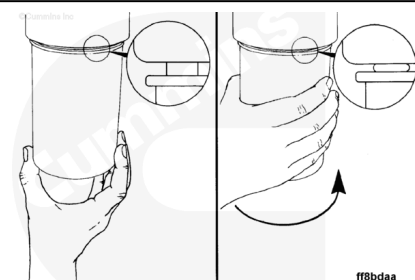

Finishing Steps

with Mechanically Actuated Injector

⚠ WARNING ⚠

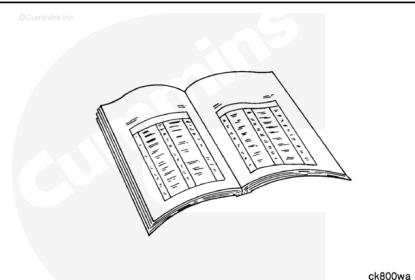

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. Refer to Procedure 013-009 in Section 13. (</qs3/pubsys2/xml/en/procedures/56/56-013-009.html>)
- Open the fuel supply valve.
- Prime the fuel system, if necessary. Refer to Procedure 005-016 in Section 5. (</qs3/pubsys2/xml/en/procedures/56/56-005-016-tr.html>)
- Operate the engine and check for leaks.