

Trainings ▾

Install


with Mechanically Actuated Injector

Install the fuel filter head and install the fuel filter head mounting capscrews.

Torque Value: 55 n•m [41 ft-lb]

Install the fuel filter supply and return hoses.

Clean the gasket sealing surface with a clean, lint-free towel.

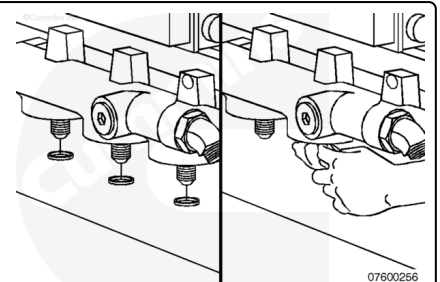


with Electronically Actuated Injector

Stage 2 Filter Head

- Install the fuel filter head assembly to the engine with the six mounting capscrews.

Torque Value: 45 n•m [33 ft-lb]

- Install the fuel supply and return hoses.
- Connect the engine wiring harness to the pressure and temperature sensors on the fuel filter head, if equipped.

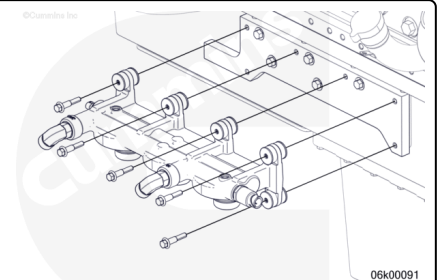

For Generator Model DQKAN with Low NOx Emissions Capability

Note : If the fuel filter head is remote-mounted, reference the equipment manufacturer service information.

Install the fuel filter head assembly onto the engine with the two-piece vibration isolators and six capscrews.

Torque Value: 45 n•m [33 ft-lb]

