


Trainings ▾

Remove with Mechanically Actuated Injector

Remove the fuel filter supply and return hoses.


Remove the fuel filter head mounting capscrews and the fuel filter head.

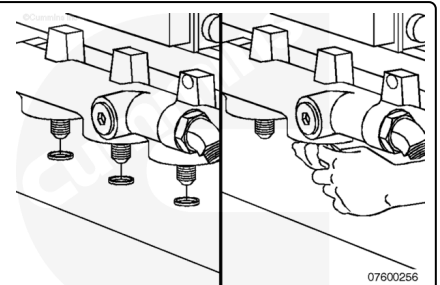

with Electronically Actuated Injector

Remove the six fuel filter head mounting capscrews and the fuel filter head.

Note : For marine applications, the location of the fuel filter head can vary.

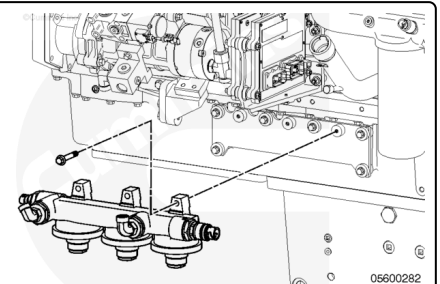

For Generator Model DQKAN with Low NOx Emissions Capability

Note : Some graphics in this procedure are generic and do not depict the correct number of fuel filters.

Remove fuel filter head mounting capscrews and the fuel filter head.

