


Trainings ▾

Measure

with Mechanically Actuated Injector


Use a Compuchek® fitting, vacuum gauge, and adapter. Connect the gauge to the Compuchek® fitting on the fuel pump inlet fitting.

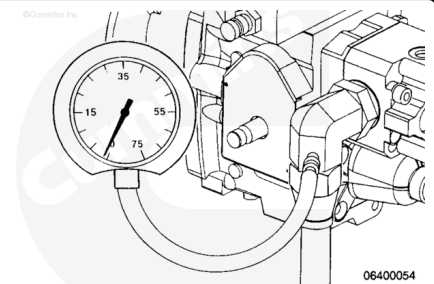

Start and operate the engine at high idle, no load.


Fuel inlet restriction:

- With clean fuel filters: 102 mm-Hg [4 in-Hg]
- With dirty fuel filters: 203 mm-Hg [8 in-Hg].

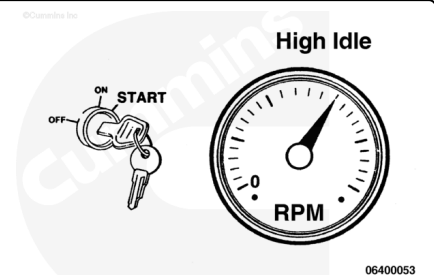

If the restriction is above specifications:

- Change the fuel filter. Refer to Procedure 006-015 (</qs3/pubsys2/xml/en/procedures/56/56-006-015-tr.html>).
- Inspect the fuel lines. Refer to Procedure 006-024 (</qs3/pubsys2/xml/en/procedures/56/56-006-024-tr.html>).

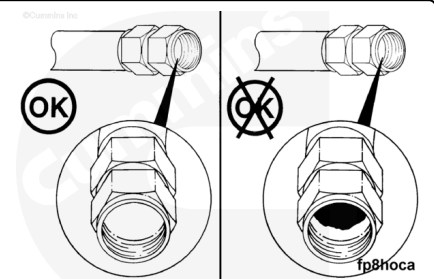


with Electronically Actuated Injector


Stage 1 Filters

Remove the air bleed hose (1) from the air bleed check valve (2).

Remove the air bleed check valve (2) from the drain manifold block (3).

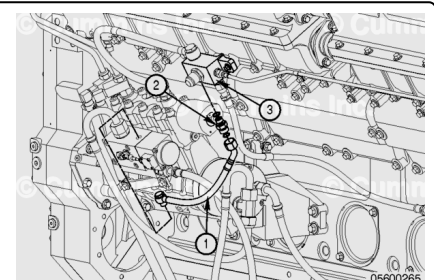

Install the fuel system tester, Part Number, 4918612, in place of the air bleed check valve.

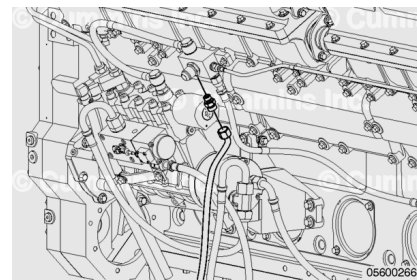


Fuel System Tester	55 n.m	[41 ft-lb]
--------------------	--------	------------

Install the air bleed hose.

Air Bleed Hose	45 n.m	[33 ft-lb]
----------------	--------	------------

Remove the threaded o-ring plug (1) in the inlet and the threaded o-ring plug (2) in the outlet of Stage 1 filter head and replace them with Compuchek® fittings.

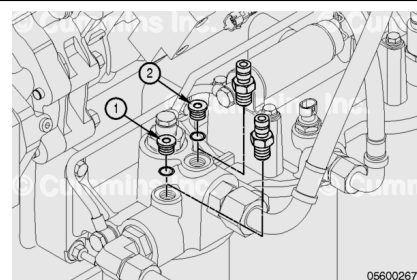


Connect a vacuum gauge and adapter to the Compuchek® fitting in the inlet port (1).

Start and operate the engine at low idle, no load.

Record the Stage 1 inlet restriction.


The fuel inlet restriction maximum is: 102 mm-Hg [4 in-Hg].

If the restriction is above specifications, inspect the fuel lines. Refer to the OEM Troubleshooting and Repair manual to determine the source of the high restriction.

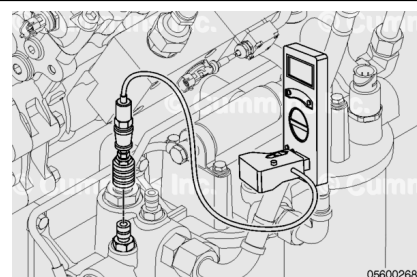


Remove the vacuum gauge and adapter from the inlet port and install it on the Compuchek® fitting in the outlet port (2).

Start and operate the engine at low idle, no load.

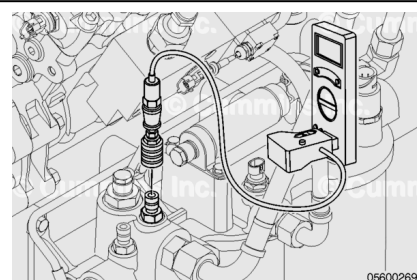

Record the Stage 1 outlet restriction.

Subtract the measurement obtained at the Stage 1 inlet from the measurement obtained at the Stage 1 outlet. This is the Stage 1 restriction.

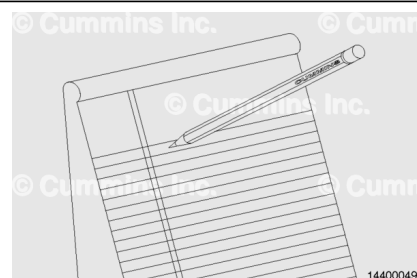

Example:**Stage 1 inlet restriction is 25 mm-Hg [1 in-Hg]**


Stage 1 outlet restriction is 113 mm-Hg [4.5 in-Hg]

Stage 1 restriction is 113 mm-Hg [4.5 in-Hg] - 25 mm-Hg [1 in-Hg] = 88 mm-Hg [3.5 in-Hg]

mm-hg		in-hg
76	MIN	3
152	MAX	6


If the restriction is above specifications, replace the Stage 1 fuel filters. Refer to Procedure 006-015 (</qs3/pubsys2/xml/en/procedures/56/56-006-015-tr.html>).

Remove the vacuum gauge, adapter and Compuchek® fittings from the Stage 1 fuel filter head.

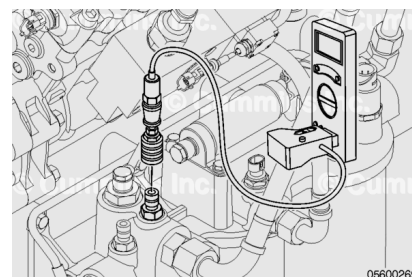


Install the threaded o-ring plugs inlet port (1), and outlet port (2) in the filter head.

Threaded O-ring Plugs	27 n.m	[20 ft-lb]
-----------------------	--------	------------

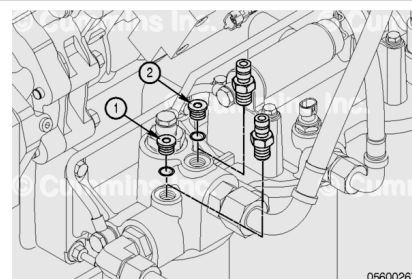

Remove the air bleed hose and fuel system tester from the drain manifold block.

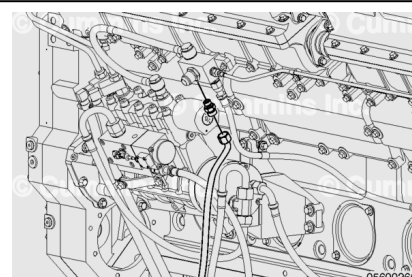


Install the original air bleed check valve (2) into the drain manifold block (3).

Air Bleed Check Valve	55 n.m	[41 ft-lb]
-----------------------	--------	------------


Install the air bleed hose to the air bleed check valve.

Air Bleed Hose	45 n.m	[33 ft-lb]
----------------	--------	------------

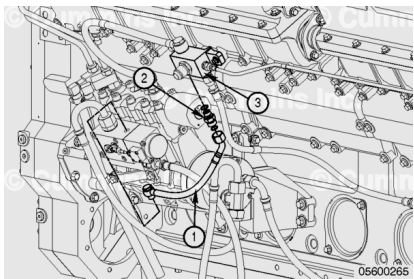

Stage 2 Filters:


Remove the threaded o-ring inlet plug (1) and outlet plug (2) in the inlet of the Stage 2 filter head and replace them with Compuchek® fittings.

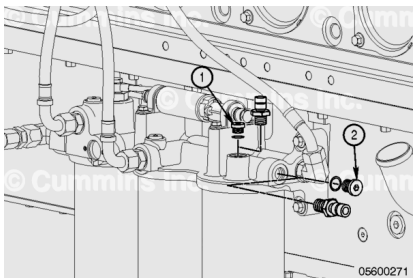

Connect a pressure gauge and adapter to the Compuchek® fitting in the inlet port (1).


Start and operate the engine at high idle.

Record the Stage 2 inlet pressure.

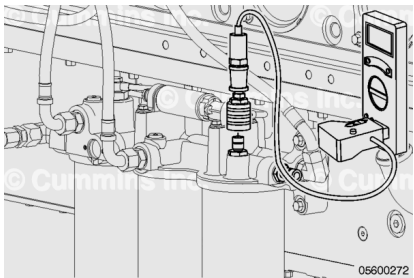


Remove the pressure gauge and adapter from the inlet port and install the pressure gauge and adapter on the outlet port (2).

Start and operate the engine at high idle.

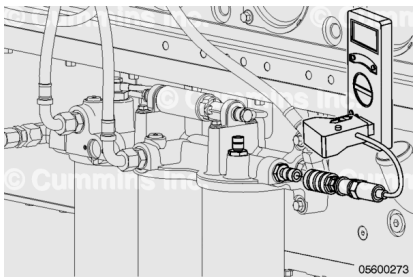

Record the Stage 2 outlet pressure.

Subtract the measurement obtained at the Stage 2 outlet from the measurement obtained at the Stage 2 inlet. This is the Stage 2 filter restriction.

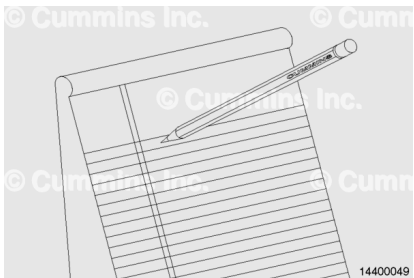

Example:

Stage 2 inlet pressure is 731.5 kPa [104.5 psi]

Stage 2 outlet pressure is 714.0 kPa [102.0 psi]


Stage 2 restriction is 728.0 kPa [104.5 psi] - 714.0 kPa [102.0 psi] = 17.5 kPa [2.5 psi]

kpa		psi
28	MAX	4

kpa		psi
138	MAX	20

If the restriction is above specifications, replace the Stage 2 fuel filters. Refer to Procedure 006-015 (</qs3/pubsys2/xml/en/procedures/56/56-006-015-tr.html>).


Remove the pressure gauge and adapter from the Stage 2 filter head.

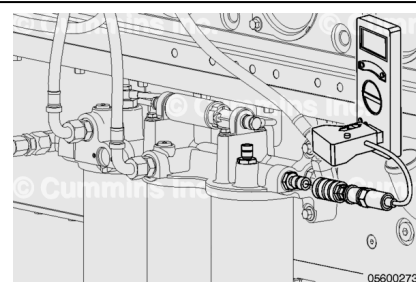

Remove the Compuchek® fittings from the Stage 2 filter head.

Install the threaded o-ring plugs into the inlet (1) and outlet (2) ports in the filter head.

Tighten the plugs.

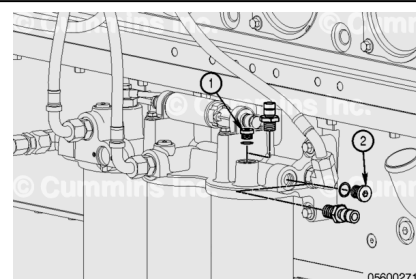

Threaded O-ring Plugs	27 n.m	[20 ft-lb]
-----------------------	--------	------------