

Trainings ▾

Preparatory Steps

with Electronically Actuated Injector

⚠ WARNING ⚠

Depending on the circumstances, fuel is flammable. Keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on the fuel system.



⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

- Clean debris from the fittings and fuel drain lines.
- Disconnect the fuel drain lines from the fuel manifold.

Refer to Procedure 006-013


(</qs3/pubsys2/xml/en/procedures/20/20-006-013-tr.html>).

Remove


with Electronically Actuated Injector

Remove the two unions from the drain manifold block.


1. This union is used to connect the fuel drain line from the fuel tank to the drain manifold block.
2. This union is used to connect the fuel drain line from the fuel block manifold to the drain manifold block.

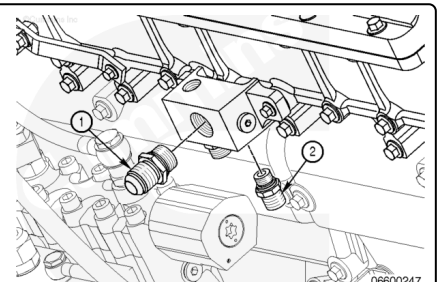


Remove the check valve/union that is used to connect the air bleed line from the fuel pump to the drain manifold block.

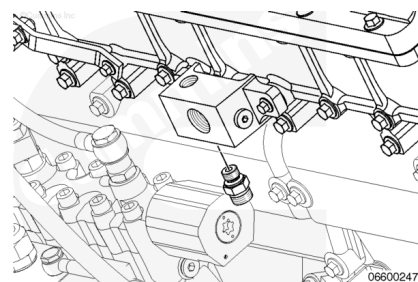


Remove the two capscrews that secure the drain manifold block to the engine and remove the drain manifold block.

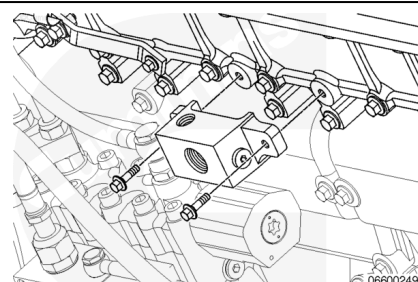

Remove the union used to connect the fuel drain line from the drain manifold block to the fuel block manifold.

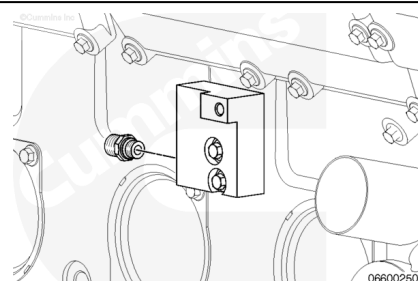

Remove the two capscrews that secure the fuel block manifold to the engine. Discard the gasket.

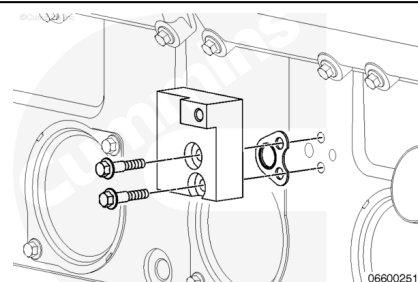

Clean and Inspect for Reuse


with Electronically Actuated Injector

⚠ WARNING ⚠

Some solvents are flammable and toxic. Read the manufacturer's instructions before using.


⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

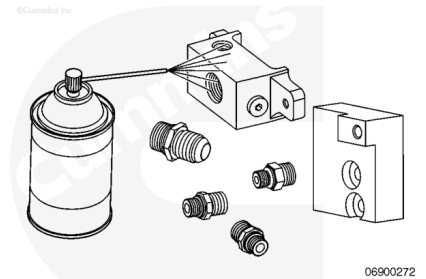


Clean all parts with contact cleaner, Part Number 4824510, or equivalent.


Inspect the drain manifold block and fuel block manifold for cracks, damage, or stripped threads. Replace if damaged.

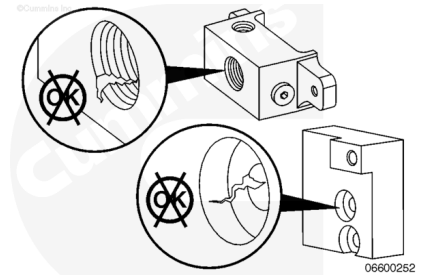


Inspect the union fitting for cracks, damage, or stripped threads. Replace, if damaged.

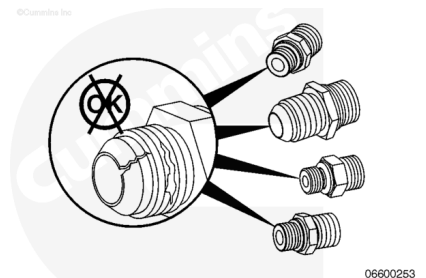

Inspect the o-rings at each end of the unions/check valve for signs of tears or damage. The o-rings **must** be replaced if damage is found.

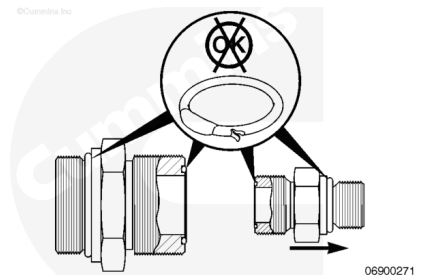


Inspect the capscrews for damage. Replace if necessary.

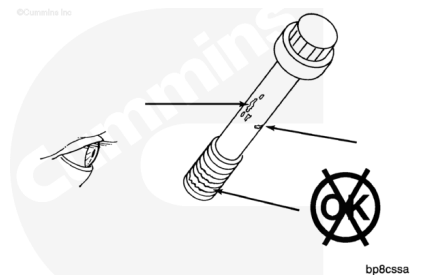

Install

with Electronically Actuated Injector


Install the drain manifold block to the engine and tighten the two capscrews.

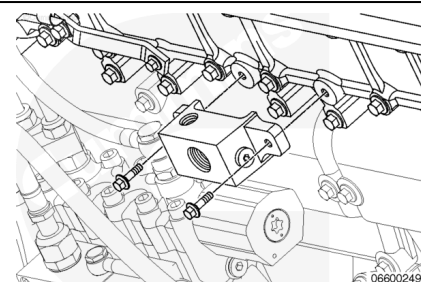

Drain Manifold Block Capscrews	20 n.m	[177 in-lb]
--------------------------------	--------	-------------

Install the two unions in the drain manifold block.

1. This union is used to connect the fuel drain line from the fuel tank to the drain manifold.

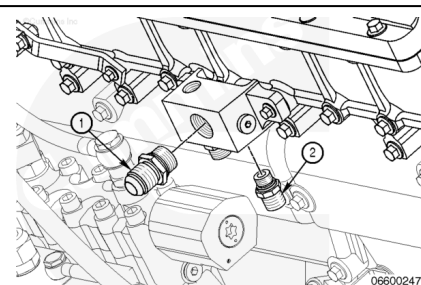


Fuel Drain Union to Fuel Tank	170 n.m	[125 ft-lb]
-------------------------------	---------	-------------

2. This union is used to connect the fuel drain line from the fuel block manifold to the drain manifold block.


Fuel Drain Union to Fuel Block Manifold	70 n.m	[52 ft-lb]
---	--------	------------

Install the check valve/union that is used to connect the air bleed line from the fuel pump to the drain manifold block.

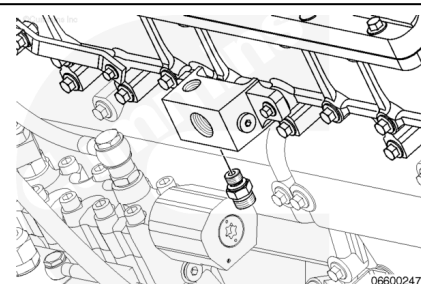


Check Valve/Union	55 n.m	[40 ft-lb]
-------------------	--------	------------

Install the fuel block manifold, new gasket and two capscrews that secure the fuel block manifold to the engine.

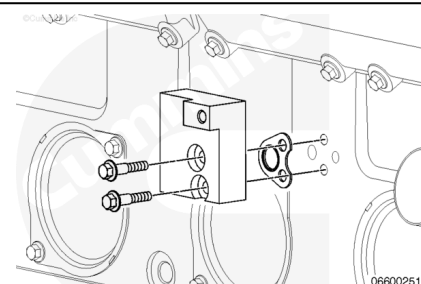

Fuel Block Manifold Capscrews	45 n.m	[33 ft-lb]
-------------------------------	--------	------------

Install the union used to connect the fuel drain line from the drain manifold block to the fuel block manifold.

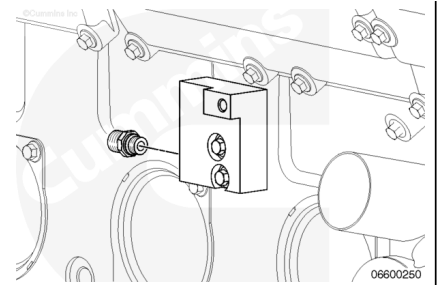

Fuel Drain Union	70 n.m	[52 ft-lb]
------------------	--------	------------

Finishing Steps

with Electronically Actuated Injector

- Connect the fuel drain lines. Refer to Procedure 006-013 (</qs3/pubsys2/xml/en/procedures/20/20-006-013-tr.html>).
- Operate the engine and check for leaks.

