


Trainings ▾

Remove with Mechanically Actuated Injector

Use two wrenches to remove the fuel tubes and hoses.


Support the mating fittings with a wrench. Loosen the fuel tube nuts with the other wrench.

Remove the fuel tubes and hoses.

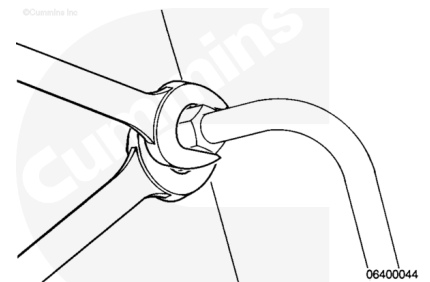

⚠ WARNING ⚠

Depending on the circumstances, fuel is flammable. When performing any or all of the following procedures to remove supply lines and related components, keep all cigarettes, flames, pilot lights, arcing equipment, and switches out of the work area and areas sharing ventilation to reduce the possibility of severe personal injury or death when working on a fuel system.

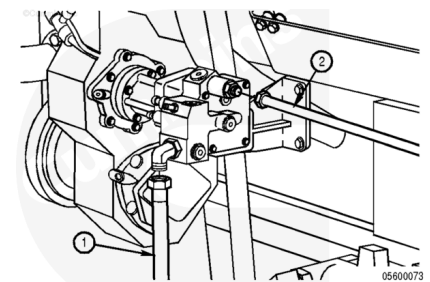

⚠ CAUTION ⚠

Very small amounts of dirt and debris can be very harmful to the injectors and the cone seats on the injectors. Extra care is required to keep the connections clean during removal and installation. The fuel supply line(s) must be placed in a plastic bag or connections be covered immediately to keep them clean when removed from the engine. Failure to do so can cause fuel system failure.

Disconnect the fuel inlet (1).


Disconnect the electronic fuel control valve supply tube (2).

Remove the o-rings.

with Electronically Actuated Injector


Remove the following items and cover the fittings with a plastic bag, or place the items inside a plastic bag.

1. Outlet of the gerotor to inlet of stage two filter
2. Outlet of stage two filter to the inlet of the fuel pump pressurizing assembly
3. Fuel supply to gerotor
4. Fuel bypass to gerotor.

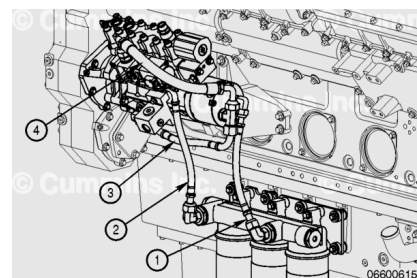


Remove the following and cover the fittings with a plastic bag, or place the items inside a plastic bag.

Remove the union from the fuel pump and discard the o-ring.

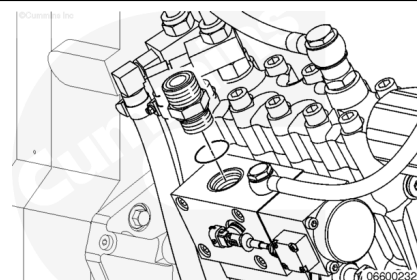


Remove the following and cover the fittings with a plastic bag, or place the items inside a plastic bag.

Remove the tee fitting from the gerotor fuel pump. Discard the o-rings.

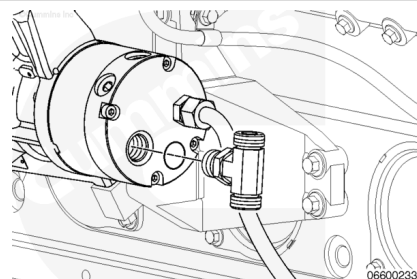


Remove the following and cover the fittings with a plastic bag, or place the items inside a plastic bag.

Remove the union from the gerotor pump. Discard the o-rings.

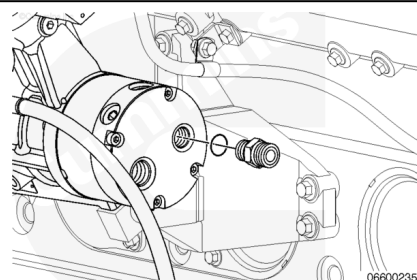

Remove the following and cover the fittings with a plastic bag, or place the items inside a plastic bag.


Remove the union from the inlet of the fuel pump. Discard the o-ring.

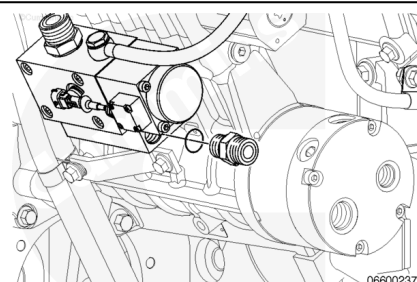

For Generator Model DQKAN with Low NOx Emissions Capability:


Remove the following items and cover the fittings with a plastic bag, or place the items inside a plastic bag.

1. Fuel supply to gerotor
2. Fuel bypass to gerotor
3. Stage 2 filter inlet tube
4. Stage 2 filter outlet tube
5. Pump Inlet supply hose
6. Gerotor outlet tube

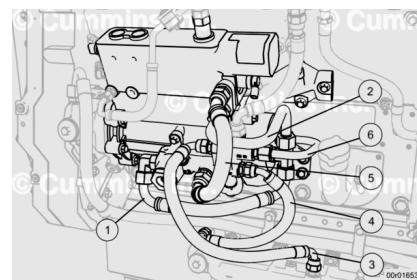


Remove the unions from the fuel inlet manifold and fuel pump gerotor, and cover with a plastic bag, or place the item in a plastic bag.

Discard o-rings.

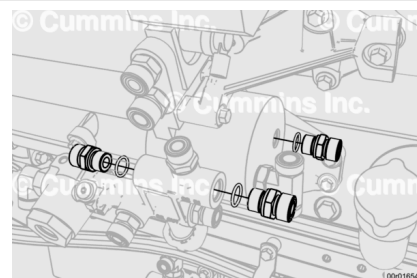


Remove the unions from the fuel inlet manifold and fuel pump, and cover with a plastic bag, or place the item in a plastic bag.

Discard o-rings.

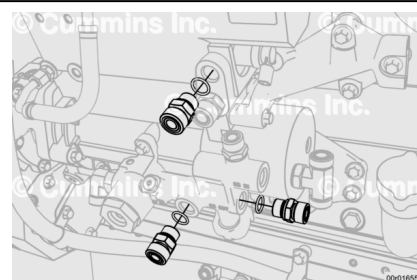


Remove the union and tee fitting from the fuel inlet manifold and fuel pump, and cover with a plastic bag, or place the item in a plastic bag.

Discard o-rings.

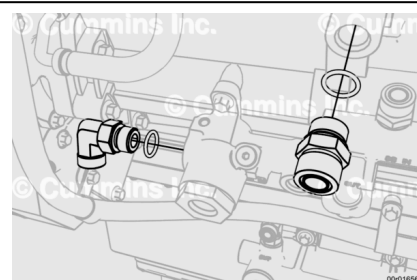


Remove the union from the fuel inlet manifold and cover with a plastic bag, or place the item in a plastic bag.

Discard o-rings.

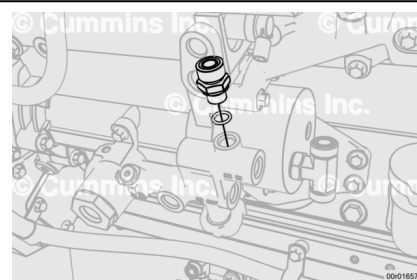


Remove the tee fitting from the gerotor fuel pump the and cover the fitting with a plastic bag, or place the item inside a plastic bag.

Discard the o-rings.

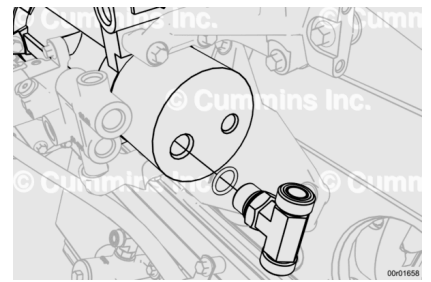

Remove the union from the gerotor and cover the fittings with a plastic bag, or place the items inside a plastic bag.

Remove the union from the gerotor pump. Discard the o-rings.

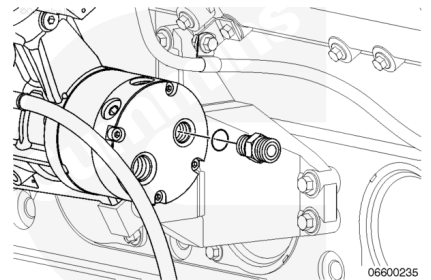


Marine Applications


Remove the following and cover the fittings with a plastic bag, or place the items in a plastic bag.

Remove the fuel supply lines to the inlet and outlet of the stage two filter head.

Discard the o-rings.

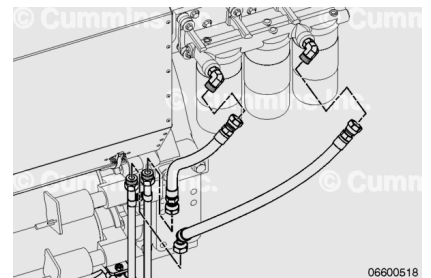

Remove the capscrews and clamps securing the fuel line to the mounting plates.

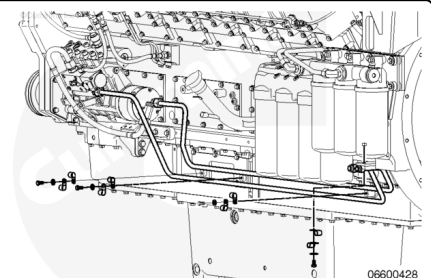


Remove the following and cover the fittings with a plastic bag, or place the items in a plastic bag.

Disconnect the fuel supply lines at the bottom of the pan rail.


Remove the fuel supply lines to the remote mounted stage 2 filter.

Discard the o-rings.

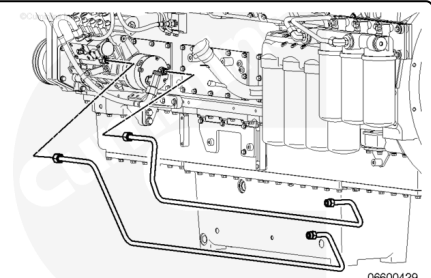


Remove the following and cover the fittings with a plastic bag, or place the items in a plastic bag.

1. Outlet of the gerotor to inlet of stage two filter.
2. Outlet of stage two filter to the inlet of the fuel pump pressurizing assembly.

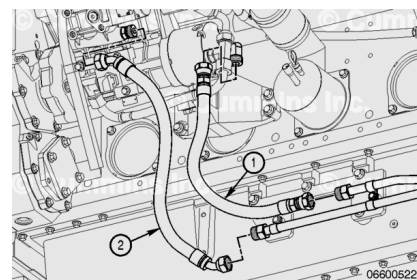


1. Fuel supply to gerotor.
2. Fuel bypass to gerotor.

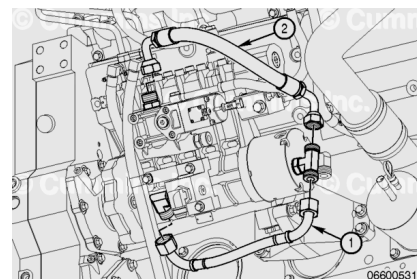

Remove the following and cover the fittings with a plastic bag, or place the items inside a plastic bag.


Remove the union from the fuel pump pressurizing assembly and discard the o-ring.

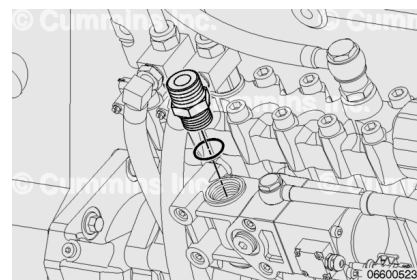

Remove the following and cover the fittings with a plastic bag, or place the items inside a plastic bag.

Remove the tee fitting from the gerotor fuel pump.

Discard the o-rings.

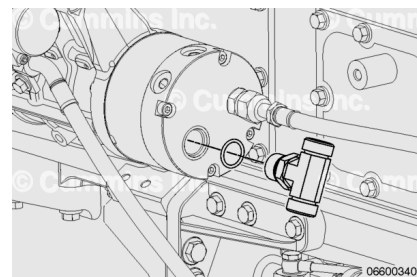

Remove the following and cover the fittings with a plastic bag, or place the items in a plastic bag.

Remove the union from the inlet of the fuel pump actuator.

Discard the o-rings.

