

Trainings ▾

Preparatory Steps

WARNING

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

WARNING

Some solvents are flammable and toxic. Read the manufacturer's instructions before using.

WARNING


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.
- Thoroughly clean debris from all fittings and components before removal. Make sure that debris, water, steam, or cleaning solution do **not** get inside the fuel system.
- Use compressed air to dry the components.
- Disconnect fuel leak detector from original equipment manufacturer (OEM) wiring harness. See OEM service information for details.


Exploded View

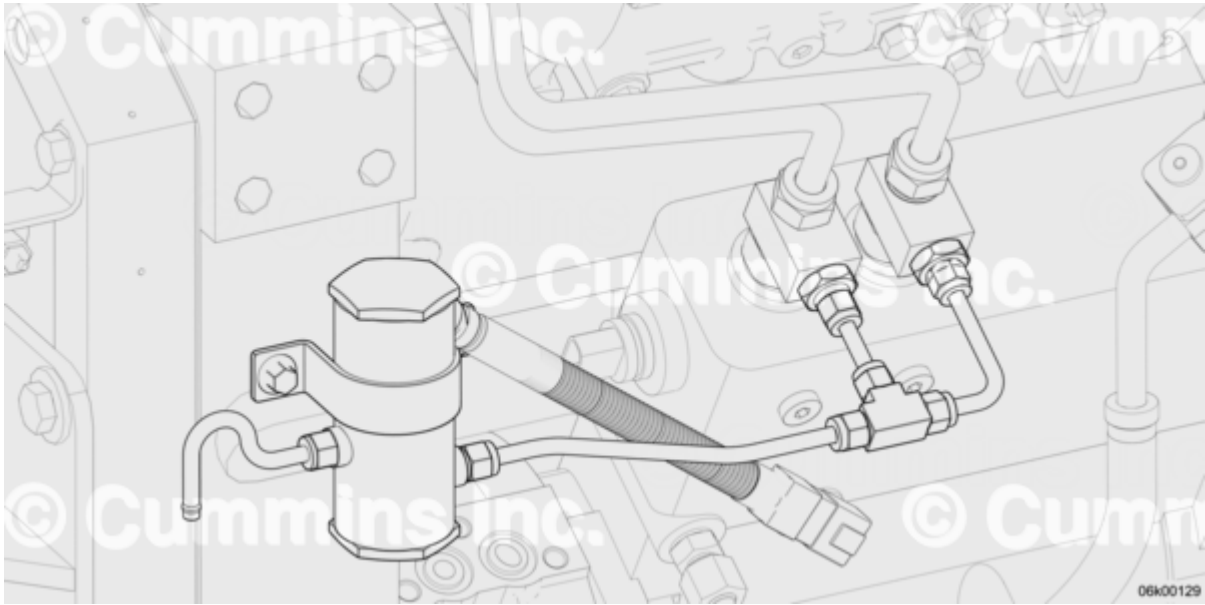


Fuel Leak Detection System

Remove

Remove fuel bypass tube from T-piece connection and fuel leak detector.

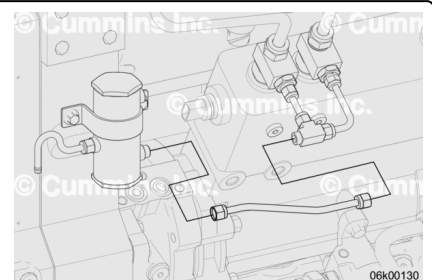


Remove both fuel bypass tubes from fuel connection blocks.

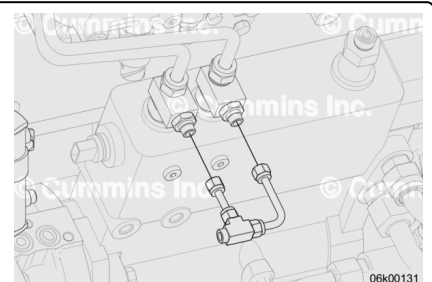


Remove two unions from fuel tubing.

Discard O-rings from union.

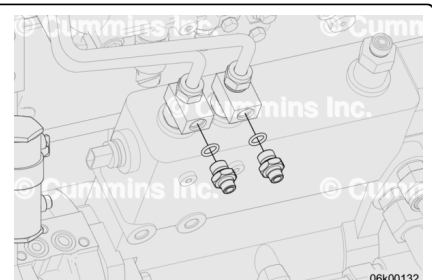


Remove two capscrews supporting fuel leak detector.

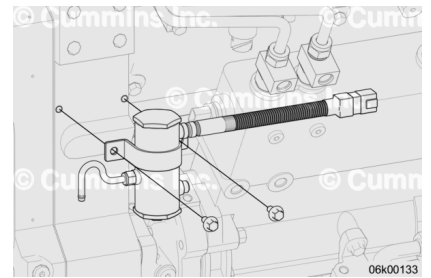

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

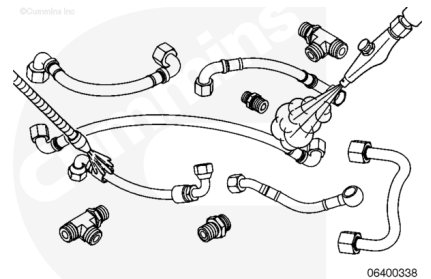

⚠ WARNING ⚠

Some solvents are flammable and toxic. Read the manufacturer's instructions before using.

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use solvent to clean the fuel lines, tee fitting and unions.

Dry with compressed air.

Inspect the oil supply lines for restrictions that can prevent oil from flowing freely. Replace the oil supply lines if kinks, leakage, or other damage is found.

Inspect the tee unions for damage. Replace if cracked, otherwise damaged, or if stripped threads are found.

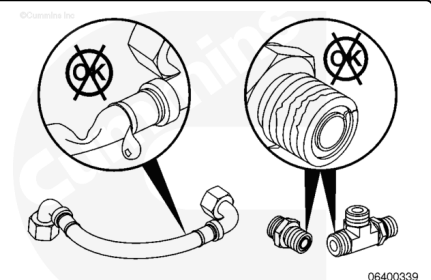


Install

Install Fuel leak detector and bracket.


Install two capscrews.

Torque Value: 22 n•m [194.72 in-lb]

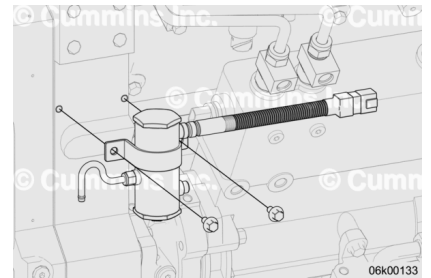

Install unions and new o-rings.

Torque Value: 22 n•m [194.72 in-lb]

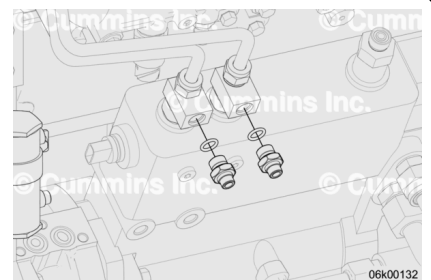

Install straight fuel bypass tube into the left hand union just fitted.


Torque Value: 20 n•m [177.01 in-lb]

Fit 90 degree elbow fuel bypass tube into the right hand union.

Torque Value: 20 n•m [177.01 in-lb]


Secure T-piece into both of these fuel bypass tubes.

Torque Value: 20 n•m [177.01 in-lb]

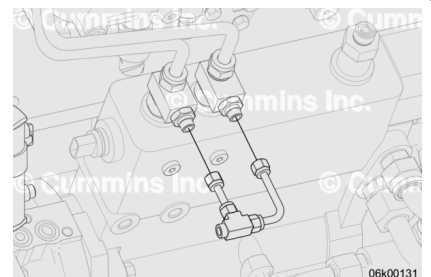

Install fuel bypass tube from the open end of the T-piece to the connection on the leak detector.

Torque Value: 20 n•m [177.01 in-lb]

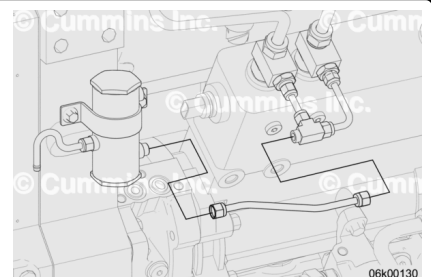

Finishing Steps

WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. See equipment manufacturer service information.
- Operate the engine and check for leaks. If leaks are found, repair and test again.
- Connect fuel leak detector from original equipment manufacturer (OEM) wiring harness. See OEM service information for details.