

Trainings ▾

Install


Standard Tube

Note : The location of the hand hole cover incorporating the dipstick tube and oil filler tube can vary depending on the application of the engine.

Install the dipstick and dipstick tube (2), or the dipstick tube and oil filler tube assembly (3) with the two mounting capscrews (1).

Tighten the two capscrews (1).

Torque Value: 45 n•m [33 ft-lb]

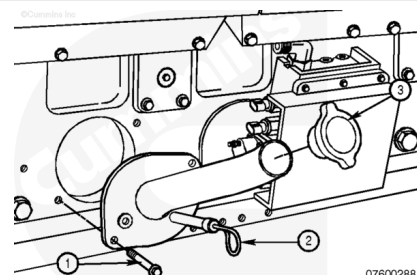

Extended Tube


Install the dipstick hand hole cover (1) and two capscrews (2).

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

Slide the sleeve (3) over the filler tube and tighten the clamps.


Torque Value: 6 n•m [53 in-lb]

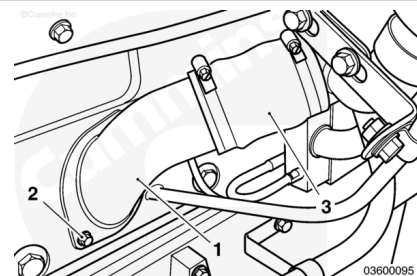

Install the p-clip (1) and capscrew supporting the dipstick tube.

Tighten the capscrew.


Torque Value: 45 n•m [33 ft-lb]

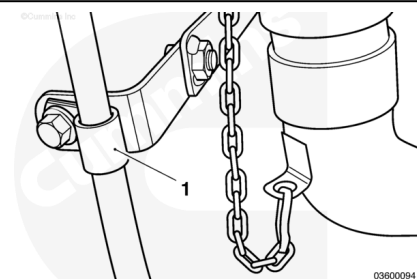

Install the upper dipstick support bracket (1) and two capscrews.

Tighten the capscrews.


Torque Value: 45 n•m [33 ft-lb]

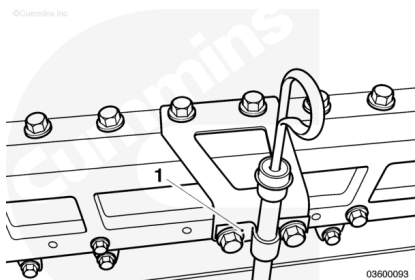

with Electronically Actuated Injector


Install the metal dipstick tube and new gasket to the engine.
Tighten the capscrews.

Torque Value: 45 n•m [35 ft-lb]

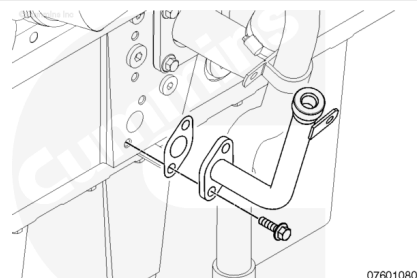


Install the dipstick tube p-clip.

Torque Value: 45 n•m [35 ft-lb]

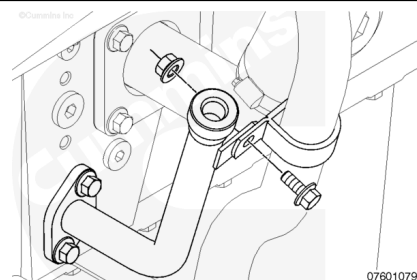


Install a new o-ring on the plastic dipstick tube and install it onto the metal dipstick tube.

Torque Value: 27 n•m [20 ft-lb]

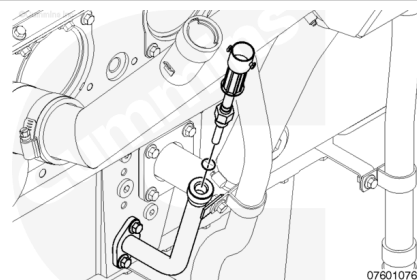

If the engine is equipped with a long dipstick tube, secure the dipstick tube to the upper bracket with clamps, plate and capscrews.

Torque Value: 7 n•m [80 in-lb]

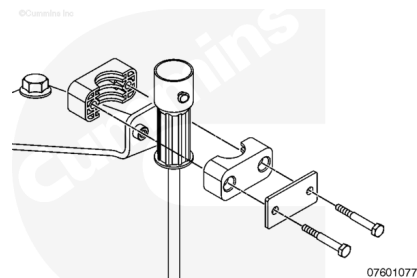

Install the dipstick by inserting, pushing down on the handle and turning it **clockwise**.

Operate the engine and check for leaks.

