


Trainings ▾

Install


Clean the oil filter head sealing surface with a lint free cloth.

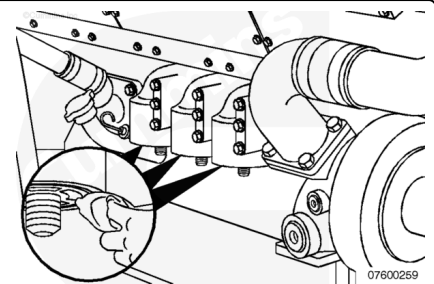

The QSK45 engine has three combination oil filters and the QSK60 engine has four combination oil filters.


Use engine oil to lubricate the oil filters' rubber seals.

Fill the oil filters with clean engine oil.

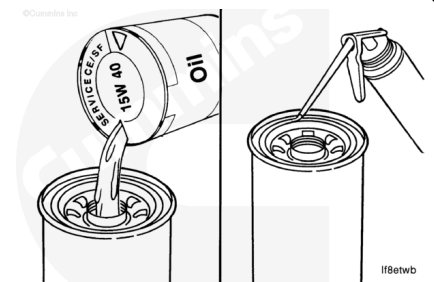

⚠ CAUTION ⚠

Mechanical overtightening can distort the threads or damage the filter element seal. If the threads appear damaged, replace the oil filter head adapter.

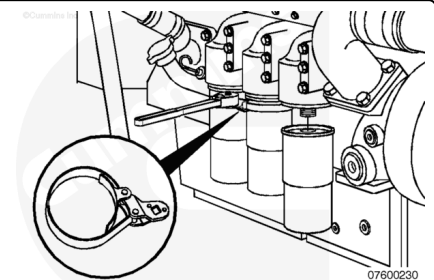

⚠ CAUTION ⚠


Locate the oil filter wrench, Part Number 3400158, near the top of the oil filter canister. This will reduce the possibility of damaging the oil filter.

Install the oil filter. Turn it until the seal contacts the filter head sealing surface.

Turn the oil filter an additional 3/4 to 1 turn.

Install and tighten the drain plug.

Torque Value: 47 n•m [35 ft-lb]

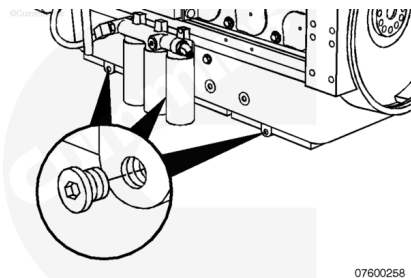


07500258

Some QSK60 Power Generation engines have an oil by-pass line from the PRELUBTM to the fuel pump accessory drive with a small oil filter installed.

Use engine oil to lubricate the oil filter's rubber seal.

Fill the oil filter with clean engine oil.

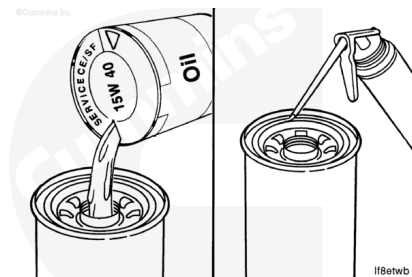

⚠ CAUTION ⚠


Mechanical overtightening can distort the threads or damage the filter element seal. If the threads appear damaged, replace the oil filter head adapter.

⚠ CAUTION ⚠

Locate the oil filter wrench, Part Number 3400158, near the top of the oil filter canister. This will reduce the possibility of damaging the oil filter.

Install the oil filter, turning it until the seal contacts the filter head's sealing surface.

Turn the oil filter an additional 3/4 to 1 full turn.

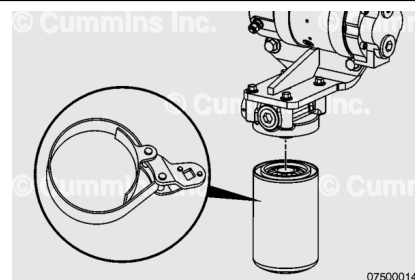

07500014