

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.




⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

- Drain the lubricating oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/56/56-007-037-tr.html>).
- Remove the lubricating oil filters. Refer to Procedure 007-013 (</qs3/pubsys2/xml/en/procedures/56/56-007-013-tr.html>).


Remove

Remove the capscrews (1), cover plates (2), and gaskets (3) from the oil pan adapter (4).

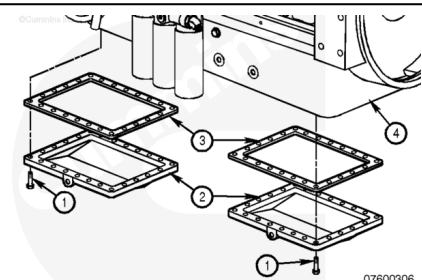


Clean and Inspect for Reuse

Inspect the gaskets (3) for reuse.

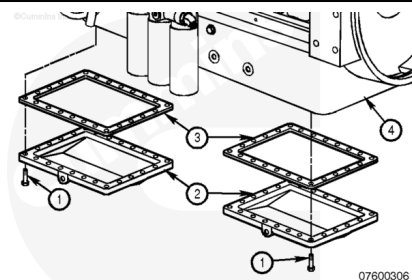

⚠ WARNING ⚠

When using a steam cleaner, wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

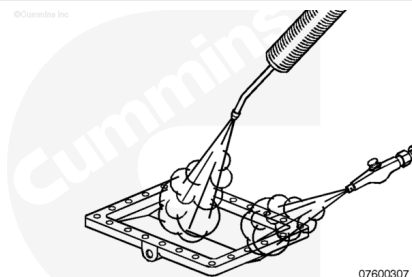

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Clean all gasket surfaces on cover plates.

Steam-clean the cover plates and dry with compressed air.

Use solvent to clean the drain plug magnets and dry with compressed air.

Inspect all areas of the adapter cover for cracks or other damage. If any of the areas are cracked or damaged, the cover plate **must** be replaced.

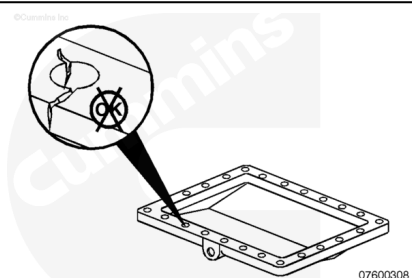


Install

⚠ CAUTION ⚠

Do not use gasket cement. Gasket cement will prevent the gasket from sealing properly.

Position the cover plates (2) and gaskets (3) on the oil pan adapter (4) with capscrews (1).

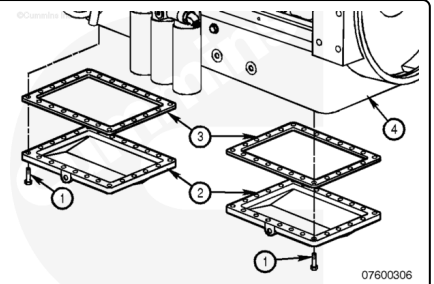


Tighten the capscrews in the sequence as shown.

Torque Value: 45 n•m [33 ft-lb]

Install and tighten the drain plug(s).

Torque Value: 47 n•m [35 ft-lb]

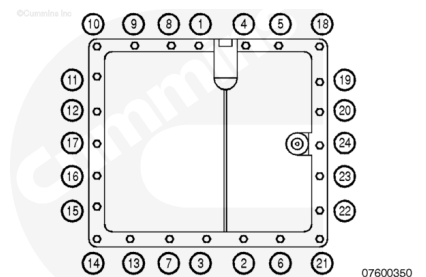

Finishing Steps

- Install the new lubricating oil filters. Refer to Procedure 007-013 (</qs3/pubsys2/xml/en/procedures/56/56-007-013-tr.html>).
- Fill the engine with clean lubricating oil. Refer to Procedure 007-037 (</qs3/pubsys2/xml/en/procedures/56/56-007-037-tr.html>).
- Operate the engine at idle speed and inspect for oil leaks.

